



DESS 7 User's Guide

© 2019 Essex Energy Corporation



DESS 7 User's Guide

Distribution Engineering Simulation Software

by Essex Energy Corporation

DESS is a complete tool for modeling medium voltage electrical distribution systems.

This guide contains a description of the concepts used in the software along with detailed reference information for using the software.

DESS 7 User's Guide

© 2019 Essex Energy Corporation

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Table of Contents

Foreword	0
Part I Introduction	9
1 What is DESS?	9
2 Why Use DESS?	10
3 The Big Picture	10
4 Registering & Updating DESS7	13
5 Getting Started	14
6 What's New in DESS 7	17
7 About Essex Energy	18
Part II Quick Reference	20
1 Concepts and Definitions	20
2 Window Components	23
3 User's Guide	26
Systems	26
System Basics	26
Where to Start HV Modeling	27
Where to Stop LV Modeling	27
System Data Storage	28
Nodes and Lines	28
Nodes	28
Lines	29
Connectivity	30
Appearance	32
Layers	35
Electrical Layers	35
Meter Layer	36
Background Layers	36
Active Layer	37
Layer Visibility	38
Elements	39
Capacitor Element	40
Distribution Transformer Element	41
Load Element	41
Meter	42
Motor Generator Element	42
Power Transformer Element	43
Protection Element	43
Reactor Element	44
Regulator Element	44
Source Element	44
Converting Source Impedances	45
Switch Element	47
Reference Data	47

Conductor Reference Data.....	48
Transformer Reference Data.....	48
Week Type Reference Data.....	48
Season Type Reference Data.....	49
Load Component Reference Data.....	49
Load Category Reference Data.....	49
Protection Reference Data.....	50
Load Modeling	50
Analysis	51
Annual Load Flow	52
Arc Flash	52
Capacitor Optimization.....	52
Load Flow.....	53
Load Loss.....	54
Motor Starting.....	54
Open Point Optimization.....	54
Phase Balancing.....	55
Protection Coordination.....	56
SCADA Load Flow	56
Specific Short Circuit.....	57
General Short Circuit.....	57
Reports	57
Results	58

Part III How to 60

1 Zooming and Panning.....	60
2 Selecting.....	61
3 Tracing.....	67
4 Creating a node.....	70
5 Creating a line.....	71
6 Deleting Nodes and Lines.....	72
7 Moving a node.....	72
8 Editing Node and Line Properties.....	73
9 Creating and Modifying Elements.....	75
10 Creating and Deleting Layers.....	77
11 Using Layer Properties.....	78
12 Moving Items Between Layers.....	82
13 Connecting Layers.....	83
14 Undo and Redo.....	85
15 Using Tooltips, Labels and the Legend.....	85
16 Editing Themes and Styles.....	89
17 Moving the Docking Window.....	92
18 Changing Switches.....	95
19 Finding Nodes.....	95
20 Creating Reference Data.....	96
21 Modifying References.....	98

22	Checking Your System For Errors.....	101
23	Multiple System Views.....	104
24	Update Current System Model.....	106

Part IV Reference Guide 107

1	Globe.....	107
2	Ribbon.....	107
	File Tab	108
	Editing Tab	110
	Analysis Tab	114
3	Docking Windows.....	119
	Layer Docking Window	120
	Reference Data Docking Window	121
	Select Docking Window	122
4	Dialogs.....	123
	Element Data Dialogues	125
	Capacitor Element Dialogue.....	125
	Distribution Transformer Dialogue.....	127
	Load Element Dialogue.....	128
	Simple Load Dialogue.....	130
	Load Set Dialogue.....	131
	Meter Dialogue.....	132
	Motor Generator Dialogue.....	133
	Power Transformer Element Dialogue.....	135
	Protection Element Dialogue.....	140
	Relay Setting Dialogue.....	143
	Reactor Element Dialogue.....	145
	Regulator Element Dialogue.....	145
	Source Element Dialogue.....	147
	Switch Element Dialogue.....	149
	Reference Data Dialogues	150
	Create Reference Dialogue.....	150
	Conductor Data Dialogue.....	151
	Find Conductor Dialogue.....	154
	Transformer Reference Data Dialogue.....	155
	Find Transformer Dialog.....	157
	Protection Type Reference Data Dialogue.....	158
	Time Current Curve Points Dialogue.....	161
	Digitized Relay Element Data Dialogue.....	163
	Equation Based Relay Element Data Dialogue.....	164
	Week Type Reference Data Dialogue.....	166
	Season Type Reference Data Dialog.....	167
	Load Component Reference Data Dialogue.....	168
	Load Category Reference Data Dialogue.....	170
	Load Curve Data Dialogue.....	171
	Load Component Data Dialogue.....	173
	Characteristic Info Dialogue.....	174
	Editing Dialogues	177
	Change Phasing Dialogue.....	178
	Move Between Layers Dialogue.....	179
	Find Asset Dialogue.....	180

Set Feeder Names Dialogue.....	181
Affine Transform Map Dialogue.....	182
Affine Translate System Dialogue.....	184
Custom Trace Dialogue.....	186
Custom Query Dialogue.....	187
Edit Property Dialogue.....	189
Query Property Dialogue.....	191
Show Loops Dialogue.....	193
Import GIS Dialogue.....	194
Switching Order Dialogue.....	195
Switching Order From List Dialogue.....	196
Analysis Dialogs	198
Arc Flash Dialogue.....	199
Get Protection Data Dialogue.....	201
Capacitor Optimization Dialogue.....	202
Load Flow Dialogue.....	203
Load Loss Dialogue.....	204
General Short Circuit Dialogue.....	206
Motor Starting Dialogue.....	207
Open Point Optimization Dialogue.....	209
Phase Balancing Dialogue.....	212
Protection Coordination Dialogue.....	214
SCADA Load Flow Dialogue.....	216
Specific Short Circuit Dialogue.....	216
Meter Data Dialogue.....	219
Node Style Dialogue.....	219
Line Style Dialogue.....	221
Label Style Dialogue.....	223
Import Load Dialogue.....	225
Create Loads Dialogue.....	228
Load Scaling Dialogue.....	230
Edit SCADA Measurement.....	235
Change References Dialogue.....	238
Create References Dialogue.....	240
Import References Dialogue.....	243
Organize References Dialogue.....	245
Simplify Data Dialogue.....	247
Set Line Properties Dialogue.....	249
Copy Source and Power Transformer Info Dialogue.....	250
Copy Conductor Data from Similar System Info Dialogue.....	250
Create Node Data Dialogue.....	251
Save Result Dialogue.....	252
Other Dialogues	254
Options Dialogue.....	254
System Properties Dialogue.....	255
Set View Dialogue.....	258
Save Map Dialogue.....	258
Electrical Layer Properties Dialogue.....	260
Background Layer Properties Dialogue.....	261
Open Street Map Background Layer.....	262
Node Visibility Dialogue.....	264
Node Dialogue.....	265
Line Dialogue.....	266

Index**269**

1 Introduction



Welcome to the DESS Help System

This help system is designed to help you understand the basics of using DESS.

This manual contains 6 different sections, each of which contains a particular type of information:

- The Introduction - This section. This section contains information about how to get started in DESS, and an overview of the program. We strongly suggest that if you have not used DESS before you read through the two articles in this section first, ([The Big Picture](#) and [Getting Started](#)).
- [DESS and Essex Energy](#) - This contains information on DESS, its new features as well as registration directions and contact information for Essex Energy.
- [Quick Reference](#) - This section describes important terms and definitions in DESS and describes the DESS interface.
- [User's Guide](#) - This describes the basic concepts behind DESS so you have a better understanding of how to use the software.
- [How To](#) - This section contains a series of tutorials designed to assist in completing various common tasks.
- [Reference Guide](#) - The reference guide describes each menu and toolbar command and provides detailed help for each dialogue you will find in DESS.

**Hint:**

Whenever you see the friendly electron in an orange box, like this one, it is either a useful comment or a time saving hint. It is usually a good idea to read these notices.

1.1 What is DESS?

What is DESS?

DESS (Distribution Engineering Simulation Software) is an integrated software package for the design, analysis and management of electrical distribution systems. A full complement of analysis modules provide the capability to analyze load flows, perform switching optimization, load balancing, transformer loading and size optimization, and short circuit analyses.

DESS allows you to create a detailed computer model of your distribution system which can be used for design and analysis. Given the configuration and loading for your system, you can use DESS to optimize your system, determine structural weaknesses, and test the effects of new configurations and system additions.

DESS is designed to allow open access to data and easy integration with your existing systems. If you have relevant data in a database, CAD system, GIS system or SCADA system, it can be integrated with DESS to provide automatic data entry/updating or real time information for analyses.

DESS is extendable. The software exposes an open architecture that allows you to add or modify functionality to meet your own specific needs. With limited additional development you can add functionality as varied as automatic data updating, trouble-call and outage reporting, and linked display of CAD drawings and customer info.

1.2 Why Use DESS?

DESS can be used in a wide variety of engineering tasks ranging from planning to operations. It can be used to solve problems for individual projects or can be integrated into the planning and operating process. There are a number of primary goals for using DESS:

Understand Your System Better

By modeling your entire distribution system, you can gain a better understanding of the conditions throughout the system and how your electrical system will respond to unexpected conditions.

Normally you have periodic information (often monthly) about the loads on a system, and regular information about SCADA-enabled points, typically at substations. DESS can help fill in the rest of the picture. The load flow analysis provides current flows at every branch, and voltages at every point in the system.

You can also determine the state of protection coordination on your system; a job which is often left until after bad coordination has triggered unexpected outages.

You can use DESS to simulate unusual conditions. Use the load flow to model what happens under very high system loads. Simulate the loss of a feeder or of an entire station. Try different restoration options and check for voltage problems or overloaded lines.

Reduce Losses

Increasingly, it's becoming important to consider not only the most reliable way to supply a system, but also the most economic way. DESS allows you to calculate losses for different system configurations. You can also use the Yearly Load Flow to calculate loss energy throughout a year.

The basic load flow allows you to compare system losses with different loading conditions, different conductors, etc. DESS also includes a set of automatic tools to help you reduce losses. These include Configuration Optimization, Capacitor Optimization, and Phase Balancing.

Plan for the Future

Use DESS to model future growth on your system. You can use the editing tools in DESS to add in new loads, and use the Load Scaling tools to model changes in existing loads by feeder, by area or by category of load. Once the projected changes have been made, use the load flow analysis to determine the effect on feeder loading, voltages and losses.

You can also use DESS to plan major changes to your system. The addition of a new substation or a new feeder is a very expensive project. DESS can give you detailed system information and system losses for different possible options.

1.3 The Big Picture

DESS

DESS (Distribution Engineering Simulation Software) is an integrated software package for the design, analysis and management of electrical distribution systems.

Mathematical Model

Basically put, DESS is a mathematical representation of an electrical system. Each symbol and line represents a wire or electrical item in a system. It is a computer managed model designed to be user-friendly, yet as powerful as possible. It has all of the features required to accurately reflect any distribution system which you would like to model.

DESS represents a system through points, or symbols, connected by lines. These points are called [nodes](#). A node is a point of importance, usually an electrical item such as a switch, load or another item, while a [line](#) is a single-line representation of a set of electrical conductors. A set of this data is called a [system](#). You can have as many of systems as you want, although the number of nodes permitted in a single system is typically limited by the particular [license](#) for your copy of DESS.

A Simple Concept

Despite its complicated appearance, DESS is remarkably simple to use. You can make your system as complicated or simple as you want, DESS simply provides the means to do so.

How Does DESS Represent A System?

Nodes Lines and Layers

Nodes are any points of importance in DESS such as a junction, a line end, or a piece of electrical equipment. Electrical items such as switches, loads or transformers are called [Elements](#) and are listed below, under Elements. Each node and line is contained on a particular [electrical layer](#). All lines and nodes on that layer have the same nominal voltage specified by that particular electrical layer.

A layer can be visualized as a flat two dimensional plane with a series of nodes on it. These points are connected by lines. Different layers can be connected together electrically by [power transformers](#). In this way layers allow a system to represent the different voltages in a system, and at the same time group all of the nodes and lines particular to one voltage. This allows DESS to implement many useful functions and features regarding layers as groups of nodes and lines.

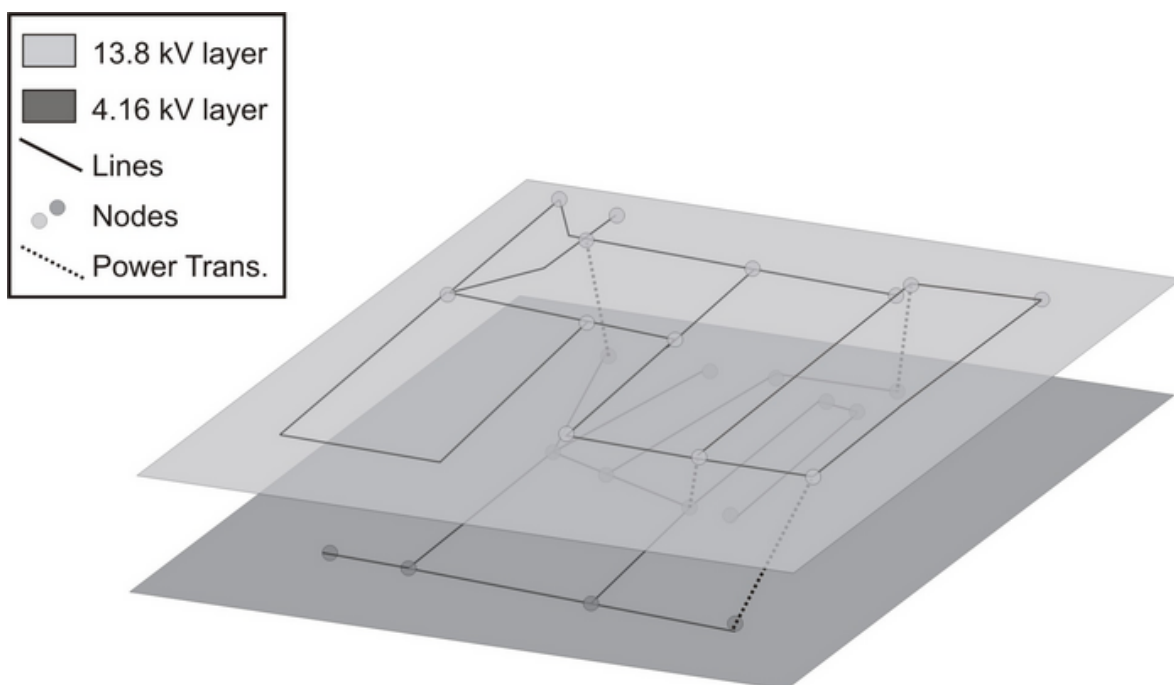


Figure 1: Systems in DESS can be virtually represented by a series of connected two dimensional planes. These flat planes are connected by power transformers. Power transformers are represented in this picture by a dotted line connecting two different nodes. Each of these nodes exists on a different layer.

Connecting Nodes and Lines

DESS has several built in protections against making [errors in your system](#). Many of these concern the placement of nodes and lines. Nodes can be placed anywhere, but lines can only connect two different nodes. Lines can have multiple vertices, and 'bend' at points but they can still only begin or end on a node. This prevents your system from having any lines without an ending node, called hanging lines.

Elements

In DESS you can add elements to nodes. These represent important items in an electrical system. It is through a use of these, combined with a knowledge of what nodes and lines are, and layers, that you can create a model of an electrical system.

There are a few different Elements in DESS. A list is provided here, while a much more detailed description of each element is provided in the User's Guide, under the [Elements category](#).

The Elements available in DESS are:

[Capacitor](#)

- [Distribution Transformer](#)
- [Load](#)
- [Meter](#)
- [Motor Generator](#)
- [Power Transformer](#)
- [Protection](#)

- [Reactor](#)
- [Regulator](#)
- [Source](#)
- [Switch](#)

These elements provide a wide range of options for system modeling, as each element added to a system has its own parameters, with settings and properties appropriate to that particular element.


Summary

DESS is a computer created mathematical model of a system. This system is composed of nodes, which can have elements added to them, all connected by lines. These nodes and lines are contained on layers which are based on voltage. You can connect these layers together using power transformers.

1.4 Registering & Updating DESS7

To use DESS you must have a valid license. The license determines how long you can use DESS for, which analysis modules you can use, and the maximum size of system model you can edit.

When you first start DESS on a computer where DESS has never been installed you will be presented with the licensing dialogue.

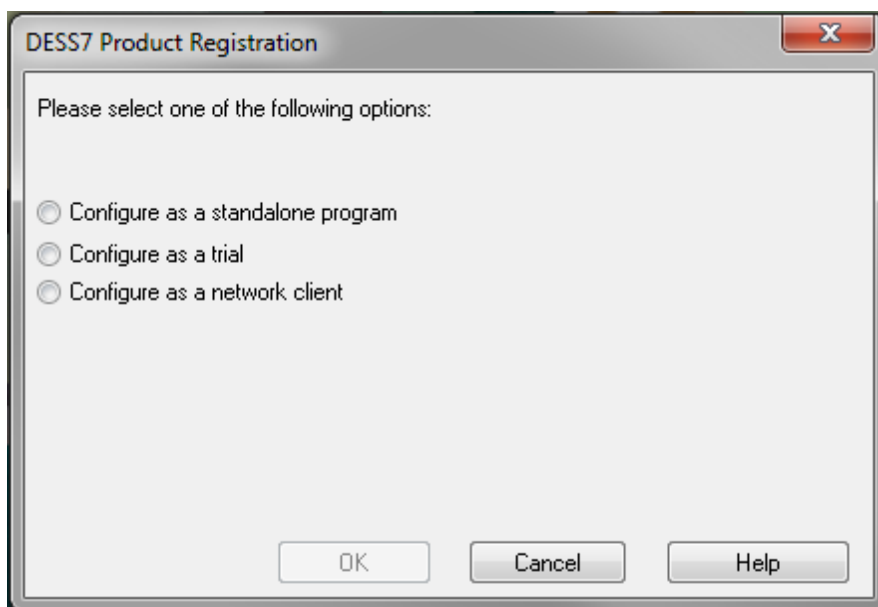

Upon first launching DESS you will be asked what configuration the program should be.

Standalone program will ask you for your single-use **product key**, which is generated by [Essex Energy](#). This will license DESS with the purchased system limit and analysis modules.

A trial license will give you limited access to the program for a trial period. Please contact [Essex Energy](#) to obtain a **product key** before the trial period runs out to continue using DESS.

Network clients will have a CopyMinder Network Server set up, which is monitored by the network

administrator. Please contact [Essex Energy](#) if you have any issues.

UPDATES

Check for the latest DESS updates at: <http://www.essexenergy.ca/dess/support/downloads.cfm>



Hint:

It's easiest to copy and paste site codes and site keys between the dialogue and email. This helps to avoid errors copying the codes. If you need to manually copy the codes remember that the only characters that are used are the numbers 0-9 and letters A-F (there is no letter 'o').

1.5 Getting Started

Loading the Sample System

Now that you know how DESS works, this section will provide directions on how to get a [system](#) of your own up and running. A standard installation of DESS comes with a sample data system. You can open this system using the **File > Open System** command. This system is called 'Sample System.dss.xml', and is located in a Sample Data folder in your DESS install directory. Your DESS 7 install directory is by default located under C:\Program Files\DESS 7, however it may be located elsewhere depending on what you selected when installing DESS 7.

You can use this sample system to learn how to use DESS. It is suggested however, that you make copies of the sample system if you intend to save any changes that you might make.

Importing A Pre-Existing System From Another Format


If you already have data for your electrical system in another electronic format, it is usually possible (and certainly desirable) to import this data directly into DESS rather than manually creating it using the editing tools in DESS. Tools for converting data from other GIS, CAD and mapping systems are available from [Essex Energy](#), and some GIS vendors and third parties. There is often an additional cost for these tools. Some examples of other systems which have been used to populate DESS models includes GIS systems from ESRI, Intergraph and CableCAD and data from AutoCAD and Bentley CAD systems. Please contact [Essex Energy](#) if you have data you would like to transfer to DESS. Our contact information can be found under [About Essex Energy](#) in the help system.

Creating A Completely New System

Creating a new system is quite easy. Actually populating all of the [nodes](#) and [lines](#) in a system by manual editing is typically quite painstaking and awkward, especially for large systems. Nevertheless, this section will walk you through the steps required to create a system from scratch in order to give you a better understanding of the data requirements and dependencies in DESS.

To create a new system simply select **File > New System**. Once you have done this a dialogue will appear called [System Properties](#). This dialogue (shown below) allows you to set the labels for different phases, and the units of measurement to use for x and y coordinates on your system. These coordinates do not represent the preferred unit for entering line lengths, but instead represent the

actual units used for map coordinates. The choice of coordinate is usually dictated by the units used in any street or background maps being used. Note that you can change these at any time by going to Edit > System Properties which opens the same dialogue, and allows you to edit those properties.

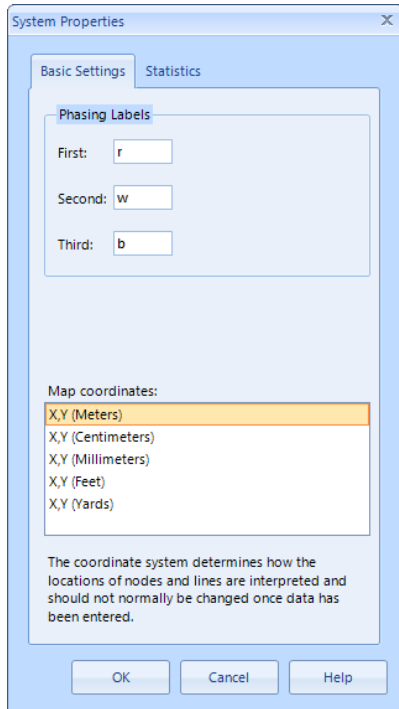


The System Properties Dialog

Electrical Layers

Once you have chosen these values, you can proceed to actually start modeling a system. In order to do this you will first need to set up some [layers](#). You cannot create nodes or lines unless they have an [electrical layer](#) to be added to, so you must create at least one. To do this click on the lightning bolt icon on the top of the docking window, in the layers tab. This will bring up a window where you can set the properties of the electrical layer you have just created.

You must set the type of layer (three or four wire) and the nominal voltage. The nominal voltage is important because all nodes created while that layer is the active layer will be created with that voltage.

Before you can do anything in your new system you must make sure that a layer is your active layer. The very first time that you create a layer in DESS, it does not select an [active layer](#). You must do this manually. To do this either use drop down list box in the far right of the toolbar, or right click on a layer and select 'Set as Active Layer'. Any new nodes and lines which are created will be created on that layer, with that voltage.

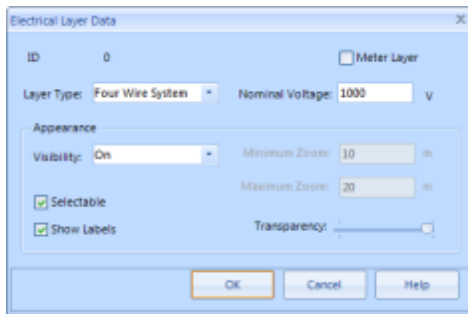


Electrical Layer Properties

To learn more about layers and their properties you may want to reference the Layers section in [Users Guide](#) > [Layers](#), and [How To](#) > [Layer Properties](#) in this manual.

Background Layers

Once you have created an electrical layer, you may wish to add a [background layer](#). Background layers are 'dumb' maps, which merely provide a reference point for creating a system. Background layers are not essential, or necessary, but without a background layer you have no reference point with which to work.

Typical background layers are used to display street maps or land parcels. In some cases a background map may be used to display a CAD picture of an electrical network so it can be manually over-traced to create a system in DESS.

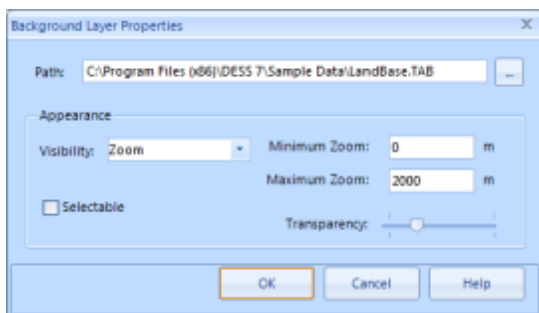

Background Layer Properties Dialog

To add a background layer click the 'world' icon in the docking window. This will create a new background layer. A dialogue will appear where you can browse for a background file. DESS supports the following types of map files:

- TAB - MapInfo TAB format files
- DXF - AutoCAD text interchange format
- SHP - ESRI shape file

Reference Data

Reference Data is required for many basic items in DESS such as lines and loads. You can create your own reference data or import it from another system. This is covered in more detail in [How To > Tools > Modifying References](#), and in [Users Guide > Reference Data](#). Once you have created or imported some reference data, you can start to model your system.

Finished!

You are finished preparing your system! You can now start to actually place [nodes](#), [lines](#) and [elements](#) onto your new system. The tutorials in the [How to](#) section of this help system will help you with any further concerns about basic usage of DESS.

1.6 What's New in DESS 7

For users of previous versions of DESS, version 7 introduces a number of changes which will make your life easier and help make you more productive. The most important changes are described below:

Interface Changes

DESS 7 has a new and improved user interface and a whole new look. Among the most prevalent changes, DESS 7 uses a file ribbon instead of the traditional file drop down menus present in DESS 6. The ribbon is split into three different tabs, File, Editing and Analysis. There is a globe button above the ribbon for updating options, checking licensing and about the product, and exiting.

A new universal search tool has been created. This allows users to search all nodes or a category of elements using almost any filter criteria.

Data Changes

After running an analysis on the system, the user may choose to save the results of the analysis to a file or copy the information to the clipboard. The file types supported are XML, CSV, TXT, and HTML. The user may choose to save the results for the whole system or the currently selected items.

DESS 7 allows users to model low voltage layers. With the addition of a Meter element, users can now add meter layers and connect meters to distribution transformers to model actual loading conditions.

Reports

[Reports](#) in DESS 7 are displayed in a pop up window instead of the default browser as in DESS 6. There are more graphical capabilities with these reports, and all of the information can be exported to a .CSV file.

Single Line Diagrams

DESS 7 has the ability to produce single line diagrams from the system model. Users can choose which items to include in the single line diagram, and then DESS 7 uses the system model to produce a diagram. The single line can be manipulated by the user or left in its original configuration without concern for items being pulled out of order as DESS 7 ensures that things are connected properly.

1.7 About Essex Energy



Essex Energy is a dynamic company focused on spearheading a vast array of energy related initiatives. With the passing of the Green Energy Act, Essex Energy is primed to move these initiatives forward by offering a full suite of Energy Related products and services including renewable energy systems, distributed generation opportunities and a variety of software and consulting solutions.

Generation Connection Consulting

Essex Energy has more than 50 MW of generation connection experience across a broad range of technological sources.

Generation Economic Analysis

Essex Energy has the expertise and databases in place to provide detailed economic analysis of any type of generator in the Ontario market; both wholesale and retail.

Energy Service Consulting

Essex Energy has a broad, innovative and knowledgeable staff that is able to bring unique energy related solutions to all participants of the energy market whether it be standby, peak-saving generation, demand response opportunities and more.

DESS

DESS is a suite of software analysis tools to help you design and run your electrical distribution system more effectively.

Conservation

Conservation is a key factor in securing our future for a reliable, sustainable, and affordable energy supply. At Essex Energy we are proud to help deliver several programs that are geared towards helping our customers to make a difference from their homes, offices, and schools.

Essex Energy Corporation
2199 Blackacre, Suite 2

Oldcastle, Ontario
N0R 1L0

Phone:

(519) 946-2000

Toll Free:

1-888-66-Essex

Fax:

(519) 776-9888

Email:

info@essexenergy.ca

2 Quick Reference

This chapter provides a quick reference to using DESS, including key definitions and parts of the DESS application.

[Concepts and Definitions](#) - A table of important terms and definitions used by DESS.

[Windows Components](#) - Illustrates the various components of the DESS interface.

2.1 Concepts and Definitions

The following terms have a specific meaning in DESS. Understanding these terms will make it easier to use DESS and understand all of the information in this help system.

Term	Description
System	A system is the entity in DESS that contains a set of data for a distribution system. Every node, line, and element in DESS is a part of a system. Each system is stored in a separate file (usually with a .dss.xml extension).
Layers	Every system contains one or more layers. There are two types of layers in DESS: background layers and electrical layers
Background Layers	Background layers are 'dumb' maps that may contain land parcels, roads, poles, customer information, annotations or any other information which might be useful for helping to locate or clarify your electrical system. They are displayed behind the electrical layers.
Electrical Layers	Electrical layers contain data for all equipment at a particular voltage level (e.g. 12.47kV). An electrical data contain nodes, lines and elements representing facilities at that voltage.
Node	A node is a point of interest on an electrical network which belongs to a particular electrical layer. Nodes must be defined: <ul style="list-style-type: none"> ▪ At the end of a line ▪ At line junctions ▪ When a conductor changes (e.g. underground - overhead) ▪ Wherever elements (e.g. transformers, loads, and switches) are defined Nodes and lines (in conjunction with switches) define the connectivity of a system. All electrical equipment and loads on the system are modeled as elements attached to nodes.
Line	Lines are representations of the physical conductors that make up a distribution network, i.e. feeders, branches and spurs. Lines: <ul style="list-style-type: none"> ▪ Begin and end at nodes ▪ Cannot have nodes attached to them except at end points ▪ Have a consistent conductor type and phasing ▪ Belong to a particular electrical layer


Term	Description
Load Modeling	Load modeling describes the data used to represent load changes under different conditions. The load modeling in DESS allows you to model changes over the course of a day, a week and a season. It also allows you to model sub-components of a load and model load changes with changing temperatures.
Element	<p>Elements represent the electrical equipment (switches, capacitors, etc) and loading (loads, motors) on a network. Elements are always attached to nodes. In some cases, more than one element can exist on a node. The following types of elements are defined in DESS.</p> <p>Source Source elements represent points of external supply to an electrical system. To be valid, a system must have at least one source. Typically a source is defined at each transmission substation or external feeder supplying the system.</p> <p>Capacitor This element represents a single capacitor or a bank of capacitors. You can define fixed, time-switched or automatically regulated capacitors.</p> <p>Distribution Transformer This type of transformer represents the typical pad-mount or pole mounted transformer found throughout a distribution system. It is similar to a power transformer but is not modeled in as much detail. Use this type of element when you are attaching a load, but do not want to model the secondary in detail.</p> <p>Load An element representing a load on the system. This is probably the most common type of element used throughout a distribution system model.</p> <p>Meter The meter is used to represent an actual customer. It can have all of a customer's information on it, and be used to track actual loading conditions on transformers.</p> <p>Motor/Generator This type of element is used to represent the following: <ul style="list-style-type: none"> ▪ a synchronous generator ▪ a synchronous motor ▪ an induction generator ▪ an induction motor </p> <p>Regulator A voltage regulator. Regulation is based on the voltage at the node and can be set to manual or automatic regulation.</p> <p>Switch This element represents anything that can be opened and closed to change the flow of electricity. This can include a wide range of devices such as switches, elbows,</p>

Term	Description
	jumpers and fuses.
	Power Transformer A transformer that transforms power between two different electrical layers. This element spans nodes (each on a different layer) and is used to provide electrical connectivity between higher and lower voltage layers. These are used at substations or when modeling the secondary supply to individual customers in detail. They can model either step-up or step-down transformers.
	Protection These elements represent any type of protective device that has a time-current characteristic, such as a fuse, relay or recloser. Many devices such as a breaker would be represented by a switch element and a protection element.
Region	The section of a system supplied from a single source is referred to as a region. A region will contain nodes and lines at one or more voltage levels. As you open and close switches between sources the boundaries of the neighboring regions will change.
Reference Data	Frequently used data, such as conductor types or load types, are stored as reference data items so that you do not have to re-enter all the properties each time you use this data. This data forms a library of standard types that you can use in your system. The following types of data are stored in reference data files:
	Protection Types This represents the base definitions for the time-current curves for protective devices such as relays, fuses, etc.
	Conductors A conductor reference item contains information about the electrical characteristics of a conductor such as impedance, capacitance, ampacity, etc. It also allows you to describe the material and usage.
	Transformers A transformer reference defines the impedances and losses for transformers used in distribution transformer elements.
	Week Types This defines parts of a week. Usually used to define reference items for weekday and weekend. This is used as part of the load modeling definitions. Load categories use week types to define the effective period for load curves, etc.
	Season Types This type of reference data item defines parts of a year, such as spring or summer. This is used to define the period for a load element and as part of the load modeling definitions used by load categories.
	Load Components

Term	Description
	Components are used to represent a sub-definition of a type of load, such as cooking, air conditioning, incandescent lighting, etc.
	Load Categories This type of reference data item represents a specific type of load (such as residential, commercial, etc.). Load categories are referenced by load elements.
Theme	A set of rules defining the appearance of nodes and/or lines in the system. There is a default theme defining the appearance of nodes and lines. Most results have one or more themes available to help display result values.

2.2 Window Components

The following diagram shows the DESS interface and its main components:

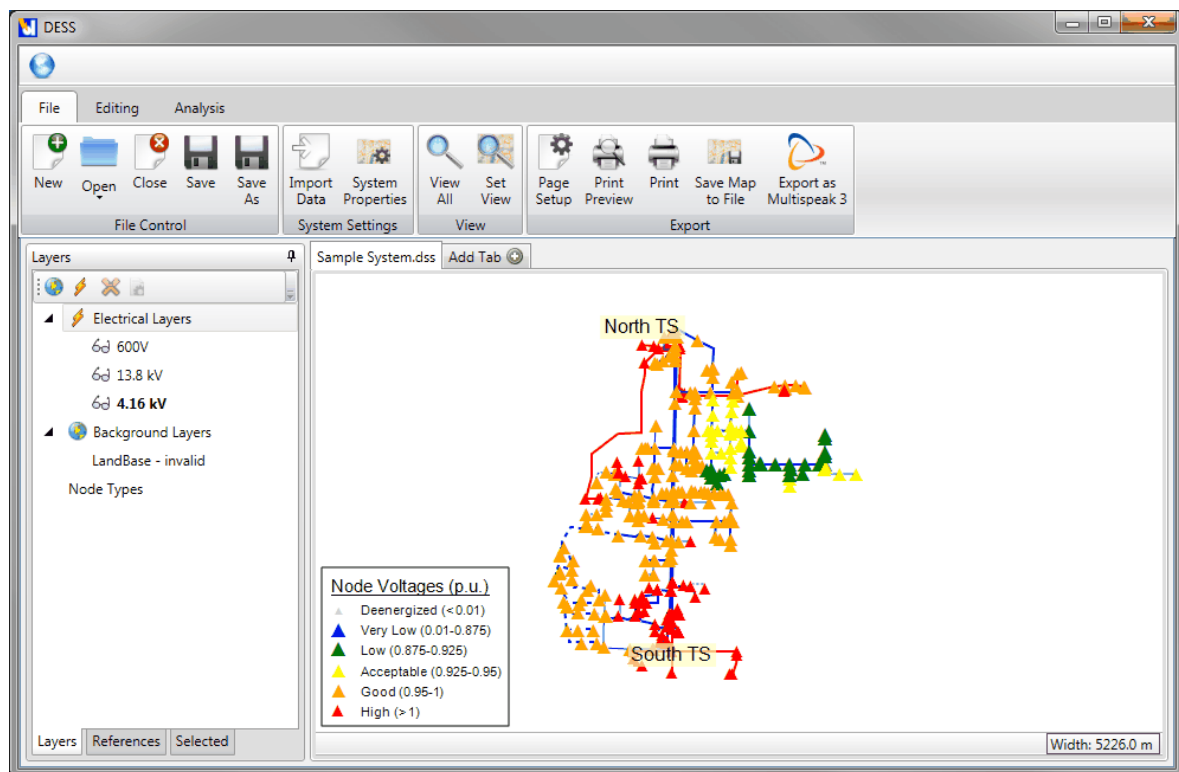


[Globe](#)

The globe contains information about the program and options to control the program. Each of these is described thoroughly in the [Reference Guide](#).




Ribbon

All the essential commands are on this bar and are described thoroughly in the [Reference Guide](#).

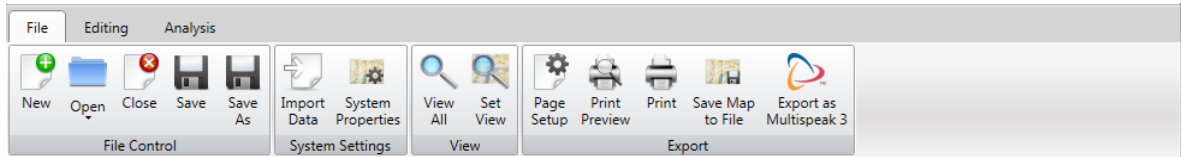


Map View

The map view pane is the focus of your work. It includes [background layers](#) containing streets, land base, etc., and [electrical layers](#) which contain all the [nodes](#), [lines](#) and [elements](#) that are in your system.

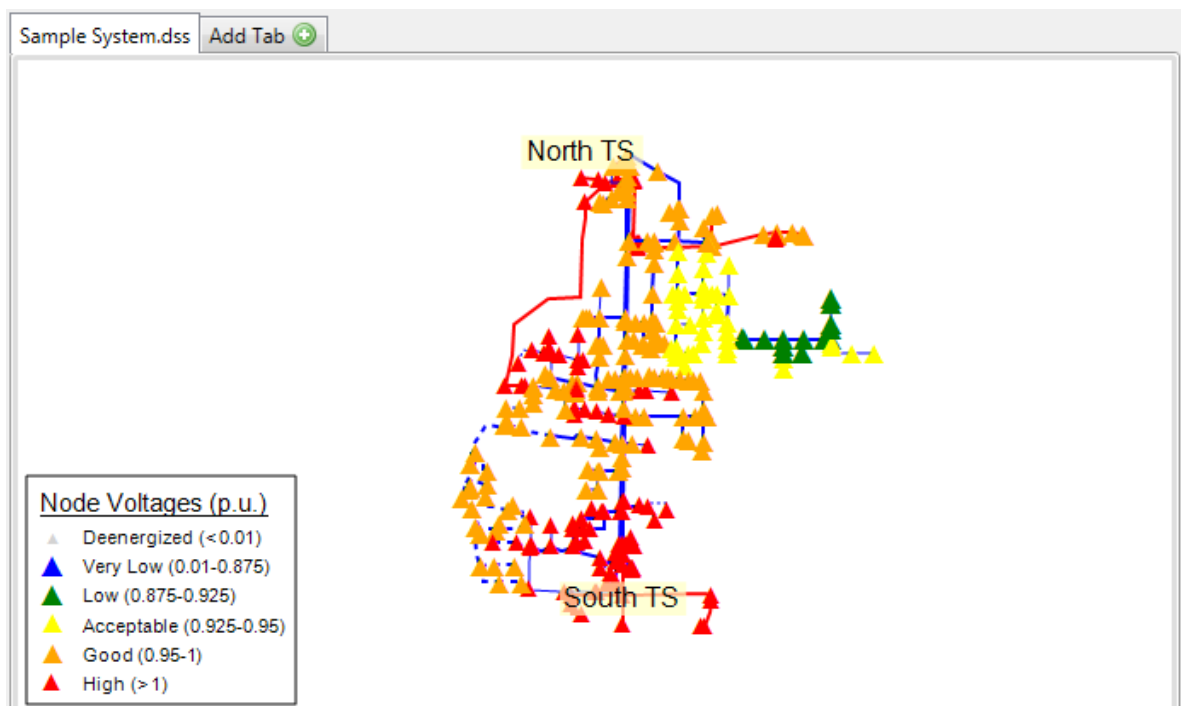

Docking Windows

The docking window allows the user to quickly access specific types of data. Standard dock windows include [Layers](#) (for managing/editing layers), [References](#) (for managing/editing [Reference Data](#) Items), and [Selected](#) (for showing a list of selected nodes and lines). The top right corner of the [docking window](#) contains an auto-hide button, enabling it to either stay open or to automatically retract to the side of the window unless the mouse stays over the window.

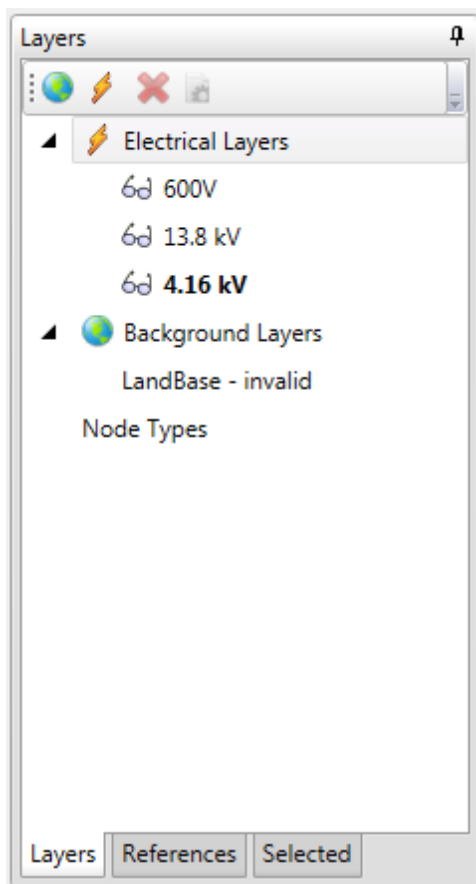

Legend

The legend only ever appears after you have applied a [theme](#) to your [results](#). It helps you to understand the results of an [Analysis](#). You can toggle the appearance of the legend in the [Themes Menu](#).

Node Voltages (p.u.)	
▲	Deenergized (<0.01)
▲	Very Low (0.01-0.875)
▲	Low (0.875-0.925)
▲	Acceptable (0.925-0.95)
▲	Good (0.95-1)
▲	High (>1)

Status Bar

The status bar displays a more detailed description of commands, position information for the mouse pointer on the map (in x and y coordinates, or latitude / longitude), the current zoom level (displayed as Width), and a progress bar during long operations.



2.3 User's Guide

The User's Guide describes how to use DESS, including entering data, running queries and using analyses and viewing and understanding the results. The User's Guide contains the following sections:

[Systems](#)

This section describes DESS system data and explains how to open and save data and how to view system properties.

[Electrical Layers](#) and [Background Layers](#)

Describes the difference between electrical and background layers. How to create and delete layers and set layer properties.

[Lines](#) and [Nodes](#)

This section explains node and line data and describes how to create and edit nodes and lines. It also describes how to control the default appearance of nodes and lines by setting style rules

[Elements](#)

This section describes different types of node elements defined in DESS, such as loads, transformers, switches, etc, and how to create, edit and delete elements.

[Reference Data](#)

This section explains what reference data is, the different types of reference data, and how to create, import, edit and delete reference data items.

[Load Modeling](#)

This describes how DESS represents customer loads and explains how you can use this to accurately represent how your loads respond under different times and conditions.

[Analysis](#)

This section explains the different types of analysis available in DESS and how to use them.

2.3.1 Systems

This Section contains all of the information pertaining to a system model in DESS, including:

- [System Basics](#)
- [Where to Start HV Modeling](#)
- [Where to Stop LV Modeling](#)
- [System Data Storage](#)

2.3.1.1 System Basics

A DESS system represents a complete model of an electrical distribution system and is stored as a single [file](#) (usually with a .dss.xml extension). A typical DESS system represents all the medium and

low voltage supplies, lines, transformers and equipment for a complete distribution system and may include equipment at one or more voltages. Before entering data for a system it's wise to decide where you will [start](#) and [stop](#) modeling your system.

Basic properties of a system include display names for the phases and the internal coordinate system used for mapping. The [System Properties dialogue](#) contains these settings.

2.3.1.2 Where to Start HV Modeling

Your DESS model begins at a node with a source element. This represents a 3-phase constant voltage supply for your electrical [system](#), sometimes called an infinite bus or swing bus. You must have at least one [source element](#) in your system model. You will need to decide at which point to start modeling your system. The best choice is to model only as much as is necessary in order to let you perform the analysis you need.

In many cases, you can start modeling by creating a source representing the low voltage busbar of a transmission substation. You then only need to model the feeders coming out of the station and the rest of the distribution system. For example, consider a DESN substation with two 110kV/27kV transformers and 8 feeders. As long as all feeders were supplied at the same bus voltage you could create a single [source](#) at 27kV and connect all 8 feeders to it. Your model would only contain [electrical layers](#) for 27kV and lower.

In some cases you may wish to model the transmission substation. You would normally only do this if you are interested in the details of the transformer operation (such as substation transformer losses or tap changing voltage regulation). Using the example above of the 110kV/27kV substation, you would now need to add an extra electrical layer at 110kV containing two nodes (one for each transformer) and add two [power transformers](#) and the extra nodes and lines required to represent the busbar connections on the transformer secondaries.

In rare cases you may wish to model part of the supplying transmission system. You might do this if the transmission supply voltage cannot be considered constant and fluctuates due to load conditions on the distribution system. In this case, you would model a few extra lines on the transmission system and put the source element at the end of these.

2.3.1.3 Where to Stop LV Modeling

Your model will contain equipment for all primary distribution voltages using an [electrical layer](#) in DESS for each voltage. Your [system](#) may represent the low voltage network (i.e. 110V or 220V), but it is not always necessary to go to this detail.

[Distribution transformer](#) elements are used to provide a simplified transformer model when the secondary network is not modeled. If a node contains a distribution transformer and one or more [load elements](#), the loads are assumed to be connected to the transformer secondary. You can aggregate all loads from the secondary (e.g. all residential customers attached to a single distribution transformer) to a single load element. This lets you model load and transformer operation without explicitly having to create another low voltage electrical layer and populate data for the low-voltage part of the system.

In some cases you may want to model the secondary network. This is beneficial when the secondary network is extensive or interconnected (e.g. for 'European' designs of systems, or for city center meshed networks). To do this you will need to create an extra [electrical layer](#), marked as a [meter layer](#), for the secondary voltage. Instead of aggregating all secondary loads at the transformer, you

can now model the actual loads spread throughout the secondary network by adding [meter elements](#) to the secondary meter voltage layer.

2.3.1.4 System Data Storage

When you save a DESS system to a file it is stored in XML (usually with a .dss.xml extension). XML is an open structured text format that uses tags (much like HTML) to identify the meaning of the data. Because the data is in a text format and is more or less human-readable, it is possible to open an XML file in Internet Explorer or Notepad and see the data.

The structure and tags used to define the XML data is specific to [DESS](#) . However, XML data can be easily read by software and can be converted to other structures. This makes it easier to exchange DESS data with other software and systems, such as GIS and SCADA.

Documentation for the structure of the DESS XML file is available from [Essex Energy](#).

2.3.2 Nodes and Lines

[Nodes](#) and [lines](#) are the primary items of data in a DESS system network. In this section each is described in detail.


If you understand the concept of nodes and lines, you will have a very good base of understanding to work off of when using DESS.

2.3.2.1 Nodes

An electrical network in DESS is composed of [lines](#) and nodes. Nodes are sometimes called buses. Nodes are points in the system, displayed in the map view, which are connected to each other with lines. These points can be used merely to model junctions, or line ends, or can represent electrical equipment or electrical loads. This equipment, and electrical loads, are represented by what is called [elements](#) which are data items attached to a node. Nodes appear as point symbols in the system. Nodes change their appearance according to a set of rules called [Style Rules](#).

You must create a node for the following cases:

- At the end of a [line](#)
- At junctions where three or more lines meet
- Whenever the type of line [conductor](#) changes
- Wherever there are [elements](#), such as [loads](#), [transformers](#), [switches](#), etc.

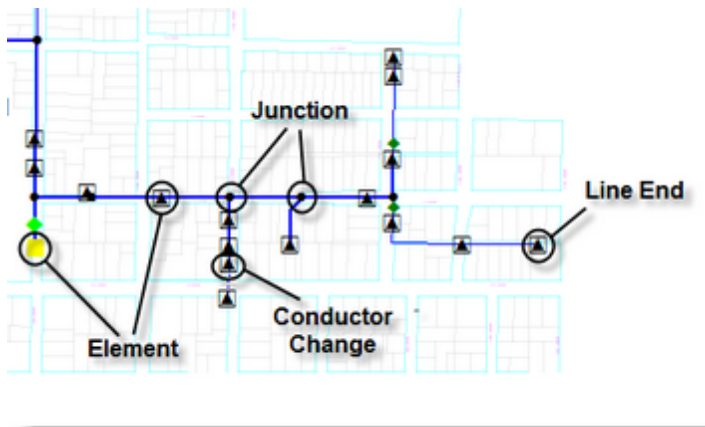

You need to create nodes in the correct locations before you can [create any lines](#) because lines can only be created between two nodes. Likewise, if you delete a node, all lines attached to it will be deleted. This prevents problems with connectivity by having 'hanging' lines. You can [move nodes](#) after they are created to put them into the correct location.


If you try to create a new node on top of an existing line you will be given the option to split the line so that the new node will end one of the lines and start the other.

If you add an element to a node it changes the symbol of the node to one corresponding to the element added. The symbols associated with a node can be edited in [Themes > Node Style Rules](#).

2.3.2.2 Lines

Lines in DESS represent a branch or section of the electrical network such as a feeder or spur. Each line must start and end at a [node](#) and cannot be attached to nodes except at the ends. Each line has properties for length, phasing and conductor type.

DESS uses a single-line representation so a line in DESS can represent either a 3-phase branch (with or without a neutral) or a single phase section. The actual electrical characteristics of the conductor are determined by the [conductor](#) used for the line.

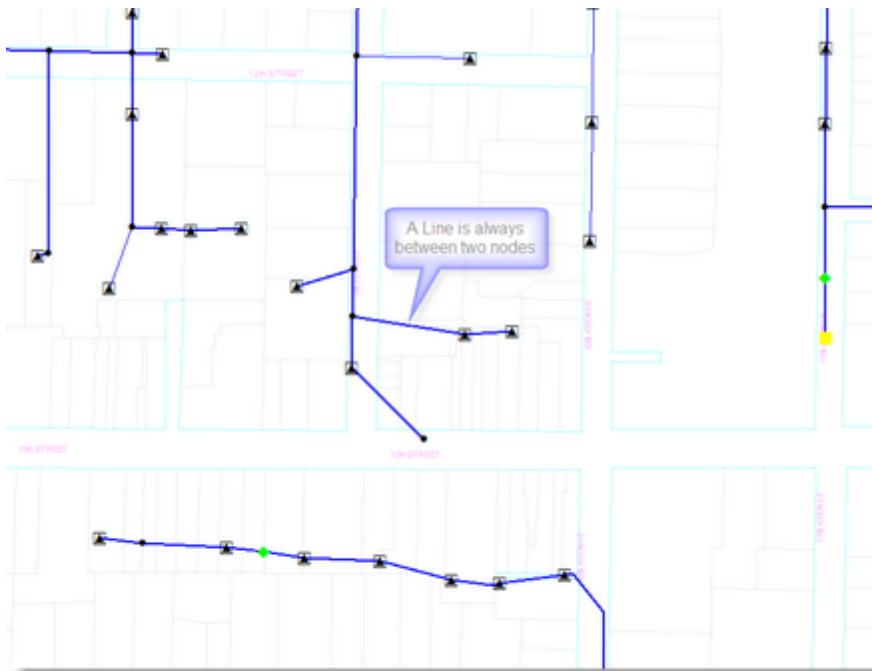

DESS automatically determines the direction of connectivity (i.e. which way to the [source](#)). It doesn't matter whether you draw a line from node A to B or from B to A. As you change the status of switches and make other changes, the connectivity of the DESS system will automatically be updated.


By default, the length of a new line is set to the measured distance on the map. This assumes you are using a geographic land base for your mapping. You can check which coordinate system you are using for you map in the [system properties dialogue](#).

To create a schematic view of an electrical system you can override the default line length by using the length property in the [line properties dialogue](#).

2.3.2.3 Connectivity

Basic Network

The primary network connectivity in DESS consists of [node](#) points, which are connected by [lines](#). The electricity is supplied by a [source element](#) and flow on the lines is controlled by [switch elements](#).

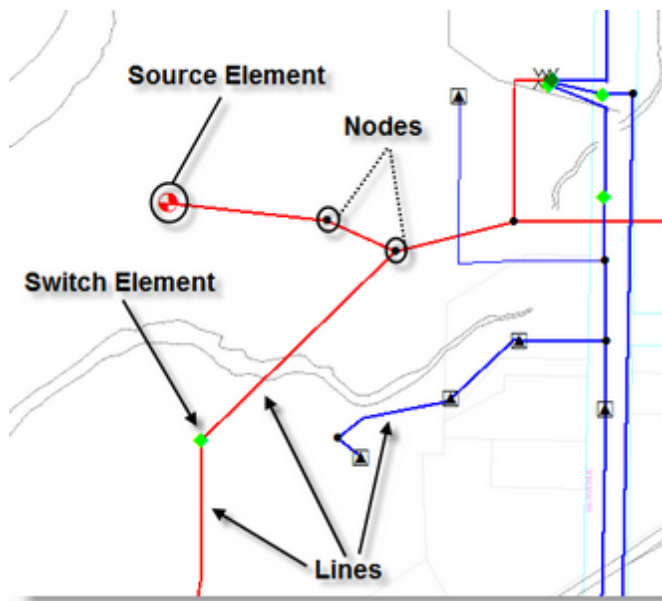

Direction of Flow

The direction of flow on the system is determined dynamically by the arrangement of nodes, lines, sources and switches. There is no need to explicitly specify the direction of flow. For this reason you don't have to specify how lines are oriented, and you can create a line by drawing from node A to node B or from B to A, it doesn't matter. Likewise, when you change the status of a [switch](#) (open to closed or vice versa), no other actions are required because the software automatically retraces and determines the new configuration.

Connectivity Across Layers

The basic network described above covers connectivity on a single [electrical layer](#). To create connectivity across voltages, a [power transformer element](#) is used. This represents a substation transformer, or any transformer where the [electrical layers](#) on both sides of the transformer are explicitly modeled.

Loops

DESS allows you to model networks with closed loops. Closing any open switch on a radial network will create a closed loop. DESS takes account of these loops when computing analysis solutions for short circuits and load flow based analyses.

Most distribution systems are fed radially, so it is a good idea to [check for closed loops](#) after entering new system data. If closed loops exist in a system an informational warning will be generated before analysis so you can be aware of any loop(s) and confirm that they should exist.

If a closed loop exists, the concept of upstream and downstream becomes ambiguous. so in a closed loop DESS will arbitrarily break the loop at the furthest point from the source for purposes of tracing.

Complicated Connectivity Cases

Systems are normally arranged so that for a multiphase line power flows in the same direction in all phases. However, it is possible to use single-phase switching, or partial-phase switch of a [switch element](#) so that power on different phases ends up flowing in different directions within a single line section. DESS will handle this case correctly, although tracing on such an arrangement can be

confusing unless [single-phase traces](#) are used.

It is also possible to create a system where a 3-phase line breaks into 3 single-phase lines, which each follow a separate path and then rejoin into a single 3-phase line again. Again, DESS handles the performance of this case correctly.

2.3.2.4 Appearance

Appearance




Under the broad title of Themes there are two concepts involved, Styles and Themes. Both of these topics involve the appearance of your system, more specifically the appearance of lines, labels and nodes.


Styles and Style Rules

The node style of a particular [node](#) refers to its appearance (e.g. a black triangle or a red circle). Likewise, the line style of a [line](#) refers to its color, thickness and whether it is solid, dashed, etc.

A style rule is a set of conditions which determine the specific appearance of a node or a line. These rules can be either very simple or more complicated. eg. all distribution transformers are red triangles, or all 27kV single phase pad mount 50kVA distribution transformers are large black stars. You can change these rules and add your own from the Default View sub-menu in the Analysis Tab of the Ribbon.

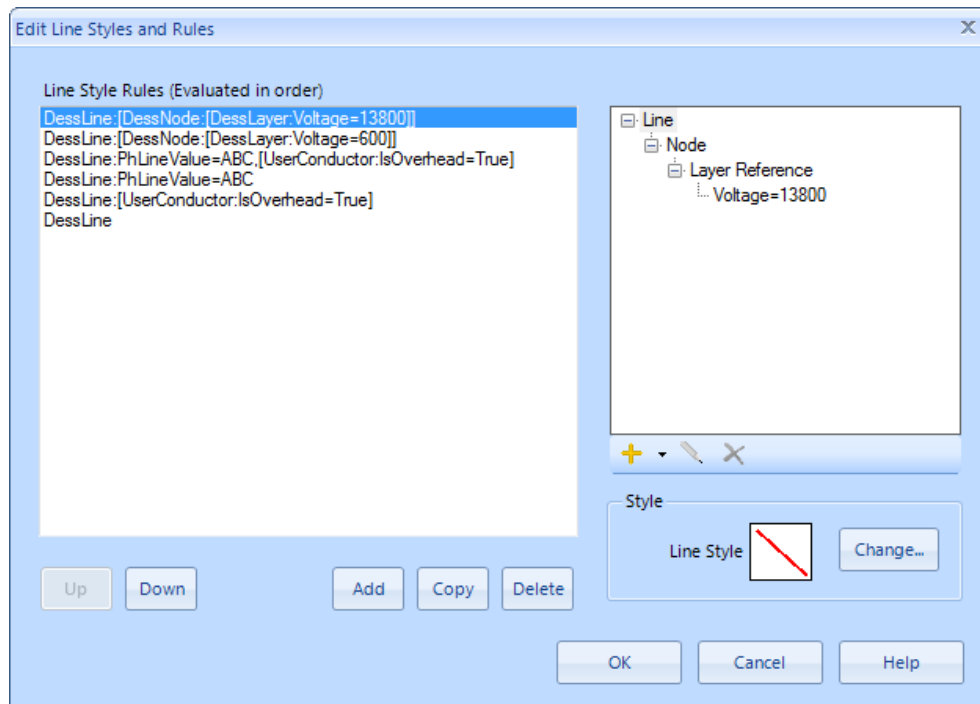

The Line Styles Dialog. From this you can set the order of your styles as well as create or delete styles.

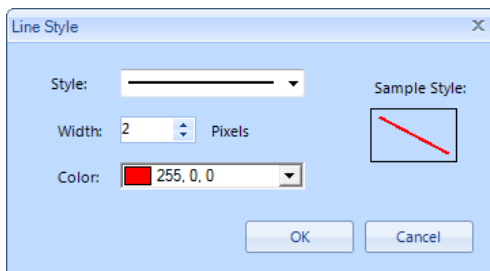

This is the dialog which appears after the add button is clicked.

There are three different sets of Style Rules, those for nodes, those for lines, and those for text labels (for either nodes or lines).

Styles for nodes and lines can each be set in the ribbon under Analysis > Views > Settings > Node Style Rules or Analysis > Views > Settings > Line Style Rules. Styles for labels can be set in Analysis > Views > Settings > Label Style Rules. Each of these opens their respective styles dialogue. These dialogs contain the settings for the basic themes and define how your system will appear.

Styles are evaluated in DESS in the order that they appear in the Styles dialogue, top to bottom. If a node or line meets the criteria on the top of the list, then any further styles will not apply to it. In this way you can make your own styles and rules and set their priority relative to the rest of the style rules. You have complete control over the appearance of your system using the styles you set in the Node Style Rules dialogue, Label Style Rules dialogue or the Line Style Rules dialogue.

Node Visibility can be set in the [Layer Docking Window](#). Style rules set this way will override the visibility rules set up in the Node Style Rules dialogue (size, zoom level, etc). To add a new rule, right click on Node Types, and then click on Edit Types. A dialogue very similar to the Node Style Rules will appear where visibilities can be manipulated.

Hint:



You can create rules which you do not always want to apply to a system. To activate them, move them to the top of the style list, and move them down the list to the bottom when you do not want them to show. Using this you can quickly identify certain groups of nodes or lines with similar properties.

Warning:



After making changes to a set of style rules, once you click OK you can no longer undo these changes using the Undo tool, so be careful.

Themes

Themes are simply a collection of node or line styles. Most themes are associated with the results of an analysis which has just been run. These are accessed under the Globe menu. A different selection of themes is available depending on which analysis has been run. DESS automatically comes with a set of predefined themes for nodes and lines as well as preset themes for analyses which have been run.


These themes change the entire appearance, or a large portion of your system. Typically each of these themes affects a particular type of information. eg. the Node Voltages and Line Loading each

affect nodes and lines respectively.


You can set your options for the appearance of analysis from the [Options dialogue](#). This can be accessed from [Globe > Options \(dialogue appears\) > Results > Themes](#).

This dialogue allows you to add, edit or remove styles from a particular theme. With this tool you can get more out of your analysis results by setting the styles to levels, colors or symbols which are meaningful to you.

At any time you can select the Default Theme under the Themes menu to restore the system to its default theme. This restores the appearance of the system to the values that have been set in the [Node Styles](#) or [Line Styles](#) dialogs, rather than a theme associated with analysis results.

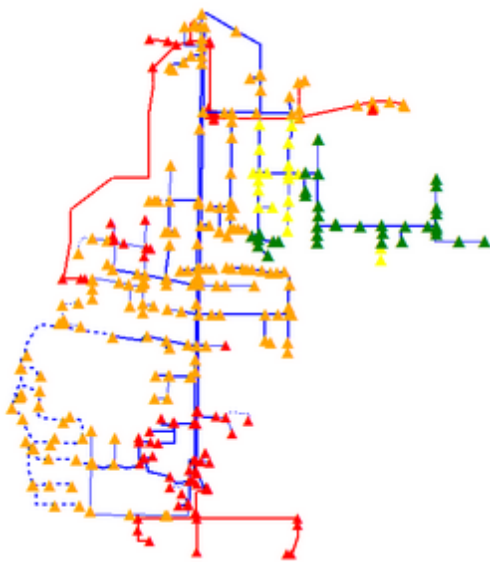

After running a Annual Load Flow analysis, the user has chosen to change the theme to 'average node voltages'

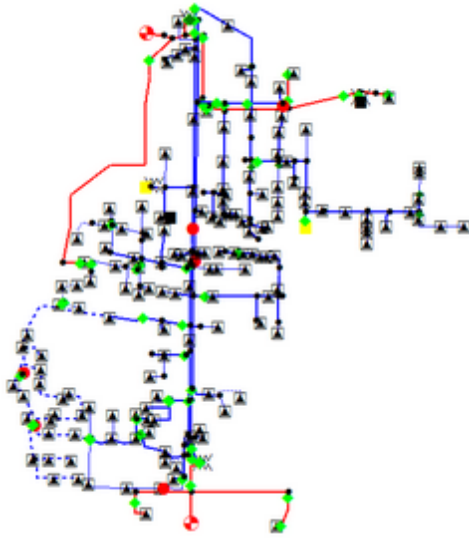

This is the default DESS theme. It is designed for general use. 'Default Theme' restores your theme to this one.

2.3.3 Layers

This section contains information regarding the [Background Layers](#) and [Electrical Layers](#) of the map. It also contains information about the [Active Layer](#) and how to control [Layer Visibility](#).

2.3.3.1 Electrical Layers

An electrical layer represents all the equipment in a distribution system at a given voltage level. An electrical layer provides a home for [nodes](#), [lines](#) and the [elements](#) attached to the nodes. You use [power transformer elements](#) to connect electrical layers together so that the electrical connectivity contains from higher voltages down to lower voltages (see [Connecting Layers](#)).

You need one electrical layer for each separate nominal voltage on your system. For example, if you have a distribution system that is fed from a 110kV transmission system which contains equipment at 27kV and 8kV, you would have one electrical layer for the 27kV equipment and one for the 8kV equipment. You may also have one more for the 110kV equipment, if you [choose to model it](#), and another for 220V LV equipment if need [choose to model](#) the LV.

You must [create an electrical layer](#) before you can add any nodes, lines or elements. Note that the voltage of an electrical layer is the nominal voltage and not the actual supply voltage. You can set the actual supply voltage using the [source element](#).

Use the [Layers tab of the docking window](#) to add, delete and edit properties for electrical layers and to change the [layer visibility](#). More information regarding electrical layer properties is available in [Layer Properties](#) in the [How To Section](#) of this help system.

One of the electrical layers is always set as the [active layer](#) for adding new nodes, new lines and

region selections.



Hint:

All voltages in DESS are phase-phase voltages. So a 22kV electrical layer would contain both 22kV (phase-phase) equipment and 12.7kV (phase-ground) single-phase equipment.

2.3.3.2 Meter Layer

A meter layer is a specialized [electrical layer](#). When creating an electrical layer there is a check-box in the upper right hand corner of the dialogue window which indicates that the electrical layer should be designated as a meter layer.

The screenshot shows the 'Electrical Layer Data' dialog box. The 'Meter Layer' checkbox is located in the top right corner and is highlighted with a red rectangle. The dialog contains the following fields and controls:

- ID:** 4
- Layer Type:** Four Wire System (dropdown menu)
- Nominal Voltage:** 600 V
- Appearance section:**
 - Visibility:** On (dropdown menu)
 - Minimum Zoom:** 0 m
 - Maximum Zoom:** 1E+09 m
 - Selectable:** ☒
 - Show Labels:** ☒
 - Transparency:** A slider control.
- Buttons:** OK, Cancel, and Help at the bottom.

Meter layers indicate to DESS that this electrical layer may be connected to the secondary side of a [distribution transformer](#).

2.3.3.3 Background Layers

Background layers in DESS are used to represent 'dumb' maps such as street maps, land parcels or text and annotations. These layers do not contain any DESS data but they are useful for showing context for the electrical data. When viewing and editing your data it can be helpful to see streets and landmarks. Background maps are always shown behind (or underneath) electrical layers.

Another use of background layers is during data entry. When entering data manually you can display a dumb map of your electrical system (maybe created by a CAD system) as a background layer and then trace over it to create data on [electrical layers](#).

Use the [Layers tab of the docking window](#) to add, delete and edit properties for background layers and to change the [layer visibility](#). This is done using the [Background Layers dialogue](#).

Map Data Formats

DESS can view maps stored in 3 common formats:

- TAB - MapInfo TAB format files
- DXF - AutoCAD text interchange format
- SHP - ESRI shape file

If you have maps in other formats (ie. AutoDesk DWG, Bentley, Intergraph, etc), it is usually possible to convert this data to one of the listed formats. Please contact [Essex Energy](#) if you require assistance.

**Hint:**


If you are having trouble displaying a background map (in one of the listed formats), or the map appears in a different location than your system data or another map layer, the problem may be that the map is stored in a different coordinate system. Some examples of coordinate systems are latitude/longitude (WGS 84), NAD83 (UTM), etc.

Open Street Map Backgrounds

DESS has the ability to use Open Street Maps as the background layer. This background map is automatically updated with changing landscape and roads, and is maintained over the internet. To enable it, open the [Open Street Map Background](#) dialogue.

2.3.3.4 Active Layer

In order to edit data, and to add [nodes](#) or [lines](#), you must set the Active Layer. This layer is the [electrical layer](#) where new nodes and new lines are added. It is also the layer used for rectangle and polygon selections. The current active layer is the layer with the bold text on the [Layers docking window](#). Select a layer to make it the Active Layer.

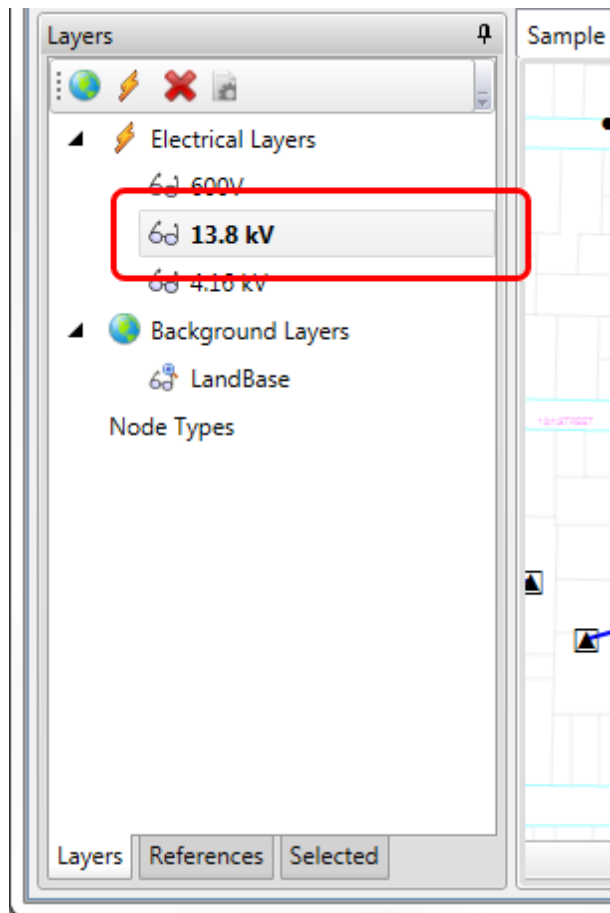**Hint:**

If you are trying to create new nodes and lines, and you cannot connect the lines to the existing system, the problem may be that you are actually creating the new items on the wrong electrical layer. Check that the active layer is the same as for the nodes you are trying to connect to.

2.3.3.5 Layer Visibility

You can adjust the properties of layers so that the visibility of each layer is controlled separately. There are two different ways to control the visibility: the visibility setting and translucency.

Visibility

There are three settings for the visibility:

- On - layer is always visible
- Off - layer is never visible
- Zoom - layer is visible when the width of the screen is within the desired range

You can use this setting to turn off [electrical layers](#) you are not currently interested in, and to make [background layers](#) that only appear when the map is zoomed in. This can help improve redraw

performance.

A common use of the Zoom settings is to adjust background layers so that detailed data (residential streets, land parcels, etc) only appears when you are zoomed in and looking at a small section of system, and that large-scale data (town boundaries, etc) only appear when you are zoomed out and looking at the entire system.

Transparency

The [properties](#) for each layer also let you set the transparency of each layer. You can choose from a continuous range from solid to invisible. Setting non-critical layers to be partially transparent can help make key information stand out.

2.3.4 Elements

Elements in DESS represent electrical items located at a point. All plant items except nodes and [lines](#) are represented as elements. All elements are attached to a single [node](#) (except for a power transformer which is associated with 2 or 3 nodes).

Only certain types of element can coexist together on a single node. Sources, motor generators, reactors and regulators must all be the only element on a node. Loads, distribution transformers and capacitors can all exist together on a node. Switches and protective devices can also coexist.

Elements are usually added, edited and deleted from the [Node dialogue](#).

Node Data

SM ID: 1268 Layer: 13.8 kV ☐ Include In SLD

Name:

Description:

Unique ID:

Attached Elements:

Type	Description	SM ID

Add Edit Delete

- Capacitor
- Distribution Transformer
- Detailed Load
- Simple Load
- Motor / Generator
- Reactor
- Regulator
- Source
- Switch
- Protection
- Meter

Phasing	Length	SM ID

Cancel Help

The different types of elements are:

- [Capacitor](#) - capacitor bank
- [Distribution Transformer](#) - low voltage transformer
- [Load](#) - customer load, can be detailed or simple
- [Meter](#) - customer meters
- [Motor Generator](#) - motor or generator
- [Power Transformer](#) - substation transformer
- [Protection](#) - protection device
- [Reactor](#) - series reactor
- [Regulator](#) - voltage regulator
- [Source](#) - supply point (swing bus)
- [Switch](#) - sectioning point

To add an element, you generally use the node dialog

2.3.4.1 Capacitor Element

A capacitor element represents a capacitor bank and is attached to a [node](#). You can specify the size of the capacitors in kVar for each phase and whether the bank is fixed or switched. If it is switched you can specify how the bank is controlled (e.g. VAR control, voltage control, power factor control).

Capacitors are used to reduce the reactive load on the system. Reactive loads are created by customer load at a low power factor and by the impedances of transformers and lines, which are primarily reactive.

High reactive loads cause increased line losses (due to higher current flows) and reduced voltages at the ends of feeders. They also cause a low system power factor which may not be acceptable to the transmission system operator. Adding capacitors can help to reduce losses by reducing current flow, and generally improves the voltage on a feeder. Too much capacitance can cause a leading power factor (increasing losses) and unacceptably high voltages.

Creating in DESS

You create capacitor elements from the [Node dialogue](#). This will bring up the [Capacitor Element dialogue](#), described in the Reference Guide. A capacitor element can be put on the same node as a [distribution transformer](#) or a [load](#).

Controls

There are three basic ways to control when a capacitor bank is switched in. These are:

- Fixed - the capacitor is always on
- Time Switched - the capacitor is turned on at a specified hour, and off at another specified hour. This assumes that the switch on/off time is the same every day.
- Reactive Controlled - the capacitor is turned on or off depending on the reactive current (or it's effect on voltage). This includes controlling by power factor, by absolute kVAr flow, or by voltage.

2.3.4.2 Distribution Transformer Element

A distribution transformer represents a typical transformer used to supply customers and is used in DESS where you do not have to model the lines and connections on the secondary side of the transformer or would like to you can add a [meter layer](#). The only information required for a distribution transformer element is the type of transformer. Most of the technical parameters are defined in the associated [transformer reference data](#).

Most distribution systems contain a large number of distribution transformers to supply customers. In North American designed systems, the number of transformers can be as high as one per 4 customers (6-10 typical). In European systems, less transformers are used because of the more extensive and higher voltage secondaries.

Distribution transformers contribute to the total system losses in two ways. First, series losses are caused by losses in the windings and increase as the loading of the transformer increases. Secondly, magnetizing losses (sometimes called no-load or shunt losses) are caused by losses in the transformer core and are virtually constant (they do vary slightly with voltage). You can use DESS to identify these losses and try options for reducing them.

Creating in DESS

You create distribution transformers from the [Node dialogue](#). This will bring up the [Distribution Transformer Element dialogue](#), described in the Reference Guide. A distribution transformer element can be put on the same [node](#) as [load elements](#) or [capacitor elements](#). Before you create a distribution transformer, the type of transformer you want to create must already exist in the reference data.

If you put a distribution transformer on the same node as a load element, the load is assumed to be connected to the low voltage side of the transformer.

2.3.4.3 Load Element

Load elements in DESS represent customer loads. A load element lets you specify the magnitude of the load for one or more periods of the year along with the [load category](#). The load category (e.g. residential, commercial) contains the key parameters and curves which determine the electrical characteristics of the load and how the load varies over the year.

A load on a node may represent the aggregation of multiple loads of a given type (e.g. the total load

from a number of residential customers connected to the same transformer). If a distribution transformer is defined on the same node as the load, the load element represents the aggregated load from all customers (and secondary losses) attached to the low voltage side of the transformer.

You can have more than one load element on a node. Typically you would do this to represent different types of load (such as residential and commercial) that might be connected to the same transformer.

Creating in DESS

You create load elements from the [Node dialogue](#). There can be simple or detailed loads, which are slightly different and are described in the Reference Guide. A load can be put on the same [node](#) as [distribution transformer elements](#) or [capacitor elements](#). Before you create a load the appropriate data for load modeling must be set up in the reference data.

If you put a distribution transformer on the same node as a load element, the load element is assumed to be connected to the low voltage side of the transformer. If there is no transformer, the load is connected at the line voltage.

2.3.4.4 Meter

The meter element represents a customer meter, which may or may not be downstream of a [distribution transformer](#). Meters and [loads](#) can be placed on the same node, so known load values can aggregate to their respective transformers. Modeling meter elements enables a better secondary analysis, where voltages can be looked at on each meter taking into account distances from the transformer, instead of just the secondary side of a transformer.

If the meter is not placed on an [electrical layer](#) designated a [meter layer](#), it will not be able to be connected to a [distribution transformer](#).

Creating in DESS

You create distribution transformers from the [Node dialogue](#). This will bring up the [Meter Node Dialogue](#), described in the [Reference Guide](#).

2.3.4.5 Motor Generator Element

This type of element is used to represent 3-phase motors and generators. You can represent either synchronous or induction machines.

Synchronous machines rotate at a speed determined by the system frequency. These machines tend to be larger, such as generators used in hydro-electric or thermal generation plants or hooked up to gas turbines. Synchronous machines can vary both the real power they output and the reactive power. The VAR output of a synchronous generator can be used to support reactive loads and to support voltage. Synchronous machines as modeled in DESS are assumed to have automatic voltage regulation that adjusts the VAR output within machine limits to support a specified voltage setting at the generator terminals.

Induction machines are generally smaller. Induction motors are the most common type of motor. Induction generators are generally used for smaller installations and where there is no constant prime driver, such as wind turbines. Induction machines consume reactive power (like most loads) whether they are used as motors or generators.

By carefully settings the parameters of generators in DESS you can also represent a range of non-standard generators (such as wind turbines, photovoltaic, and other inverter based generation technologies).

Creating in DESS

You create motor generator elements from the [Node dialogue](#). This will bring up the [Motor Generator Element dialogue](#), described in the Reference Guide. They cannot be combined with any other type of element.

2.3.4.6 Power Transformer Element

Power transformer elements represent transformers that connect a low and a high voltage network two different electrical layers in DESS. If you don't need to explicitly represent the details of the transformer use a [distribution transformer](#) element instead. A power transformer element typically represents a substation transformer.

Power transformers are modeled in detail, including impedances, grounding, no-load losses and the capability to model on-load voltage regulating tap changers.

You can model both two-winding transformers (e.g. 110kV / 13.8kV) and three-winding transformers (e.g. 3 terminals such as 110kV / 66kV / 66kV) using this type of element.

Power transformers are used to connect [layers](#) in DESS so there is connectivity from one voltage to another.

Creating in DESS

Power transformer elements can be created by first selecting the terminal nodes (2 nodes on different layers for a normal two-winding transformer, or 3 nodes on 2 or 3 different layers for a three-winding transformer). You can select more than one node at a time by holding down the CTRL key while you click on a node. Then click on the [Add Power Transformer](#) button in the Editing tab of the ribbon to create the new transformer. To edit the transformer data, bring up the [Node dialogue](#) for the high voltage node of the transformer. This will bring up the [Power Transformer Element dialogue](#), described in detail in the Reference Guide.

2.3.4.7 Protection Element

Protection elements are used to represent devices that have time-current curves and are used for protection. This includes fuses, relays, reclosers, etc. Protection elements are often associated with a [switch element](#) so that the device can be represented as openable.

Protection elements allow you to specify settings on protection devices defined in the [protection reference data](#). For example a protection element representing a relay would let you choose which curve elements to use (e.g. extremely inverse and instantaneous) and set the CT ratio, tap and time dial settings.

Creating in DESS

You create protection elements from the [Node dialogue](#). This will bring up the [Protection Element dialogue](#), described in the Reference Guide. This is the only element that can exist on the same [node](#)

as a switch.

2.3.4.8 Reactor Element

This type of DESS element represents a series reactor. These somewhat uncommon items are used to add an impedance to a line, either to reduce voltage problems associated with high capacitances and light loading (more typically at transmission level voltages), or to reduce fault levels.

Creating in DESS

You create reactor elements from the [Node dialogue](#). This will bring up the [Reactor Element dialogue](#), described in the Reference Guide. Reactor elements cannot be combined with any other types of element on a node. Because a reactor represent a series device, it can only be placed on a node attached to exactly two lines. Putting it at a node with 3 or more lines would be ambiguous, and putting it on a node with one line attached (i.e. end of a line) would be meaningless.

2.3.4.9 Regulator Element

Regulator elements are used to model voltage regulators (sometimes called line regulators). You can model both manual regulation with a fixed tap setting, or automatic voltage regulation where the regulator tap is automatically changed to maintain the desired voltage on the regulator secondary.

Creating in DESS

You create regulator elements from the [Node dialogue](#). This will bring up the [Regulator Element dialogue](#), described in the Reference Guide. Regulator elements cannot be combined with any other types of element on a node. A regulator represents a series device, it can only be placed on a node attached to exactly two lines. Putting it at a node with 3 or more lines would be ambiguous, and putting it on a node with one line attached (i.e. end of a line) would be meaningless.

2.3.4.10 Source Element

A source element represents a 3-phase supply to the system modeled in DESS. It is set as a constant voltage source, which means that it supplies a specified voltage regardless of the load being fed from it. In classical analysis, it would be called a swing bus or an infinite bus.

Where you create a source element depends on where you want to [start modeling](#) a system. You would normally avoid modeling parts of the transmission supply system unless you have a specific requirement to do so.

You must have at least one source element in your system. A typical distribution network contains multiple supplies (either transmission substations or feeders fed from outside the network). For this reason, most networks will contain more than one source. Sources can be created on more than one [electrical layer](#).

Source elements let you specify the voltage, source impedances (representing impedance of the transmission system) and voltage angle of the supply.

You can specify both upper and lower values of source impedances, which would represent the range of impedances you could encounter depending on different supply conditions on the transmission

system. The impedance information is used by the [short circuit analysis](#).

Creating in DESS

You create source elements from the [Node dialogue](#). This will bring up the [Source Element dialogue](#), described in the Reference Guide. Source elements cannot be combined with any other types of element on a [node](#). You may also want to see [Converting Source Impedances](#), directly following this article.

2.3.4.10.1 Converting Source Impedances

Source impedances can be stated in many different ways, but DESS requires that the values be input as p.u. on 100 MVA base. You can use the following calculations to convert the values you have. A number of common conversions are described below.

Note that when you are calculating an impedance from a fault current or a fault MVA you can only compute a total impedance value. You do not have enough information to determine the X:R ratio for the impedance. For this reason, it is preferable if the actual R and X values for the source impedances can be obtained.

Converting from a Different MVA Base:

You can convert impedances from one base to another using the ratio of the MVA bases.

$$Z'_{p.u.} = Z_{p.u.} \frac{S'_{base}}{S_{base}}$$

Example:

You have an impedance of .025 p.u. on a 10 MVA base.

Solution:

$$Z = .025 * 100 / 10 = .25 \text{ p.u. on 100 MVA base}$$

Converting from Ohms:

You can convert from units of Ohms to per unit as follows:

$$Z_{p.u.} = \frac{Z_{ohms}}{Z_{base}} \quad Z_{base} = \frac{V_{3\phi}^2}{MVA_{base}}$$

Example:

You have an impedance of 0.5 + 3.1j Ohms on a 27600V system.

Solution:

$$Z_{base} = 27.6 * 27.6 / 100 = 7.6176 \text{ Ohms}$$

$$Z = (0.5 + 3.1j) / Z_{base} = 0.0656 + 0.4069j \text{ p.u. on 100 MVA}$$

Calculating Z_1 from a 3-phase Fault MVA:

You can calculate the positive sequence impedance of a source from the 3-phase fault MVA at the source.

$$Z_{1p.u.} = \frac{S_{base}}{S_{fault}}$$

Example:

At the source location you have a fault level of 2400MVA

Solution:

$$Z_1 = 100 / 2400 = .0417 \text{ p.u. on 100 MVA base}$$

You can assume that resistances are much smaller than reactances (estimate 20:1 ratio) so:

$$X_1 \sim Z_1 = .0417 \text{ p.u. on 100 MVA base, } R_1 = X_1/20 = .002 \text{ p.u. on 100 MVA base}$$

Calculating Z_1 from 3 Phase Fault Current:

You can calculate the positive sequence impedance from the 3-phase fault current at the source. In the following equation S_{base} is in units of MVA, V_{pp} is in kV and I_{fault} is in units of kA.

$$Z_{1p.u.} = \frac{S_{base}}{\sqrt{3} V_{pp} I_{fault}}$$

Example:

At the source of a system, the voltage is 45100V and the 3-phase fault current is 8400A

Solution:

$$Z_1 = 100 / 1.732 / 45.1 / 8.4 = .1524 \text{ p.u. on 100 MVA base}$$

Calculating Z_0 from Phase-Ground Fault Current:

You can calculate the zero sequence impedance from the phase-ground fault current at the source. In the following equation S_{base} is in units of MVA, V_{pp} is in kV, and I_{fault} is in units of kA.

$$Z_{0p.u.} = \frac{\sqrt{3} S_{base}}{V_{pp} I_{fault}} - Z_{1p.u.} - Z_{2p.u.} - 3Z_{grnd}$$

Example:

At the source the voltage is 45100V, the phase-ground current of a solidly grounded fault is 2900A, and the positive sequence impedance is .1524 p.u. on 100 MVA.

Solution:

$$Z_0 = 1.732 * 100 / 45.1 / 2.9 - .1524 - .1524 - 0 = 1.025 \text{ p.u. on 100 MVA base}$$

2.3.4.11 Switch Element

A switch element is used to model a device which can be opened or closed and thus affect the [connectivity](#) of the system. Switch elements can be used to model lots of different types of real-world equipment including:

- fuses
- reclosers
- breakers
- line switches
- transformer elbows
- disconnects
- jumpers
- anything else that can be opened or closed

Switches are typically fully open or fully closed. However, it is possible to partially open a switch to model operations where only one or two phases of a three phase switch are operated.

Creating in DESS

You create switch elements from the [Node dialogue](#). This will bring up the [Switch Element dialogue](#), described in the Reference Guide. The only element that can exist on the same [node](#) is a [protection element](#) (if the switch is for a fuse, recloser, breaker, etc). Because a switch represent a series device, it can only be placed on a node attached to exactly two lines. Putting it at a node with 3 or more lines would be ambiguous. Putting it on a node with one line attached (i.e. end of a line) is meaningless, but will not cause an error.

Cubicles, Vaults, Complicated Switching

A real electrical system may contain a single physical device which contains a number of interconnected switches. In DESS you will need to decompose the compound device into an equivalent circuit of simple nodes, switches and lines. For example a device containing four connections, each of which can be attached or disconnected would be represented in DESS as a single central node representing the bus attached to four surrounding nodes, each with a switch element.

2.3.5 Reference Data

Reference data items in DESS are used to create a 'library' containing the technical details of commonly used items. These items represent both common plant items and items used for load modeling.

You can view and edit reference data items from the [reference docking panel](#).

Plant Items

- [Conductors](#)
- [Transformers](#)
- [Protection Types](#)

Load Modeling Data

- [Week Types](#)
- [Season Types](#)
- [Load Components](#)
- [Load Categories](#)

2.3.5.1 Conductor Reference Data

Conductor data defines the electrical parameters and physical properties for a set of conductors. Electrical parameters include sequence impedances, capacitive charging and ampacity. Physical properties include material, description, location and cross-section.

The key parameters of a conductor are the positive and zero sequence impedances. These values represent the self and mutual impedances for a group of conductors, whether is be a 3-phase 3-wire bundle, a 3-phase 4-wire bundle or a single-phase 2-wire set of conductors.

The effect of a neutral conductor, whether the same size or different from the phase conductors, is implicitly included in the sequence impedance values.

The [Conductor Data dialogue](#) is available in the Reference Guide section of this help manual.

2.3.5.2 Transformer Reference Data

This type of reference data describes a transformer used in a [distribution transformer element](#). Normally the bulk of transformers on a distribution system will be defined using this data.

This data contains descriptive parameters (such as location and description) and electrical parameters such as impedance, connection type and taps.

The [Transformer Reference Data dialogue](#) is available in the Reference Guide section of this help manual.

2.3.5.3 Week Type Reference Data

Week types are used to define a portion of a week for analysis purposes. Week types are part of the [load modeling](#) in DESS.

The only data for a week type is the days of the week it covers.

A typical system will define week types for full week (all days), weekend (Saturday, Sunday), and weekday (Monday-Friday).

You can add more detailed types if you want to represent different load curves, components, or characteristics in your [load category](#) data for a specific data. For example, an industrial customer who shuts down on the weekend may have a different load profile on Monday and Friday to account for

start up and shutdown. In this case, you could create 4 types: Weekend, Monday, Tuesday-Thursday, and Friday.

The [Week Type Reference Data dialogue](#) is available in the Reference Guide section of this help manual.

2.3.5.4 Season Type Reference Data

Season types are used to define a portion of a year for analysis purposes. Season types are part of the [load modeling](#) in DESS.

Data for a season include the months of the year included in the season, plus values for average day and night temperatures. The temperature values are used to compute the difference between normal and actual temperatures for analysis, and affect the scaling of [load categories](#) which contain temperature sensitive scaling factors.

A typical system will define season types for full year (all months) and for the four seasons (Spring, Summer, Fall and Winter). This lets you define different [load element](#) data for each of the four seasons. This data frequently comes as kWh values from a customer billing system.

If you have loads that vary distinctly on a monthly basis, you could potentially define season types for each of the 12 months, and enter load data specifically for each of these months.

The [Season Type Reference Data dialogue](#) is available in the Reference Guide section of this help manual.

2.3.5.5 Load Component Reference Data

Load components are a portion of a load represented by a [load category](#). Load components have specific electrical characteristics and a defined load curve shape. They let you define a part of a load category in more detail if you have available information. Typical load components for a residential load category might represent items like lighting load, heating load, refrigeration load, etc. Load components are part of the [load modeling](#) used in DESS.

Data for a load component includes the 24-hour load curve, along with the electrical characteristics of the load, such as power factor, response to voltage, and cold load pickup characteristics.

The [Load Component Reference Data dialogue](#) is used to edit this data.

2.3.5.6 Load Category Reference Data

Load categories define the characteristics of a type of load in DESS, and contain the core data for [load modeling](#). Each [load element](#) in DESS references a load category. Typical load categories include residential, commercial, and categories for specific industrial customers.

Load categories let you define different properties for loads for any combination of [week types](#) and [season types](#). This lets you define load variation over the course of a week and over the course of a year. There are three types of properties you can define in a load category:

Load Curves

These are the 24 hour curves which show how load varies over a day. You can define just a real

power curve, or both real and reactive power curves if you want to model variations in power factor over a day.

Load Components

This optional data lets you specify sub-components of a load. For each period of interest you can specify a set of components that are active. This can help to better specify certain load characteristics and lets you model a load without that component active.

Load Characteristics

These items define the electrical characteristics of the load including power factor (if not defined by real/reactive curves mentioned above), power response to voltage and re-energization factors.

The [Load Category Reference Data dialogue](#) is available in the Reference Guide section of this help manual.

2.3.5.7 Protection Reference Data

This type of reference data is used to model the basic characteristics of types of protective devices. For fixed non-settable devices such as fuses, this data defines the actual device characteristics. For more complex devices such as relays and reclosers, the settings defined in the [protection element](#) work in combination with this reference data to define the characteristics of a specific device on the system.

The primary data for this element are the time-current curves of the device.

For fuses, there are two curves. One for the melt curve, and one for the clear curve.

For relays and reclosers, you can enter data for each protective curve element. For each of these, you can enter either a series of curves for different settings or equations which define the set of curves.

The [Protection Type Reference Data dialogue](#) is available in the Reference Guide section of this help manual.

2.3.6 Load Modeling

The actual behavior of a real customer load is very complex. Load modeling is the method used to represent a customer load for analysis so that the real load variation can be approximated.

Without any load modeling, load values would need to be represented purely by kW and kVAr (and the power-voltage relationship). These values would represent a single set of conditions of the system (such as annual peak). Furthermore, these values would be difficult to obtain as they don't relate to data that a distribution utility usually gathers.

DESS models loads by using [load categories](#) and [load elements](#). Load elements contain data for the magnitude of the load. The load category contains detailed information relating to electrical characteristics and variation over time for the type of load.

For example a load for a transformer supplying houses in a subdivision could be represented by a load element containing the kWh billing values for all attached customers for each season (the load magnitude), and a 'Residential' load category which defines the load curves, power factor etc for typical residential customers.

Customizing Load Categories

By default, DESS is pre-programmed with load categories that represent residential, commercial and industrial customers. However, the default categories may not accurately represent conditions in your system. This is especially true of industrial loads, which vary considerably depending on the type of industry, the number of shifts worked, etc.

You can create your own load categories by collecting load curves for common types of customer. This can come from a number of sources such as SCADA data (if you have a feeder supplying a homogenous type of load), hand held digital meters, and 15-minute metered data for larger (typically industrial) customers. The data you collect may also contain power factor information. Please contact support at [Essex Energy](#) if you have questions about how to make use of different load data sources.

Simple vs Detailed Modeling

DESS allows you to model loads in great detail. For example, you can represent load changes from [month to month](#), variations across every [day of the week](#), consider both real and reactive load curves, and use detailed modeling of [load components](#). However, you do not have to model at this level of detail. It is usually sufficient to model differences across four seasons, only consider weekday and weekend differences, and load components can be ignored completely if you don't have the required information.

2.3.7 Analysis

DESS provides a series of different types of analysis which can be used to help you plan and operate your system.

The following Analysis can be run on your system and belong to the modules listed (each module is available separately from [Essex Energy](#)).

Basic DESS Editor

- [Protection Coordination](#)

Load Flow Module

- [Load Flow](#)
- [Motor Starting](#)
- [Annual Load Flow](#)
- [Load Loss](#)
- [SCADA Load Flow](#)

Feeder Analysis Module

- [Capacitor Optimization](#).
- [Phase Balancing](#)

Optimization Module

- [Open Point Optimization](#)

Short Circuit Module

- [General Short Circuit](#)
- [Specific Short Circuit](#)

2.3.7.1 Annual Load Flow

The annual load flow calculates the total energy provided and consumed (including losses) on a system throughout the year. It works by calculating a series of load flows for each hour of the day for each distinct type of week and season defined in the [load modeling](#).

The results of the annual load flow give the total energy provided by the system (GWh), as well as energy lost on lines and in transformers. For each node in the system it calculates the maximum, minimum and average voltage, and for each line it calculates the maximum, minimum and average current, loading and losses.

Voltage Ranges

The annual load flow can be useful in evaluating the voltage range (under high and light loading) you can expect to see on different parts of the system. Large voltage changes under different loading conditions can represent a weakness in the system, and is often associated with power quality issues and difficulty backing up affected feeders in the event of an outage.

2.3.7.2 Arc Flash

The arc flash analysis is the a powerful tool for determining potential hazards in the field. Given the system configuration and protection elements, it determines the fault and arc current, working distance, incident energy, protection level and zone of protection.

When you run a load flow, you choose the node(s), voltage, maximum and minimum fault conditions, or import these from the system directly. You can update the values for the equipment type and conductor gap, and even select whether it is an open air or arc in a box situation. Keeping the model up to date with the latest configuration and settings will ensure that the most accurate values are being calculated at all times. It is simple to run an arc flash quickly before sending a crew out, so the crew can be constantly informed of the current danger level.

2.3.7.3 Capacitor Optimization

The capacitor optimization helps you determine where to place capacitors on your system in order to reduce losses and improve the voltage and power factor of specific feeders.

As parameters for the analysis, you specify the size of the banks you want to use and the maximum number of banks you want to place.

You can choose to find the best location for banks across the entire system, or only on selected parts of the system. Use the node selection tools in DESS to select either a feeder, a complete voltage layer, or any area you want to limit capacitors placement to.

You can also choose whether you want to optimize capacitor placement for a specific condition (i.e.

peak load), or to run a series of load flows representing loading throughout a full year and optimize capacitors for energy savings throughout the seasons.

Switched Capacitors

If you choose to optimize capacitors for a full year, you have the choice of whether to use switched capacitors. Switched capacitors are useful for two reasons. First, they can help improve the power factor under heavy load conditions while avoiding a leading power factor under light conditions. Secondly, they can help improve voltages under heavy loading while avoiding over-voltage conditions under light loading. In practice, switched capacitors are usually most useful for controlling voltage concerns.

Leading Power Factor

Load on a power system usually has a lagging power factor, meaning that loads require reactive power support from the source (the exceptions being synchronous motors and generators). Adding capacitors will reduce the amount of reactive power required from the source. If larger capacitors are added, it may create a leading power factor in the area just upstream of the capacitor bank. For example, a capacitor bank which is adequately sized to correct reactive flow at peak load, may generate enough VARs to create a leading power factor under light load conditions. Generally this is not a problem, as the reduced reactive flow will still be a net benefit due to higher reactive flows further up the feeder.

Voltage Problems

When using capacitor banks it is important to be aware of the effect on system voltages. Capacitor banks tend to increase voltages along a feeder. For long, weak feeders this voltage rise may be unacceptable under light load conditions. A strong compact system (typical urban system) can more easily accommodate capacitors without introducing voltage problems.

2.3.7.4 Load Flow

The load flow analysis is the most basic analysis for a power system. Given the system configuration and the loading, it 'solves' the system and outputs the current flows and voltages at every point in the system.

When you run a load flow, you choose the hour, day, month, temperature and scaling factor to use. These [load modeling](#) parameters affect the magnitude of the individual loads on the nodes. The effect of changing hour and day type is dependent on the load curves defined in the [load categories](#). The effect of changing the month or season is affected both by the load curves defined for load categories and for the season defined for the [load elements](#).

The results include voltages at all nodes, current flow and loading on all lines, and losses and loads on the system as a whole and on each [region](#) of the system.

Planning Comparison

A primary use of the load flow is to compare different options on your system. For example, consider if you are planning to add a new customer to your system and there are two possible ways to supply the load. You can run a load flow for each option and compare losses, voltages and feeder loading. Likewise, you can evaluate potential system changes such as conductor sizing, the addition of capacitors, etc.

Load Forecasting

You can also use the load flow for forecasting. The best way to do this is to extend the current system to represent predicted new loads and changes in existing loads. Expected new loads can be represented as point loads (no need to model transformers or to represent each customer exactly). Changes in existing customer loading can be modeled by using [load scaling](#) to change loads on each [category](#) of [load](#) (e.g. increase residential load by 2%, reduce commercial load by 1%) or in specific areas (e.g. increase load in new areas by 2%, keep older parts of a town the same).

2.3.7.5 Load Loss

The load loss analysis calculates the increased loss due to an incremental increase of load at a specified node. You can use this analysis by selecting a particular node and choosing the Analysis > Load Loss command.

The effect of adding additional load on the system depends not only on the size and location of the load, but on how heavily the supply feeder is loaded. Additional load added to the end of an already heavily loaded line will have a much larger effect on losses than load added near a substation to a lightly loaded line.

The results of this analysis report incremental losses as a percentage, which represents the additional real losses as a ratio of the load added. For example, a 3% incremental real loss represents increased losses of 30W for every 1kW of additional load.

Cost Of Losses

In some regulatory environments it is possible to pass along the cost of losses to new customers requesting connection to the grid. This analysis can help determine these costs, and the areas most sensitive to adding new loads.

2.3.7.6 Motor Starting

The motor starting analysis shows the effect of starting a large motor on a system. The analysis works by running two [loads flows](#), one modeling the system without the motor operating, and the other modeling the [motor](#) element under starting conditions (i.e. high starting current and low starting power factor).

The results show the voltage difference between the two conditions. This can help you determine if voltage flicker will be a problem during motor starting. A voltage drop of more than about 3% will create noticeable flicker in lighting.

In the analysis results you can also see the feeder currents and voltages under starting conditions. Checking the currents can help you make sure that protection won't trip when starting a large motor. Checking voltages will make sure that the voltages in the area of the motor are not reduced to such a degree that the motor cannot start, or that other nearby equipment may be affected by the low voltages.

2.3.7.7 Open Point Optimization

The optimization analysis finds changes to the system configuration in order to reduce losses. By

changing the location of open points between feeders or between supplies, it is usually possible to reduce line losses, sometimes significantly so. On a typical distribution system, series losses are around 1-4% of the total power supplied to the system.

The analysis lets you choose whether to optimize existing switch locations only, or whether to perform a complete optimization regardless of existing switches. If you choose a complete optimization, new open points may be placed at locations where there is not currently a switch. This can provide slightly improved loss reduction but at the cost of installing new switches.

Algorithms

There are two choices for optimization algorithm. The default hill climbing algorithm runs substantially faster and in practice provides good results. It also allows you to specify a limited number of switch changes to make. It will recommend the most important potential changes.

The simulated annealing algorithm runs substantially more slowly (may take hours on a large system), but given a sufficiently high accuracy parameter it should theoretically provide the best overall configuration. The drawback (besides the speed) is that this version of the analysis cannot prioritize switch changes. It may recommend changes that have only a very small effect in practice.

Effects

Besides reducing losses, the optimization algorithm tends to flatten the voltage profile of a system, so that the range of voltages along a feeder is reduced. For this reason, the optimization analysis is best used before considering the use of capacitor banks.

2.3.7.8 Phase Balancing

The phase balancing analysis is designed to balance the load on parts of the system that contain substantial numbers of single-phase loads and single-phase spurs. It works by finding the best changes that can be made to a selected part of the system in order to reduce losses. Changes considered include single phase transformers on three-phase lines and single-phase spurs attached to two or three-phase lines.

Selected Items

You can choose which part of the system you want to consider changes to. If you are interested in general system improvements, you may wish to find the best changes anywhere in the system. Alternately, you can select a feeder and then find changes to just the loads and spurs on that feeder.

Spurs Between Feeders

Sometimes a single-phase spur will connect to more than one three-phase feeder and will contain one or more open points so that part of the spur is supplied from one feeder while other parts are supplied from one or more other feeders. The phase balancing analysis gives you the option of specifying whether to allow the analysis to change one part of a spur without changing the phasing of the whole spur. Allowing the analysis to do this gives the most flexibility but may result in a situation where different phases are supplying each side of an open switch (an undesirable situation for operations/safety).

2.3.7.9 Protection Coordination

The protection coordination function of DESS is included as part of the basic package and allows you to show coordination time-current curves for devices in the system. It lets you visually compare curves for protective devices and to measure the time difference between them.

First, select a node and then click on the [Analysis > Protection Coordination](#) command. A time-current graph will be displayed showing all upstream protective devices and their respective protective response.

See information on [Protection Element](#) and [Protection Reference Data](#) for information on how to create protective devices in your model.

To import protection items from another system, you can use the Tools > [Import References](#) tool. DESS ships with a large set of curves defined for common fuses, reclosers and relays.

See the [Protection Coordination dialogue](#) for detailed information on viewing protective curves on a light table using this analysis.

2.3.7.10 SCADA Load Flow

The SCADA load flow is a variation of a standard [load flow](#) which uses real measured data to improve the accuracy of the load flow for individual feeders. A set of real measurement data, such as could be obtained from a SCADA system, is used to dynamically scale loads on a feeder so that the resulting current flows produced by the load flow match the values from the measured data.

For example, the standard load modeling used in DESS might calculate that the flow on a given feeder is 160 amps. Real data might indicate that the flow is actually 175 amps. The SCADA load flow uses the measured values to scale all the loads on the feeder until the resulting load flow results match the measured data (175 amps).

The results of a SCADA load flow include all the normal results for a load flow, plus a report of the size of the scaling factors used to modify the loads in DESS. When running the analysis you can set a threshold value for load scaling. If a larger scaling factor is required than this threshold value, then the measured data is ignored and only the standard DESS load data is used. This can help you identify unrealistic data (either load data or measurement data).

The Tools > [SCADA Measurement Data](#) dialogue is used to enter or edit data for this analysis.

SCADA Data

Data for use in this analysis can be obtained as an export from a SCADA system, and is typically available for substation feeders and sometimes from automated switches throughout the system. The SCADA load flow can use all of this information, even where measurements are cascaded (i.e. one measurement area includes another measurement area) or when measurement data is available in mixed units (e.g. Amps, kW and kVAr, kVA).

Configuration

As with any analysis where you are comparing real and modeled data, it is important to ensure that the system configuration used in DESS when running this analysis matches the configuration on the system when the measured values were obtained. If this is not the case, erroneous scaling and results will occur.

2.3.7.11 Specific Short Circuit

The specific short circuit analysis is used to analyse a single fault condition on a specific node in detail. The results include fault currents and voltages on the lines and nodes leading from the fault to all sources of fault current.

This analysis is useful in determining how much fault current is contributed from different sources (i.e. from looped supplies or from generators or motors on the system). The results for fault voltages due to the fault also provide information to help determine whether undervoltage protection will trip due to the fault.

The parameters for the analysis include:

- phase - ground faults
- phase - phase faults
- phase - phase - ground faults
- three phase faults
- the phasing of the fault
- any additional fault resistance (to simulate non-bolted faults)

2.3.7.11.1 General Short Circuit

The short circuit analysis helps you determine the system response to faults. This type of analysis is required in order to ensure that equipment such as breakers and switches are rated for the maximum fault current that may occur and that protective devices will operate for all fault conditions.

It will provide information for fault currents and fault impedances for a complete section of the system. Results are provided for either the entire system or all nodes selected when the analysis is run.

Types of faults considered are:

- phase - ground faults
- phase - phase faults
- phase - phase - ground faults
- three phase faults

For each type of fault the results specify the expected current flows for a solidly grounded (worst-case) fault.


2.3.7.12 Reports

In DESS, after you have run an analysis you have the option to view several reports. These reports show data related to the analysis that has just most recently been run.

Each report is available through the Reports section on the Analysis tab in the ribbon. There is a different set of reports available to view depending on which analysis was just run.

The reports are very intuitive and easy to use. Reports can be limited to the currently selected portion of the system, or the whole. Most reports will have a summary of the analysis properties in a drop down at the top of the report. This will summarize the analysis parameters and give a general overview of the results. Some reports will have graphics, while others will be a table of information. The information tables have the ability to filter the information displayed by almost any criteria.

All reports have the ability to be exported to CSV.

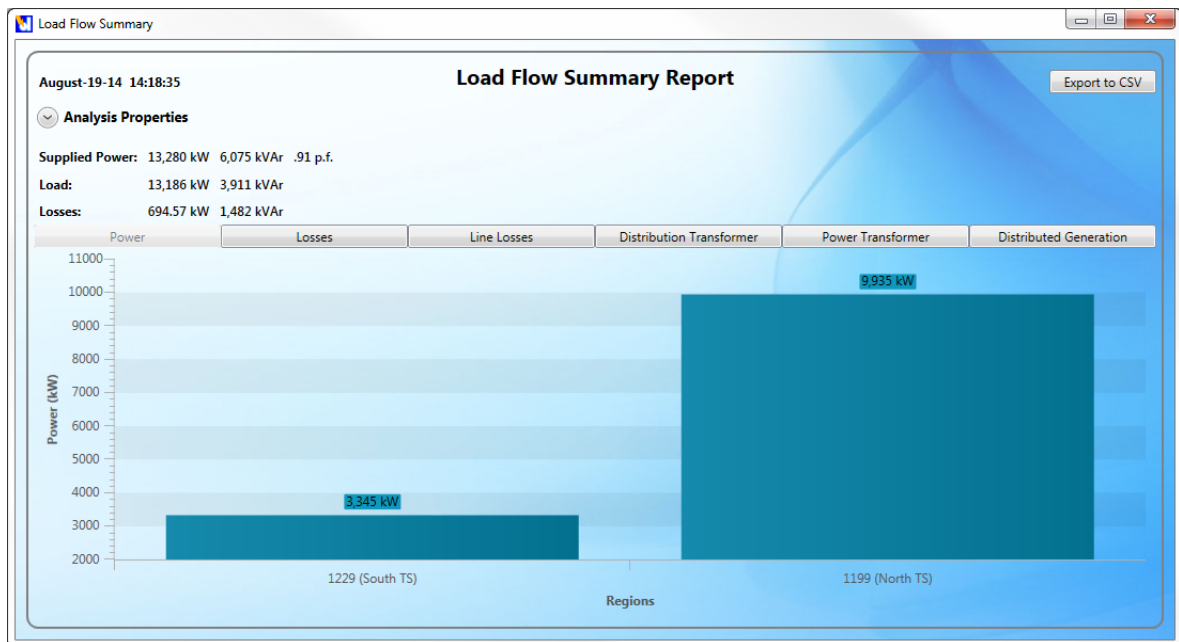


This is a power transformer results page after running a Load Flow analysis.

2.3.7.13 Results

After you have run an analysis in DESS, you have a set of results which contains the analysis output. You can explore these results by using the tool tips on the nodes or lines, visually using [node and line themes](#) and as text by using [reports](#). You can save results in a variety of formats, and close them when they are no longer needed.

Saving Results

The results can be saved for future reference, for export to a database or spreadsheet, or use in a report. To save the results simple select Save Results from the File menu. This will bring up a dialogue where you can select more specifically what you want to save the results as.

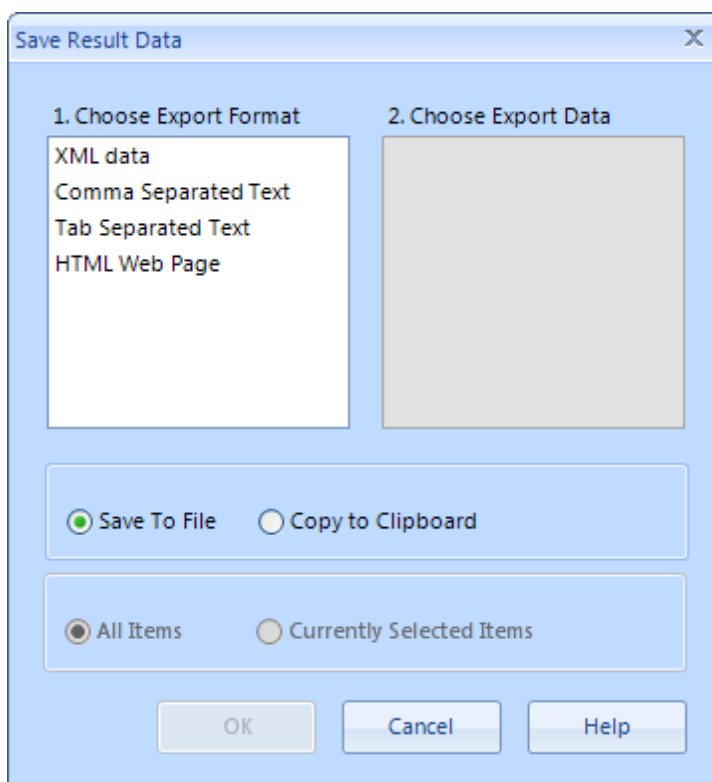

You can select what information you need to save using this dialog and what format to save it in.

The left list pane contains a list of formats which the results can be saved to. You can only select one of these options. You can also select whether you want the information copied to file or to the clipboard.

XML data is a popular format for exchange with other software. Tab and comma delimited text are also useful for export to a database or spreadsheet. The HTML web page useful for viewing. If you wish to copy result data to a spreadsheet, the easiest way to do so is to save the result data as Tab Separated Text and Copy to Clipboard. You can then use the Paste function in your favorite spreadsheet (e.g. Excel or Open Office).

If you currently have a section of your system selected before you use this tool, and you choose to export line or node data then the bottom options will become available. You can have all of the nodes or lines information exported or you could have only the area which is currently selected.

Close a Result

If you no longer need the result which is currently open in your system then you can close it, returning your system to its normal state by using the command Analysis > Close Result. This will remove any themes associated with the results and remove any extra tool tip information on the nodes and lines.

3 How to

This section of the help manual is designed to help you perform common tasks related to DESS. The articles are organized from basic features to more advanced. eg. zooming and panning will come before checking for errors. In order, this section contains:

1. [Zooming and Panning](#)
2. [Selecting](#)
3. [Tracing](#)
4. [Creating a Node](#)
5. [Creating a Line](#)
6. [Deleting Nodes and Lines](#)
7. [Moving a Node](#)
8. [Editing Node and Line Properties](#)
9. [Creating and Modifying Elements](#)
10. [Creating and Deleting Layers](#)
11. [Using Layer Properties](#)
12. [Moving Between Layers](#)
13. [Creating a Power Transformer](#)
14. [Undo and Redo](#)
15. [Using Tool Tips, Labels and the Legend](#)
16. [Editing Themes and Styles](#)
17. [Moving the Docking Window](#)
18. [Changing Switches](#)
19. [Finding Nodes](#)
20. [Editing Reference Data](#)
21. [Modifying References](#)
22. [Checking Your System For Errors](#)

VIDEOS

How-to Videos are available online at: <http://www.essexenergy.ca/dess/support/videos.cfm>


3.1 Zooming and Panning

There are two primary tools which are used to change the [map view](#). The first is Zooming and the second is Panning.

At any time, you can fit the entire system back into your [map view](#) by going to [File > View All](#).

Zooming

You can zoom in or out by either using a scroll wheel on your mouse, or by using the magnifying glass icons on the [Editing](#) Tab.



When you Zoom In, the [system](#) will expand centered on where your mouse pointer is. This is useful if you wish to look with more detail at a particular feature. When you Zoom Out, you will zoom out based

on the position of your mouse pointer, and the system will decrease in size.

As you experiment with these features you will find that you can also use the zoom tools to view a different area of the map by zooming out from one area and then zooming in to another.

Panning

Panning is the movement of the entire system in a particular direction. If you select the select tool on the toolbar, you can then click, hold, and drag the map around. If you drag the mouse to the right, the entire map view will move right. When you release the mouse button the map will redraw, allowing you to see a new section of the system. The same thing can be achieved when using a different tool on the toolbar by clicking and holding the scroll wheel on the mouse.

This does not re-size the map in any way, and does not modify any information. It only adjusts your view so that it is easier to see your system.




Hint:

You can pan around the screen without the pan tool if your mouse has a middle button or a scroll wheel. Simply click and hold the middle mouse button to pan around the screen as per the pan tool.

3.2 Selecting

In DESS, selecting items is a critical skill. Selecting refers to using one of a variety of tools to cause a [node](#) or a [line](#) to be highlighted in red. These selected items are then available for certain utilities and [analyses](#) to be used or run. Many items on the Tools menu are set to become operable when something is selected. Nodes or lines can be only modified or analyzed using those commands when they are selected.

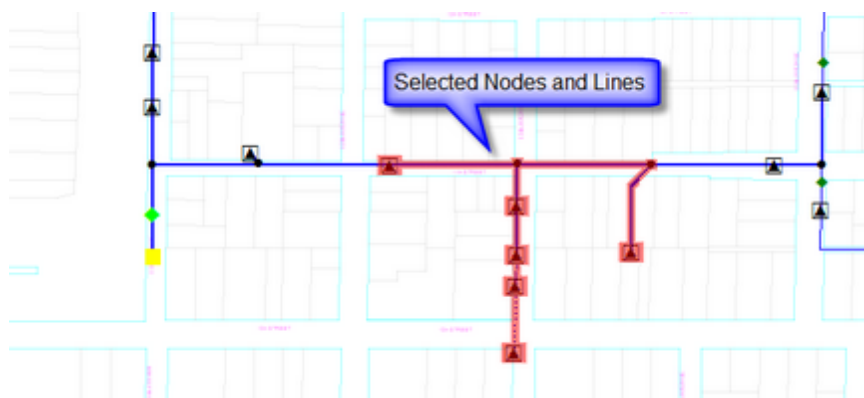

Nodes or lines highlighted in red are selected.

There are three general ways of selecting, but these are not the only ways to select. You can also select through many other methods like [tracing](#), [finding nodes](#) and custom selection, and many other methods. This section is specifically dedicated to explaining how to use the three basic methods of selection. These three tools are the Select tool, the Rectangle Select tool, and the Polygon Select tool. These tools can be found on the tools section of the [Editing](#) tab.

Two other selection methods, Inverting selection and Custom selection are listed below the three basic methods. These are slightly more complicated than the basic three selection tools. They are very useful for a few specific jobs, and they are worth learning how to use because they can select things


which would be otherwise impossible or very difficult with normal selection methods.

Overall Selection and Removing a Selection

Apart from the tools listed below, to select everything in a system you can use [Editing > Query > Select All](#) from the ribbon.

To deselect anything that is currently selected, use any one of the three basic selection tools listed below and click (or double-click) on a blank section of map.

Select Tool



This is the most common tool that is used in DESS, and this is always the tool which is selected by default whenever you start DESS.


In order to use this tool it must be activated by clicking on the icon on the toolbar. By clicking on a single node or line you can select it.

Note that if you select another node or line the original node or line will become unselected. This means that normally, only one node or line can be selected at a time with this tool.

However, by holding the Ctrl key you can select multiple nodes and lines together. As soon as you push the Ctrl key a small black '+' sign will appear. When this '+' sign is visible, all nodes or lines that you select will be selected in addition to any currently selected nodes or lines.

Like the '+' sign, there is also a '-' sign which appears when you hold the Shift key. When you click on a selected node or line while holding Shift the node or line will become unselected.

This Select tool can select any node or line, regardless of which layer the item which is being selected is located on.

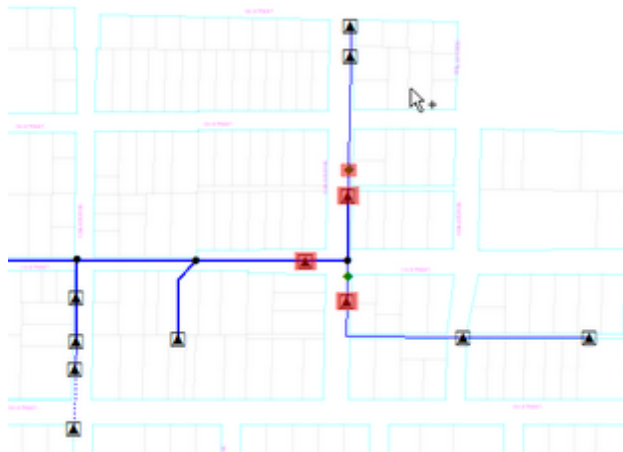

You can select more than one node or line at a time with the Select tool by holding the Ctrl key.

Rectangle Select Tool

Rectangle Select


The Rectangle Select Tool acts much like the Select Tool, except that instead of clicking on a node or line to select it, you draw a rectangle around any items you want selected. The Rectangle Select tool only selects items which are on the current layer.

To use the Rectangle Select tool simply click and hold the left mouse button where you want one of the corners of the rectangle to be.

While still holding the mouse button, move your pointer to where you want the opposite corner of the rectangle to be located (click and drag). As you do this a dotted line rectangle will be drawn from the location where you first clicked to the current position of your pointer.

When your mouse is in the location where you want the rectangle to end, release the mouse button.

The rectangle will disappear and all nodes and lines which are completely inside the rectangle will be selected.

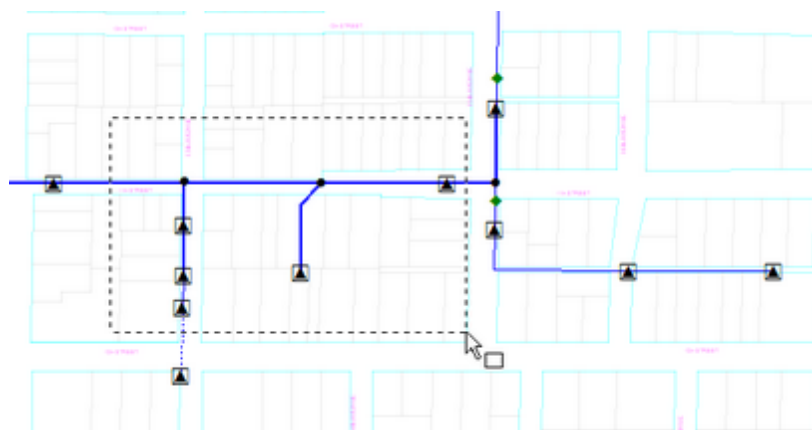


Anything completely inside the rectangle will be selected.

Polygon Select Tool

Polygon Select

This tool is the most versatile of the three toolbar selection tools. Basically what you do with this tool is draw a polygon around the area containing the items which you want to select. Each click of your mouse is a vertex of the polygon, with the first click as your first vertex.


To end your shape you double click. When you do this DESS draws a line from where you double clicked to your initial vertex, selecting anything inside the newly created polygon. Like the rectangle select tool, this tool only selects items on the current [layer](#) which are completely inside the polygon area.

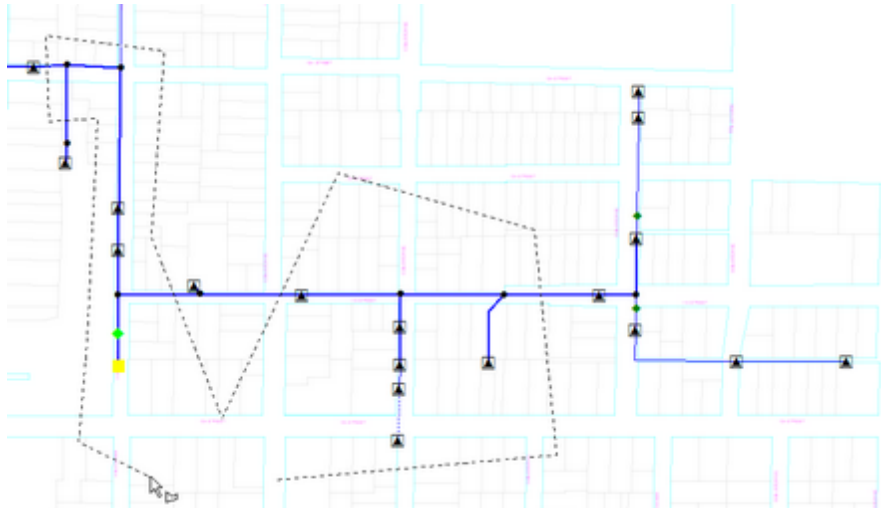

The polygon selection tool allows you to make very customizable and flexible selections.

Inverting Selection

Inverting your current selection is a very useful and time saving task. You can access this tool from the [Editing](#) tab via [Query > Invert Selection](#). When you activate this tool anything which is currently selected becomes unselected, and anything which was unselected is now selected. This is useful if you wish to select everything except a few specific nodes or lines. In order to do this you would select the nodes or lines which you do not wish selected. Then you select Invert Selection from the Query menu. Everything in the entire system will be selected except those specific nodes.

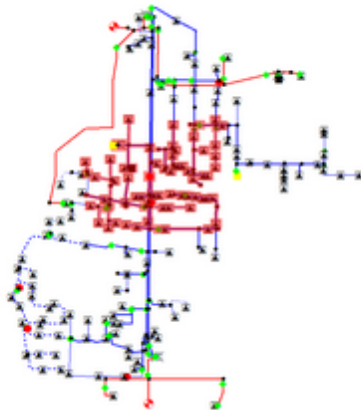

Selection before inverting




Selection after inverting

Although the selection in this is large, it illustrates the principle of inverting selections. Inverting can be done any number of times in a row. You could run an Invert Selection on the system shown after inverting, above, and you would end up with the original selection.

Custom Selection

The [Custom Selection dialogue](#) allows you to specify specific criteria which are used to select nodes and lines in the current system. To use this you begin by specifying whether you want to select nodes or lines, and whether you wish to select them from the active layer, currently selected items, or the complete system.

You can also select whether or not you want these nodes to be added to the current selection. If do not want these to be added to the current selection and you have a current selection, it will become unselected and the nodes or lines designated in the dialogue will replace them. Note that you cannot select both nodes and lines at the same time using this dialogue.

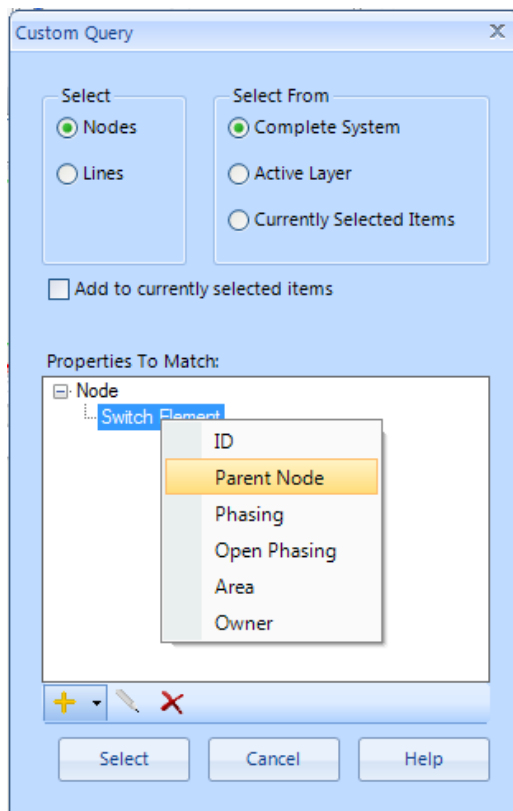

This is the custom selection dialog. Using this you can select very specific items throughout your system.

Once you have selected the general parameters on the upper half of the dialogue, you can specify more specific properties below, listed under 'Properties To Match'. To add a criteria you can either select a topic and press the yellow plus, or right click on one of the topics already in the dialogue. Either way a list will appear which has a list of available topics which can be selected. Each of these is now a criteria for the selection. You can right click on any criteria to bring up a further list of options. In this manner you can set the query as detailed or as specific as necessary.

ex. As shown in the image above:

1. You select Nodes in the select topic box in the top left. This means that the dialogue will only select nodes.
2. You set the 'Select From' category to only select from the active layer.
3. You want the items which are to be selected by this dialogue to be added to the nodes and lines which are already selected and so you enable the check-box which says 'Add to currently selected items'.
4. Now to add a criteria right click on the word node below and select the criteria which you want, in this case a switch [switch element](#).
5. You can add more detailed criteria if you need to (not shown in this example).
6. Click the Select button, the dialogue will close. All [nodes](#) with [switch elements](#), located on the [current layer](#), will be added to your selection.

This is a very useful and powerful selection method once you understand how to use it. While it is not effective to use for common selection it can perform tasks which are almost impossible, or incredibly time consuming to perform with normal selection methods. Some examples of the types of selection possible using this tool are:

- select all nodes with open switches
- select all nodes with 50kVA transformers on the 22kV layer
- select all r phase single-phase lines containing 1/0 CU conductors

3.3 Tracing


The trace commands allow the user to trace along all connected [lines](#) and [nodes](#) in one of several ways. Primarily the Upstream Trace and Downstream Trace commands are used, although the Custom Trace feature allows you to select the specific type of trace needed. Trace Secondary is used to trace the meter layer downstream of the selected [distribution transformer](#). The Network Trace is also useful in some circumstances. These commands are available in the Query menu in the [Editing](#) tab and some are available through right-clicking on a node or line.

To perform a trace you must first select a node or line you wish to trace from, and then select the trace which you want to perform.

Following are descriptions of each of the five types of tracing.

Trace Downstream

This tool works when a [node](#) or [line](#) is selected. The selected node or line will be the reference point for the trace. From the selected node or line, DESS selects any lines or nodes connected to that line, but only away from the [source](#). The trace stops at open switches.

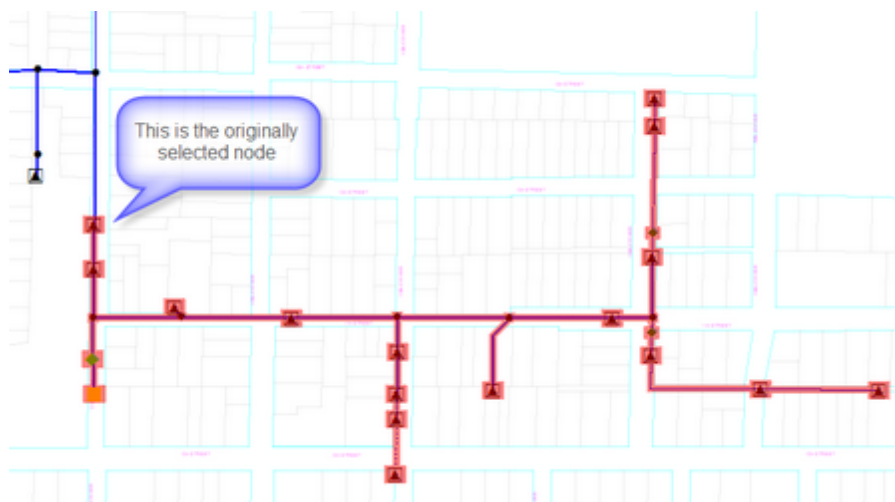

From the initially selected node, all nodes and lines which are downstream (away from the source), and connected to the original node are selected.



Hint:


If a node or line is de-energized (not connected to a supply), you cannot trace from it. Also, if your system contains closed loops (networked as opposed to radial), up and downstream traces become ambiguous so you may not get the results you expect. Use the

[Editing](#) > Query > Find Disconnected and [Editing](#) > Query > Find Loops to identify these conditions

Trace Upstream

Tracing upstream is the opposite of tracing downstream. As with the downstream trace you must select a node or line in order to use this tool. All the nodes or lines in a direct line between the selected item and the supply point will be selected. The trace will stop at either the [power transformer](#) LV supplying the selected node, or at the node containing the [source](#) element.

Unlike trace downstream, no branches are selected as part of the upstream trace.

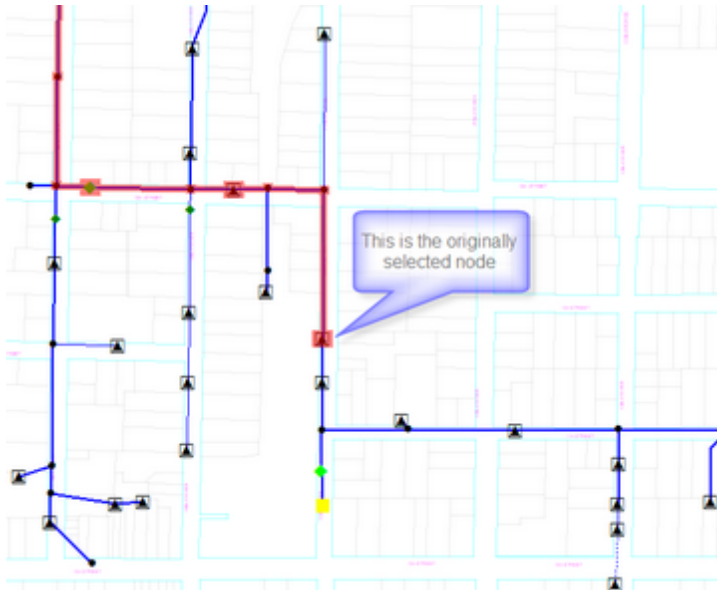


Tracing upstream is the opposite of tracing downstream.

Custom Trace

Custom Trace contains options from both upstream and downstream traces, as well as a few which are not contained in either of the two basic traces.

Custom Trace allows you to set whether you wish to trace upstream or downstream. It also allows you to select whether or not you want to trace connectivity over all layers, or by default only the layer where the currently selected node is. The custom trace also allows you to trace [connectivity](#) on lines using specific phasing.

The Custom Trace feature also allows you to either select only nodes, only lines or both. The trace will still be performed as normal, it is only the specified parts that are selected, whether it be only nodes, only lines or both nodes and lines.

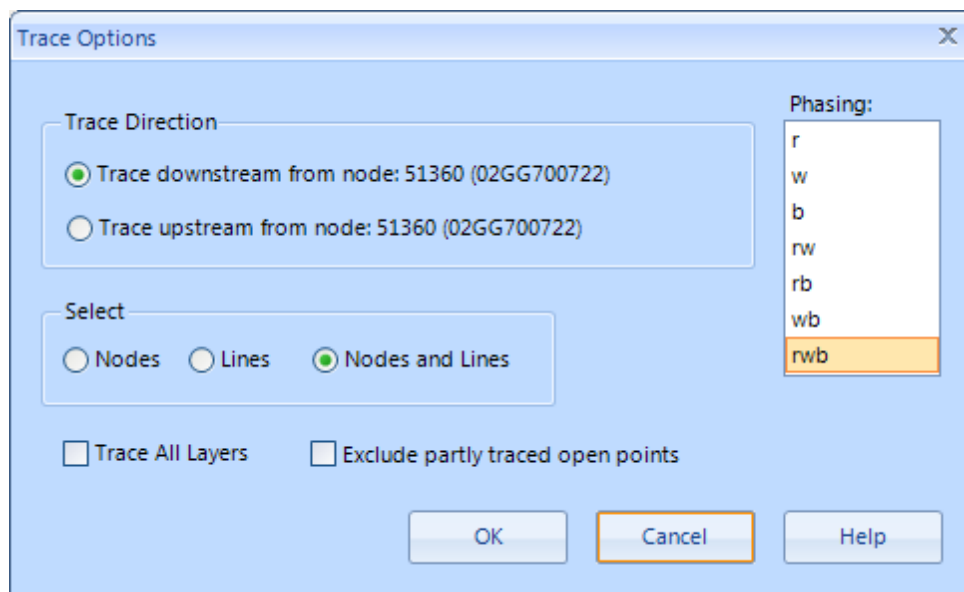

The Custom Trace Dialog is useful for setting specific tracing settings.


Finally, if you select two or more nodes, the Custom Trace allows you to select all items between the selected items. This is a trace from the node closest to the supply, and stopping at the other selected nodes. You can only use this feature when all the selected nodes are part of the same connected section of system.

Secondary Trace

The Secondary Trace can be very useful for quickly finding all meters attached to a distribution transformer.

Network Trace

The Network Trace selects all nodes and lines connected to the selected node, stopping only at open switches and at power transformers. You can select more than one node or line before using this trace method. This tool is useful for selecting a disconnected section of system which cannot be selected using the normal tracing tools because it is not energized.

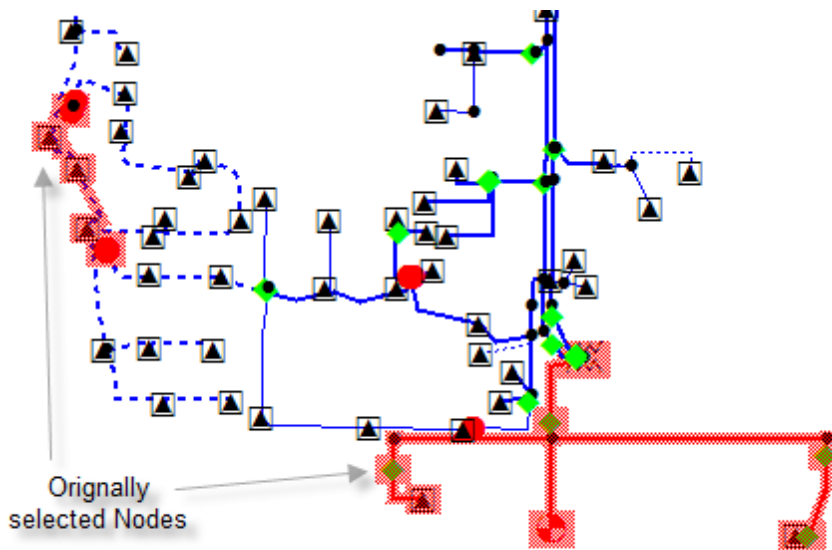

Network trace selects an entire network.


3.4 Creating a node

Creating a [node](#) is an easy, and yet very fundamental task. To create a new node in your system:

1. Select the new node tool on the [Editing](#) tab. Alternatively, you can right click anywhere on the system.

The new node tool

2. Click on the location in the [map view](#) where you want the new node to be placed. If you don't get it just right, you can always [move the node](#) later.
3. If you placed the node near a [line](#) a pop-up will appear and ask you if you want to insert the node into the line (this splits the line and use the newly created node to connect the two halves).

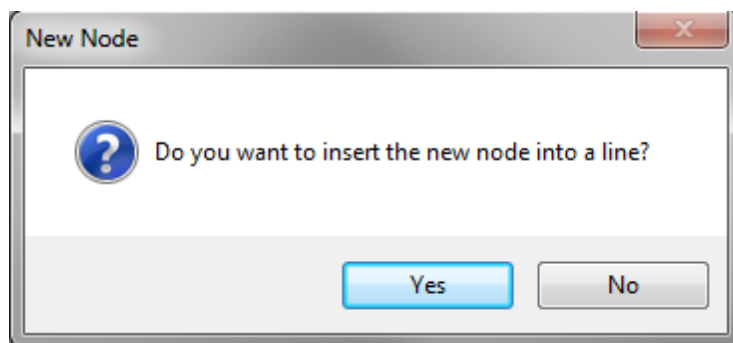

4. The [Node dialogue](#) will appear and you will have the option to enter information about the node. You do not need to fill in any information immediately if you do not want to, the node will still be created, and this dialogue can be accessed later so you can edit the data by double-clicking on the node with the [select tool](#).

3.5 Creating a line

Creating a line




To create a new [line](#) in your system:

1. Select the create new line button on the [Editing](#) tab.

27 seconds

The new line tool

2. Click on a [node](#) in the map view to start the line (all lines must be connected at both ends to nodes).
3. You can click at any point where you want to make a vertex in the line. When you do click to make a 'bend', a dotted line will be drawn from the point where you just clicked to the last place where you clicked, or the node if you haven't clicked yet. In other words, the location where you clicked will act as an anchor for where you click next.

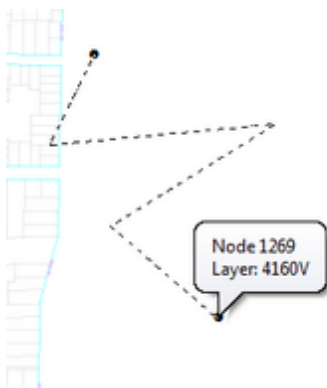

Creating a new line. You can click to make a bend or vertex in the line.

4. When you want to end your new line, double click on the end node.

Hint:



If nothing happens when you click on a start node or double-click on an end node, the problem may be that the nodes are not on the [active layer](#) (i.e. - you're drawing a line on the 4kV layer but trying to attached the ends to nodes on the 27kV layer).

5. The [Line Properties dialogue](#) will appear. You can type in information here about the line you just created, or you can close it and fill it in later. If you are extending an existing line, the default for phasing and conductor type will be set the same as the adjacent line. Unlike nodes, you cannot move lines. You can only move the nodes attached to them.

Hint:



Note that if you have multiple nodes, you cannot draw a line through multiple nodes and have them inserted. If you do this they will not be inserted into the line. You must draw a line from each node to the next one in the sequence.


3.6 Deleting Nodes and Lines

To remove a [node](#) or [line](#) you must first [select it](#). Once you have it selected you can remove it either by pressing the delete button on your keyboard or pressing the delete button on the [Editing](#) tab. Both methods accomplish the same thing. If you remove a node, all lines attached to that node will also be removed. This prevents hanging lines. When you remove a node you also remove all [elements](#) on that node. You can [Undo](#) a delete action if necessary using the Undo/Redo commands.


3.7 Moving a node

To move a node use click and drag:


1. Select the move node tool on the [Editing](#) tab.



2. Click and hold the left mouse button over the [node](#) you want to move.
3. Still holding the left mouse button, move your cursor to where you want the new node to go.

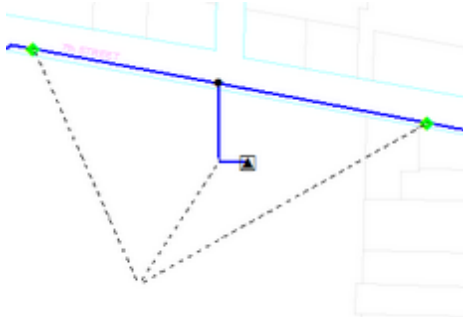


Click and drag to set the new position

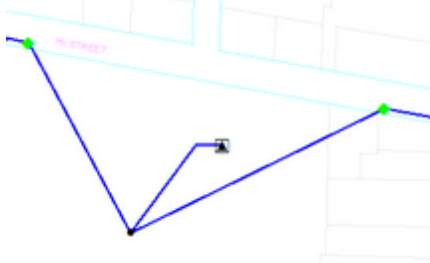

**All lines connected to it will
automatically redraw.**

4. Now release your mouse button and the node will be where you released the button.
5. All of the [lines](#) attached to the node will redraw themselves automatically, and the node will keep all of the same properties that it had before (except for length which will be modified).

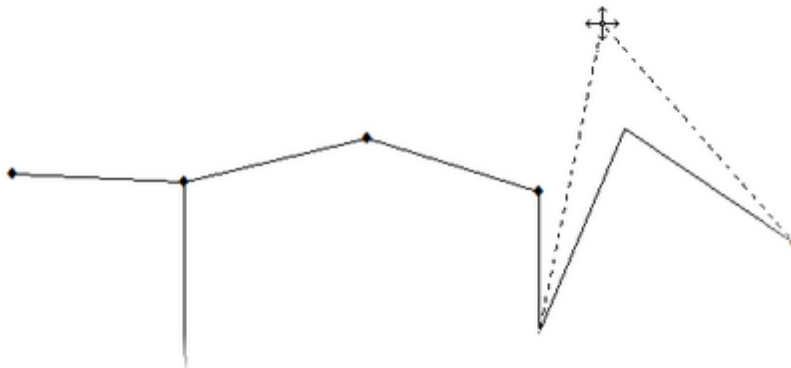

You can move line vertices as easily as nodes by using the Move Node tool.

Moving Lines

The Move Node tool is also able to move line vertices. This acts exactly like moving a node, except that you click and hold on a vertex of a line to move, instead of a node.

3.8 Editing Node and Line Properties

To edit a [node's](#) or a [line's](#) properties you must first bring up its respective Properties dialogue. This is called [Node Data](#) for nodes and [Line Data](#) for lines. You can bring up these dialogs in several ways. The simplest method is to double click on the node or line that is to be edited while the [select tool](#) is active. Alternately these dialogs can be brought up by selecting a node or line and then selecting the edit tool on the [Editing](#) tab.



The Edit Tool

Despite the fact that the pencil has no eraser, you can [Undo](#) any changes you might make.

Nodes

Once you have activated the edit function for a node, the [Node Data dialogue](#) appears. In this dialogue you can view and edit the [elements](#) on that node, the name and description of that node, as well as view the lines connected to that node.

The 'Node Data' dialog box is shown with the following fields and tables:

ID: 15824 Layer: 27.6 kV ☐ Include In SLD

Name: FS7H145

Description: NC

Attached Elements:

Type	Description	ID:
Switch Element	Closed	746
Protection Ele...	S&C SMU-20 20K (25, 34.5 kV)	310

Buttons: Add, Edit, Delete

Connected Lines:

Other Node	Conductor	Phasing	Length	ID:
TX7P429 (46489)	2/0 AI 27600V Unde...	r	116.2...	5607
10879	1/0 ACSR 27600V O...	r	13.532	2528


Buttons: OK, Cancel, Help

You can double click on any element or line in the node properties dialogue to bring up that line's or element's properties dialogue. You can see each of these [element dialogs](#) in the Reference Guide.

In this dialogue you can also type in the nodes name or a brief description to help identify it. Typically the Name field is used for key IDs, such as transformer ID or switch ID. The Description field can be used for anything else, such as address, customer name, etc.

Lines

The line properties dialogue can be accessed in the same ways as that for the node. You can double click on a line with the select tool or select the line and press the edit button. The dialogue can also be accessed through the Node Data dialogue.

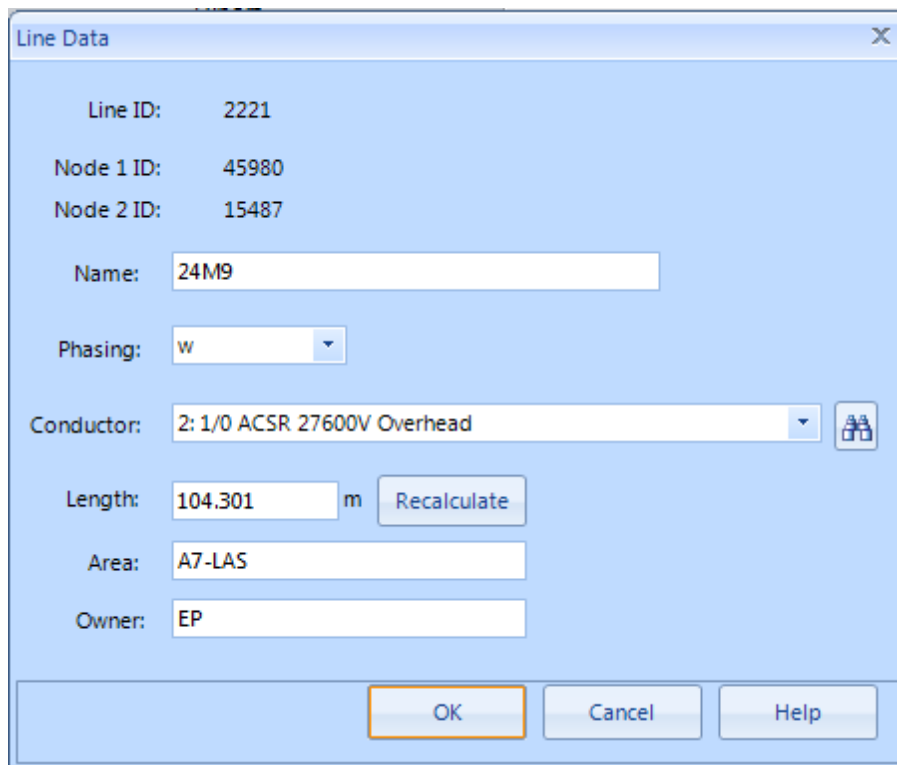The image shows a 'Line Data' dialog box with a light blue background. It contains several fields for editing line properties. At the top, 'Line ID' is 2221, 'Node 1 ID' is 45980, and 'Node 2 ID' is 15487. Below these, the 'Name' field contains '24M9'. The 'Phasing' field is a dropdown menu set to 'W'. The 'Conductor' field is a dropdown menu set to '2: 1/0 ACSR 27600V Overhead', with a small icon to its right. The 'Length' field contains '104.301' followed by a unit 'm', and a 'Recalculate' button is next to it. The 'Area' field contains 'A7-LAS' and the 'Owner' field contains 'EP'. At the bottom right are three buttons: 'OK', 'Cancel', and 'Help'.

The [Line Data dialogue](#) contains the name of its two nodes, its length, ID, phasing, conductor and name. You can edit the Name and Length by simply typing in the desired content. The Phasing and Conductor are easily changed with a drop down menu. The find icon to the right of the Conductor allows you to search for the conductor that you want using the [Find Conductor dialogue](#).

3.9 Creating and Modifying Elements

Most [elements](#) are created from the [node dialogue](#), although [power transformers](#) are created by other means. Some elements cannot be added to the same node together. A list of these is available in the [elements](#) section of the [Users Guide](#). A description of each element is also available in the same location.

Creating a New Element

To create a new element, merely bring up a [Node Properties](#) dialogue, either by adding a new node or by double-clicking on an already existing node. Select the 'Add' button in the Attached Elements section of the dialogue.

The dialog box is titled "Node Data" and contains the following fields and sections:

- ID:** 15824
- Layer:** 27.6 kV
- ☐ **Include In SLD**
- Name:** FS7H145
- Description:** NC
- Attached Elements:**

Type	Description	ID:
Switch Element	Closed	746
Protection Ele...	S&C SMU-20 20K (25, 34.5 kV)	310
- Buttons:** Add, Edit, Delete
- Connected Lines:**

Other Node	Conductor	Phasing	Length	ID:
TX7P429 (46489)	2/0 AI 27600V Unde...	r	116.2...	5607
10879	1/0 ACSR 27600V O...	r	13.532	2528
- Bottom Buttons:** OK, Cancel, Help

A drop down list of available options will appear. You can then choose the type of element which you want to add. A dialogue will appear asking you to enter information about the element which you created.

Modifying Pre-Existing Elements


All existing elements are shown in the Attached Elements list. By double clicking on any one of these you can bring up its properties dialogue and edit any information related to that element. You can also select an already existing element and press the edit button to bring up that element's dialogue box. Each of the respective property dialogs are covered in [Reference Guide > Element Data Dialogs](#). You can remove an element by selecting the element which you wish to remove and pressing the Delete button on the dialogue, located under the list of elements, and to the right of the edit button.

3.10 Creating and Deleting Layers

[Background](#) and [Electrical Layers](#) are the two different kinds of layers that can be created in DESS. They are both primarily accessed from the [docking window](#) to the left of the [Map View](#). They are available under [the 'Layers' tab](#).

Creating Electrical or Background Layers

To create a new electrical or background layer you can either use the buttons at the top of the [Docking Windows](#) or you can right click on the appropriate type of layer.

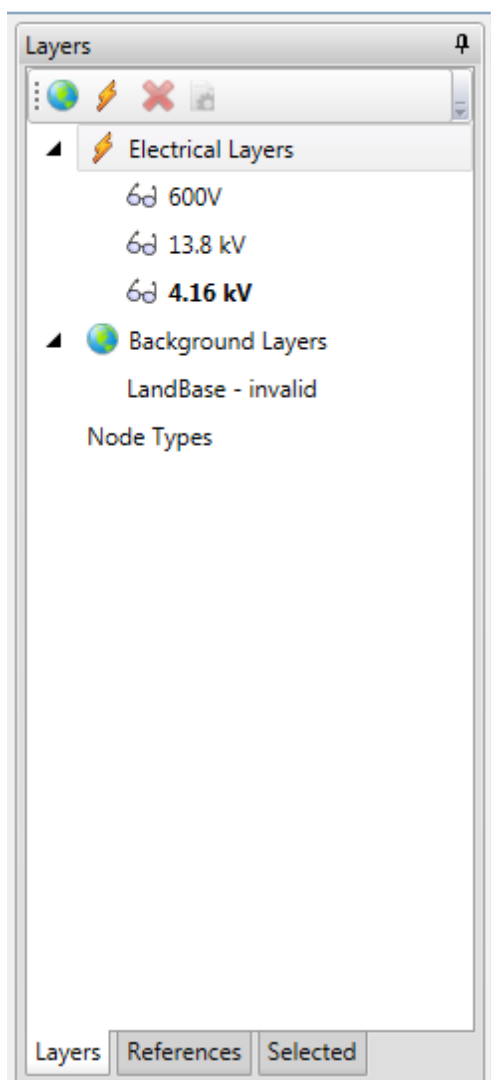

There is a button to add an electrical layer and a button to add a background layer. The button with a lightning bolt with a yellow star is the 'Add New Electrical Layer' tool. The button that looks like a world

is the 'Add Background Layer' tool. Alternately you can right click on either of the headings: 'Electrical Layers' or 'Background Layers'. This brings up a menu where you can select to add the layer respective to the heading.

Once you have selected the add layer button in one of the above listed methods a dialogue will appear with all of the applicable properties of that type of layer. These properties are covered in much more detail in the [Layer Properties](#) section of the How to section.

Deleting Layers

Deleting Electrical Layers is very simple. you select the layer which you want to remove, and remove it through one of two different methods. You can either click on the red X on the top of the docking window, or right click on the layer to be removed, and select Delete Layer from the menu which appears. Note that if you remove a layer all nodes and lines which are on that layer will be removed. This is an action which you can always [Undo](#) if needed.


Deleting a Background Layer is much like deleting an electrical layer. you select the layer you wish to remove and press the red X on the top of the Layers tab. You could also right click on the Background Layer and select Delete Layer. Deleting a background layer does not delete the file which you imported the background layer from. You can [Undo](#) this delete action.

3.11 Using Layer Properties


[Layers](#) have a number of key properties. An understanding of them is fundamental to using DESS effectively.

The Layer Properties dialogue and Context Menu


This dialogue can be accessed by right clicking on the layer in the layer list and selecting the 'Edit Layer Properties' option. You can also open this dialogue by selecting the layer to edit, and then clicking on the Edit Layer Properties button on the top of the [Layer Docking Window](#). This dialogue contains all of the settings that are available for a layer in DESS. Some of the layer properties (selectable, visibility) can also be set directly from the pop-up menu.

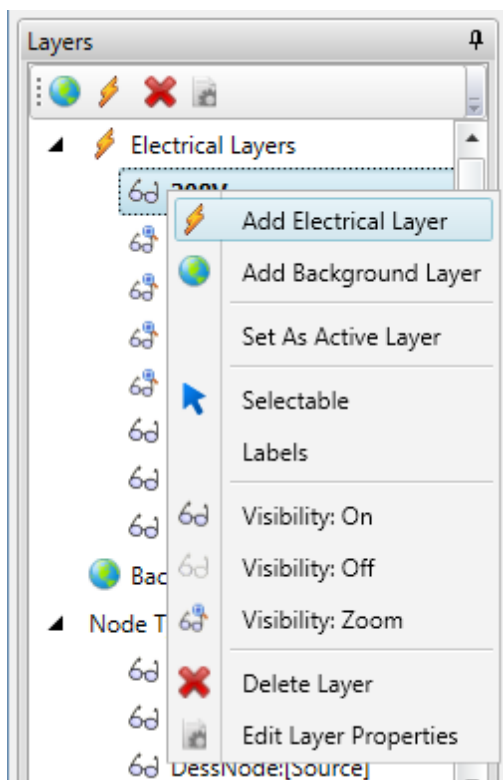

Right clicking on a layer brings up a list of editable options

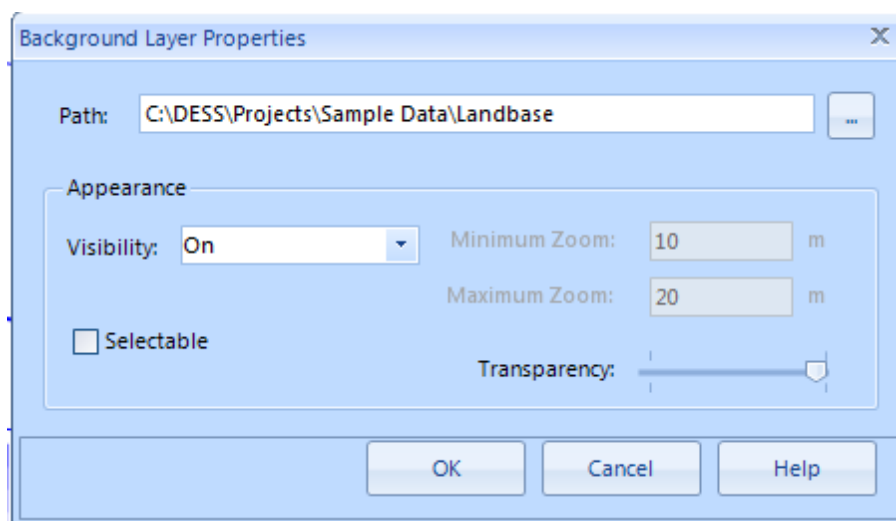

Background Layer Properties Dialog

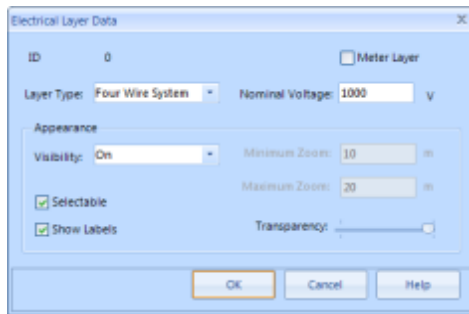

Electrical Layer Properties Dialog

Selectable

A layer can be set to Selectable or non selectable, which controls whether you can select the [nodes](#) and [lines](#) on that layer or not. This option can be accessed either by right clicking on the layer and selecting whether or not it is selectable. This property can be set either from the pop-up menu or from the checkbox in the properties dialogue.

This only affects whether a line or node is selectable or not with the basic selection tools. You can still double click on any node to bring up its properties dialogue and edit its information.

Active

There can only be one [active layer](#) at any given time. This layer is identified in the docking window as the layer with blue text. This layer is the one at which all new nodes and lines are created at. You can only have one active layer at any given time. You can change which layer is currently the active layer by right clicking on the layer and selecting 'Set As Active Layer'. You cannot edit this property in the [Layer Properties dialogue](#).

Transparency

You can set a layer to be partially transparent. This option is especially useful if you want to be able to distinguish easily between layers, while having all of the layers remain visible. The transparency option is only available from the Properties dialogue. It is shown as a slider in the bottom right corner of the dialogue. The farther to the right that the slider is, the more visible a layer is, with a default of fully visible. The further to the left that the slider is, the less visible the layer is. This allows you to easily distinguish between layers. Any layer with transparency is as fully functional as if it had no transparency option set.



With transparency it is easy to distinguish between layers. In this example, the 4.16 kV layer is partially transparent.

Visibility

Visibility is simply whether or not a layer is visible or not. This can be set both by right clicking on a layer, and through the properties dialogue. Visibility Off makes the layer invisible. You cannot edit the layer when it is set to this. Visibility On is the default and has the layer shown normally. Zoom Visibility is a special case of visibility, it is discussed below.

Zoom

Zoom Visibility (sometimes called 'de-cluttering') is the ability to set a layer to be visible only when you are zoomed into or out to a certain range. The levels can be set in the properties dialogue using two options. Basically the layer will be visible between the two listed values. for the sake of example, say that minimum zoom level is set to 0m (or left blank) and the maximum zoom level is set to 10000m. If your screen width is between those two numbers then the layer is visible. Once you have zoomed out far enough, and your screen width is greater than 10000m, the layer disappears.

This allows for several different possibilities. You can have your layer disappear once you zoom out, appear when you zoom out, or only appear within a specific range. All of these possibilities can be set by adjusting the minimum and maximum values. Any zoom level which is higher than the minimum will be visible, while any zoom level which is lower than the maximum will be visible. You can see what the current zoom level or width is by looking at the status bar below the map on the far right. The width on the map is shown in whatever units you are using in your system. You can use this as a reference when setting the zoom settings for a layer.

Typically the zoom feature is used to remove clutter in your system. By setting the lower voltage layers or detailed street maps to disappear when you zoom out, you can see the overall shape of your system, without all of the clutter which is normally caused when you zoom out to a substantial distance.

Background File

This is the file from which the [background layer](#) draws its image. This is not available for electrical layers because only background layers require a file. You can click on the button with three dots, to the right of the file path, to bring up a dialogue which allows you to select an image for the background layer. The current file path is displayed in the text box at the top of the dialogue. When choosing a new file, you can choose from any of the map formats supported by DESS (.shp, .tab, .dxf). The map must already be stored in the correct coordinate system. Unlike some GIS software, DESS does not convert between projections on the fly.

Labels

You can specify whether you want to see labels for nodes on electrical layers. you can set this from the electrical layer's properties dialogue. You can activate or deactivate this ability by clicking on the bottom left-most check-box in the properties dialogue which is labeled as 'show labels'. This can make identifying nodes and lines significantly easier to handle. Creating and editing [rules for labels](#) is handled using the commands on the main menu [Analysis](#) tab.

Voltage


For Electrical layers only, you must set the nominal voltage. This is the phase-phase voltage at which all nodes and lines created on this layer will be set to. You can change this value later, however it cause cause some problems with your system (i.e. wrong transformer, source and conductor data), which would have to be fixed.

3.12 Moving Items Between Layers

The move between layers tool allows you to change a series of [nodes](#) and [lines](#) from one layer all to a different [layer](#). This tool is accessible from the [Editing](#) tab as [Change Layer](#).

In order to use this tool you must have a group of nodes and lines [selected](#). Once you have a selection, access this tool from the Tools Menu. A dialogue will appear where you can select which [electrical layer](#) you want to move the selected nodes and lines to.

Note that this tool could easily cause errors in your system, particularly when moving a large number of nodes or lines at once. Also, this operation cannot be [undone](#). This should be a significant source of caution and it is recommended you make extra backup copies of your data before performing this type of task.

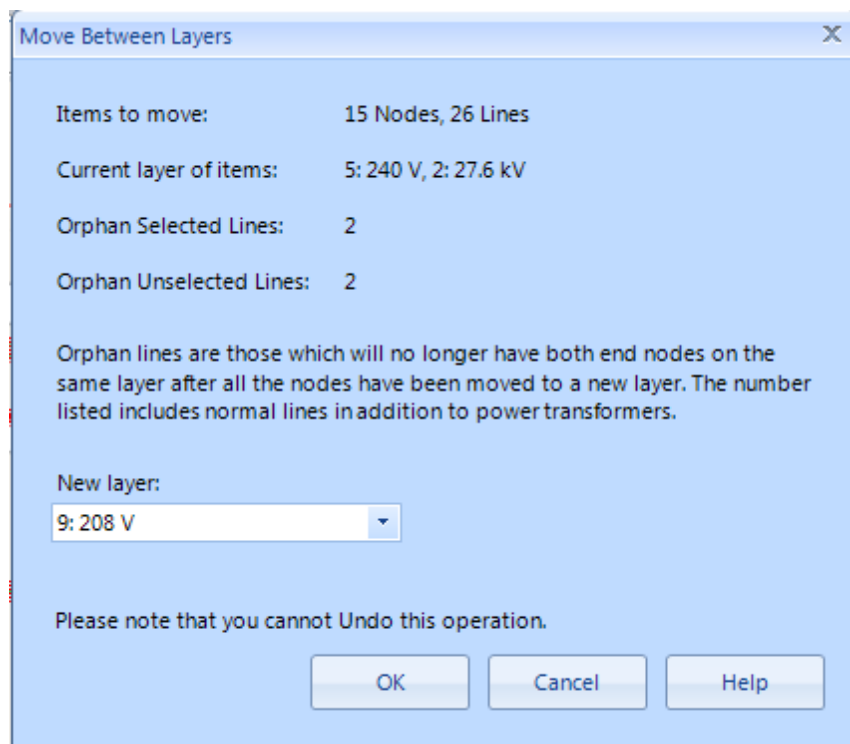

This is an easy tool to use. Simply select the electrical layer you wish to move the selected items to.

The number of nodes and lines to move are listed at the very top of the tool, as well as the total number of items which is being moved. Underneath this is the current electrical layer of the selected nodes and lines. You will never have more than one layer selected at a given time because only one layer can be active at a time.

Another set of statistics which are included are orphaned lines. As the dialogue explains, orphan lines are those which will no longer have both end nodes on the same layer after all the nodes have been moved to a new layer. The number listed includes normal lines in addition to power transformers. If you go ahead and click OK to move the items between layers, the orphaned lines will be irreversibly deleted from the system.

You should also see [Checking for Errors](#) in the How To section of the Help System due to the chance of causing errors in your system when moving nodes and lines.

3.13 Connecting Layers

Connect Layers with a Power Transformer


[Power transformers](#) connect two different [electrical layers](#) by connecting a primary (high voltage) and one or two secondary [nodes](#) (low voltage) from different layers.

Creating a power transformer is very easy. You select the primary node from the high voltage layer, and the secondary node(s) from other lower voltage electrical layer(s). It does not matter what order you select the nodes in. You must, however, ensure that only those nodes are selected.

If you are creating a normal two-winding transformer you would select exactly two nodes (one for the HV terminal and one for the LV terminal)

If you are creating a three-winding transformer with double secondaries, you would select exactly three nodes (one for the HV terminal and one for each low voltage terminal). The low voltage terminals can be either the same voltage or different voltages.

Use the standard [Select Tool](#) with the Ctrl button held down to select multiple individual nodes.

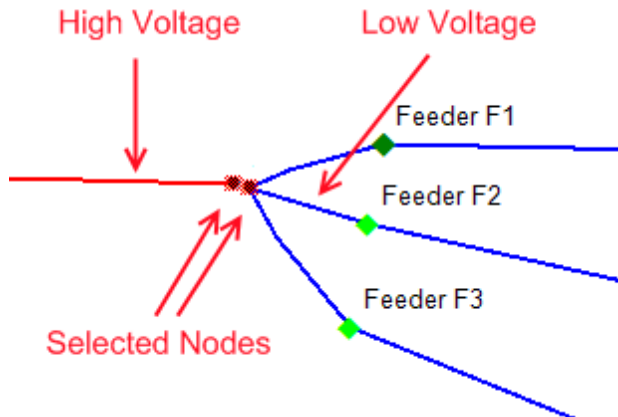


This shows how to create a typical two-winding transformer. Select the HV and the LV terminal nodes (must not have any other elements on them). Then create the power transformer as follows:

You can then either select the Create Power Transformer tool from the [Editing](#) tab > Add Power Transformer.

Add Power Transformer

Once you do this the [Power Transformer dialogue](#) will appear and you can enter the information pertaining to the Power Transformer which was just created.

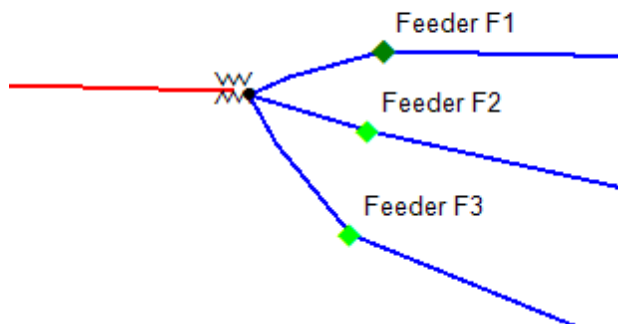

Finished power transformer. [Symbols](#) associated with power transformers are shown on the HV node of the transformer.

3.14 Undo and Redo

DESS comes with undo and redo functionality. Both the Undo and Redo buttons are located on the DESS Editing tab.

Undo/Redo functionality is actually very simple to use. You can press the undo button to undo a change which you have just made, or you can press Ctrl+Z. Similarly you can press the Redo button to re-apply an action which you have undone, or you can press Ctrl+Y. This means that you can undo any mistakes that you might make.

The Undo/Redo functionality applies to most actions performed in DESS with a few specific cases as exceptions. If an action is not undo-able then you will often be warned on the dialogue or with a pop-up before you can complete that action.



The Undo Button



The Redo Button



Hint:

You can use undo/redo functionality to make changes and then run analyses and observe the results of those changes, while not making any permanent change to the data file.


3.15 Using Tooltips, Labels and the Legend

When viewing your [system](#) there are several things which make it easier to identify and understand your system. Three things are covered in this section. The first of these is Tooltips, second is Labels, and finally Legends are covered. Tooltips are text bubbles which appear when your cursor hovers over a node or line. Labels are text names next to nodes and lines giving information about their properties. The Legend is a guide on your screen which helps to identify different [nodes](#) and [lines](#) during [analyses](#).

Tooltips

Tooltips appear when you hover your mouse over a node or line. These contain information such as a nodes ID, Description, Name and any [elements](#) currently on that node. This allows you to easily identify nodes without having to open up their properties dialogue. Tooltips only appear if your mouse pointer is over top of a node or line, for a short period of time (up to 20 seconds). There are no options that you need to set for tooltips.

After running an analysis, extra result information may also be shown on the tooltips.

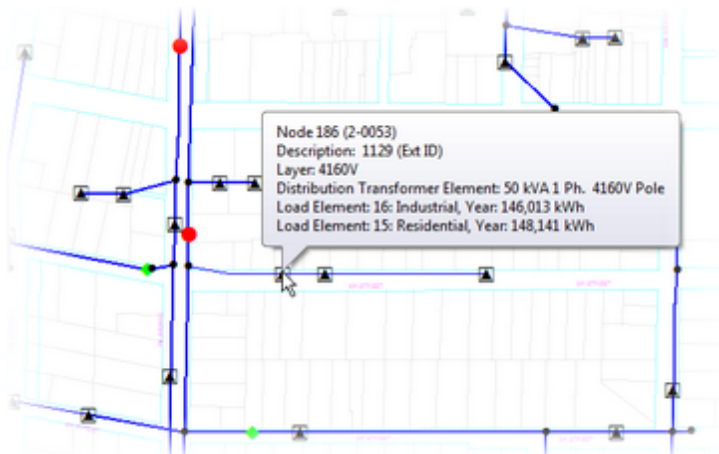

Tooltips appear when you hover your mouse over a node or line for a short period of time.


Labels

This section will be much easier to understand if you have read [Editing Themes and Styles](#), in the How To section and/or [Themes](#) in the [User's Guide](#). Similar principles apply to labels as to node and line styles.

Labels are text titles which appear near a node or line, and like tool-tips, contain information about that node or line. Unlike tool-tips however, labels do not require you to hover your mouse over top of a node or line.


In order to enable or disable Labels, you go to the layers tab on the Docking window, and enable/disable the [layers](#) which you want labels to appear on. You do this by bringing up each layer's properties dialogue and checking 'Show Labels'. You can also right click on a layer and select 'Labels' from there. When this item is checked or selected any labels which apply to nodes or lines on that layer appear.

Labels can be set in the Themes menu by going to [Analysis](#) > [Settings](#) > [Label Style Rules](#). This brings up a dialogue much like those of [Edit Node Style Rules](#) and [Edit Line Style Rules](#). This dialogue works slightly differently than those however.

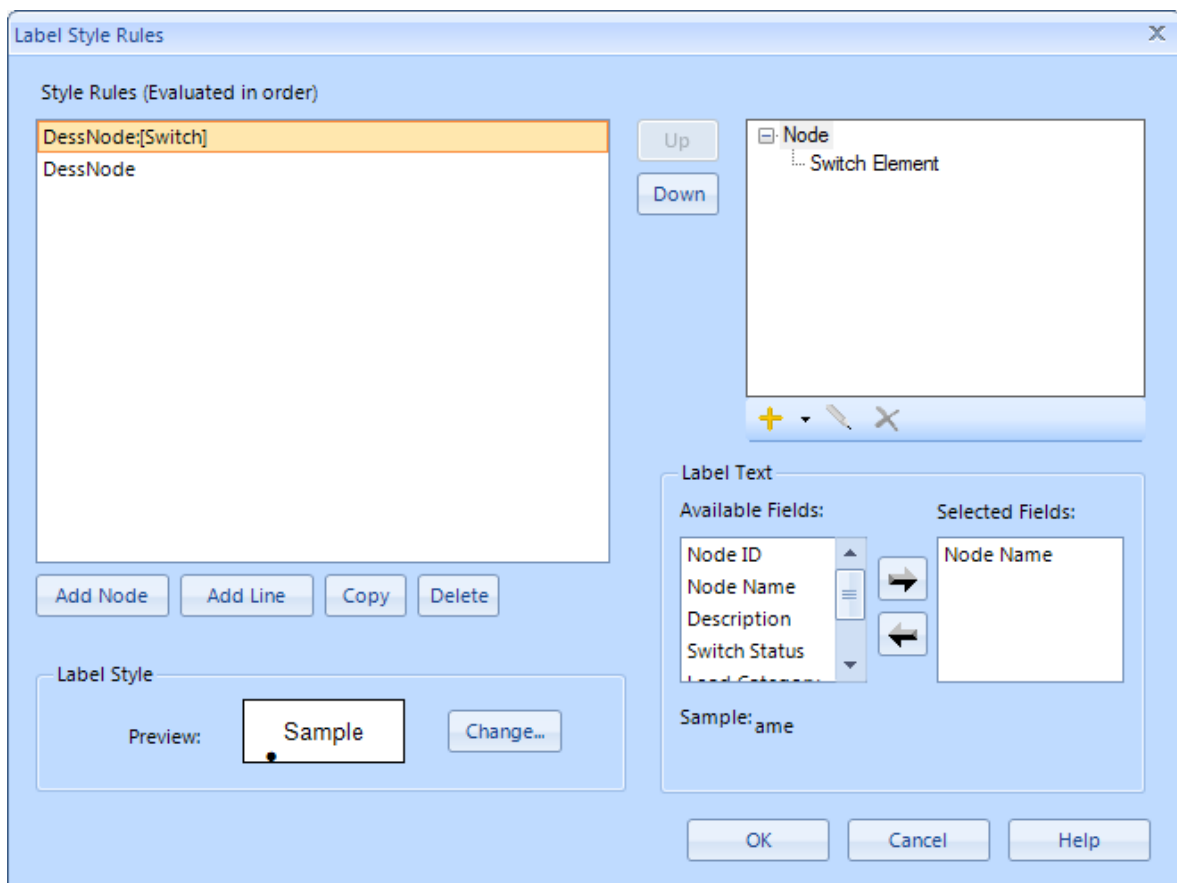

In order to create a new style rule for labels, first you must select whether you want to add a line label or a node label. Select the appropriate button at the bottom of the list pane on the left. A new style rule will appear at the bottom of the list of styles on the left. You can move this style up and down like style for nodes and lines, by using the up and down buttons in the top center of the dialogue. You can add more specific criteria by using the yellow plus sign at the bottom of the list on the right. When a node meets that criteria it will follow the label directions provided in the bottom right of the dialogue.

Each style has its own label directions, this helps to keep the system clear, and not cluttered. The directions for labels are quite simple. To add something to a label simply select the item to add from the 'Available Fields' section, and press the right arrow in between the two fields. That item will be added to the bottom of the Selected Fields list. To add a new line to your label, there is a 'new line' field which can be added to the selected fields. This will move all items following it onto the next line down. This prevents long strings of labels, and allows greater visibility of the labels.

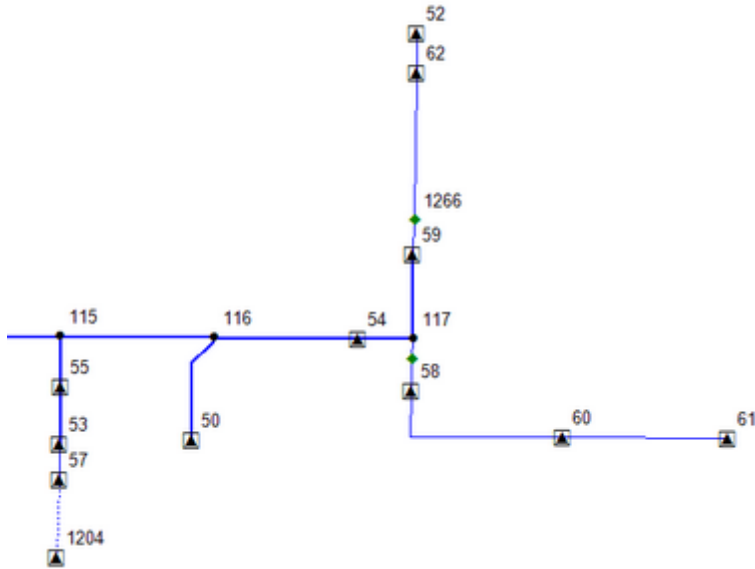


Labels are very effective at providing information quickly.

Like node and line themes, label themes are also available after running an analysis. These themes overrides your current labels and replaces them with a series of labels which provide information corresponding to the theme and analysis. You can restore your default labels as well as your default node and line styles, by using Themes > Default Theme.

Legend

The legend is a box containing information about what each symbol or color represents after applying a theme. The legend appears when you apply a theme to DESS, generally after just running an analysis. You can set the options for the legend in [Tools > Options](#), under the legend tool. The legend is considered not to exist for purposes of manipulating the [map view](#) in any way.

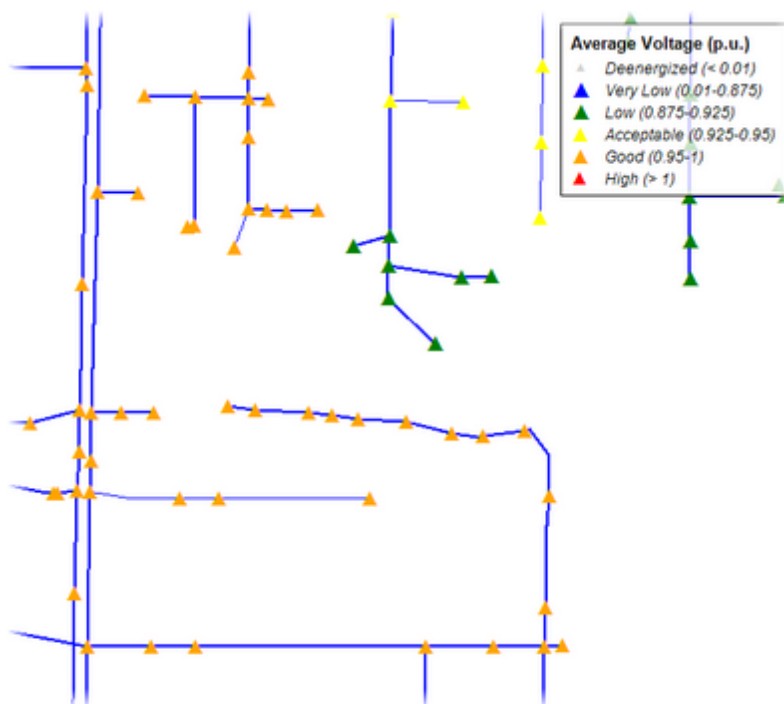

The legend makes it easier to use themes.

3.16 Editing Themes and Styles

This topic describes adding and removing [node and line styles](#), and modifying or changing themes.

This section assumes that you have read over the section under [User's Guide > Nodes and Lines > Appearance](#) in the help system. If you have not read this we suggest that you do so. It will help you understand the following discussion.

Styles

Styles are edited in one of two different places, depending on the type of theme.

Firstly, basic default styles are edited in the themes styles [menu](#), under [Default Appearance > Node Style Rules](#) or [Line Style Rules](#). This is where the appearance of [nodes](#) and [lines](#) for the default DESS theme are edited. Anything that you edit in this area will affect how DESS appears when no other themes are applied to the system.

Secondly, the appearance of nodes and lines in the various analysis result themes are modified in the Options menu. In this menu, which is accessed via [Globe > Options](#), you can change the styles of the nodes or lines for each analysis.


Creating a New Style

To create a new style you click on the 'Add' button underneath the list of styles. After you do this a new style will appear at the bottom of the list of style rules. Currently this newly created style has no

properties or settings.

To set a requirement you must click on the the drop down arrow beside the yellow plus sign. A list of [elements](#) and properties will appear. Choose the property that you want to have associated with this particular style and set the options for it in the dialogue box which appears.

This is a continuous process. If you wish to add a more detailed or specific property requirement, merely select the property in the right hand box, and then use the drop down arrow by the yellow plus to choose more specific properties to add. You can do this process several times for the specific elements and properties available.

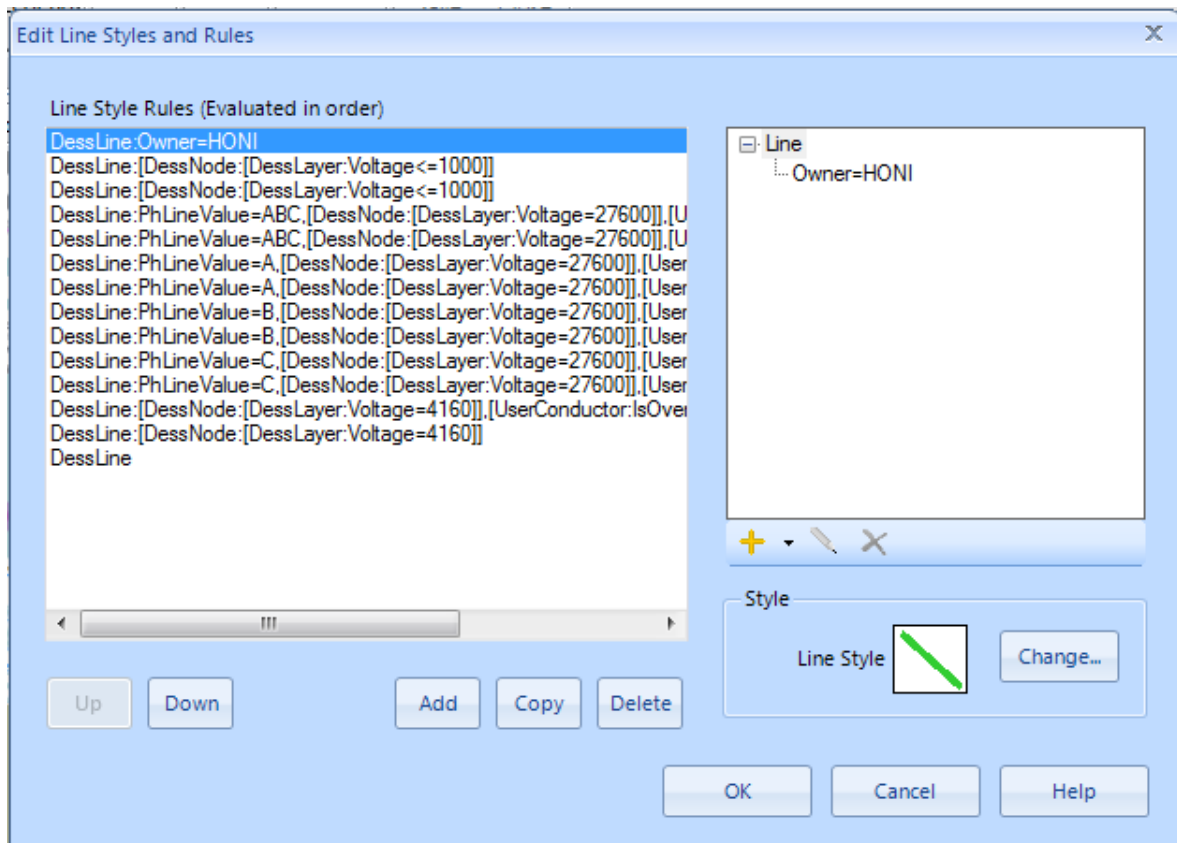

Removing a Style

To remove a style which you no longer need, select the style which you no longer need and use the delete button. This will remove the style permanently. You cannot undo this action once you have clicked on the OK button.

Moving a Style

The position of a style determines when and if it will appear. As such, it is very important to put the style in the correct position in the list. As the styles are evaluated in order, if a higher item in the list is found to be applicable, the lower items will never be evaluated or used. Therefore, more specific or detailed items should be higher in the list, and more general items should be lower in the list.

Initially a newly created style appears at the bottom of the list. You can change its position by first of

all selecting the style to move by single clicking on it. Then you can then use the 'up' and 'down' buttons to shift the position of the style one position in its respective position. If you push the up button, the style will switch places with the style above it, and likewise if you push the down button the style will switch places with the style below it.


Hint:

Because you cannot undo styles (after you have clicked OK), the only way of changing back to a previous arrangement is to change it back manually. Because of this it is generally wiser to create a new style and place its priority higher, rather than change the values of an original style. It is much easier to remove a new style which you have created, than to try and change several styles back to how they were.


Changing the Appearance of Styles

You can change the appearance of styles by first selecting a style in the left-hand list of styles. Then click the change button. A dialogue like the ones below will appear.

For nodes you can set the symbol for the node by picking one of the listed symbols. DESS uses a special font for these characters, and it is used by default. However, if you wish you can choose a different font to use by using the font name drop down menu to select the font you wish to use. You can use several different fonts. Each style can use a font independent of all other styles.

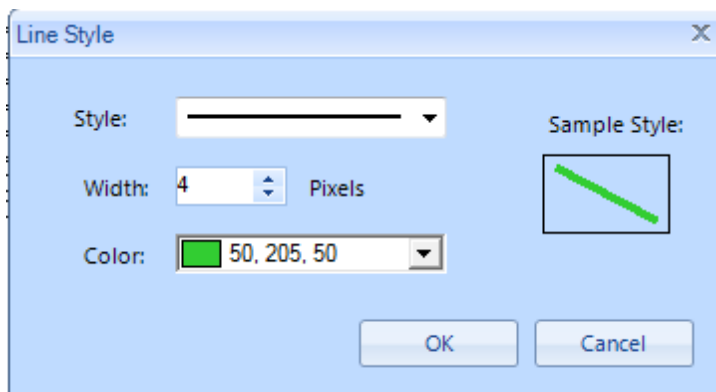

This is the dialog for editing the appearance of a line style.

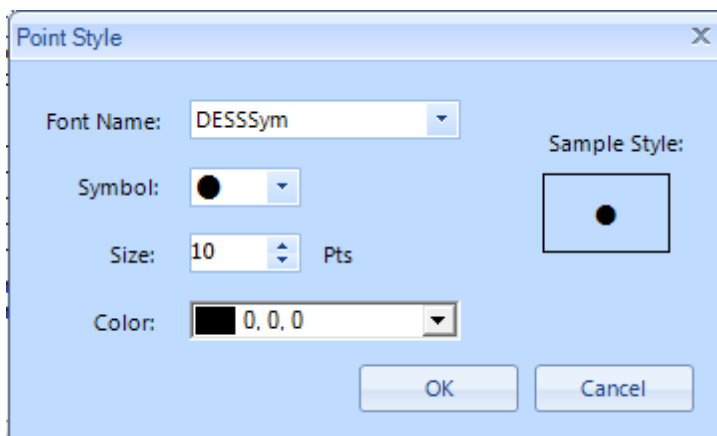


This dialog is used to edit the appearance of a node style.

When you are finished making changes you can select OK to return to the styles page.

Changing the Appearance of Analysis Result Themes

In the [Globe > Options](#) dialogue you can set the visual appearance of nodes and lines for the themes that can be shown after an analysis is run. Each analysis may have a number of different themes for nodes and lines. This is shown from the labels to the left of each style. Unlike the normal DESS theme, you cannot add styles or delete styles in this mode, only change the values at which a particular style is shown or the appearance of the style.

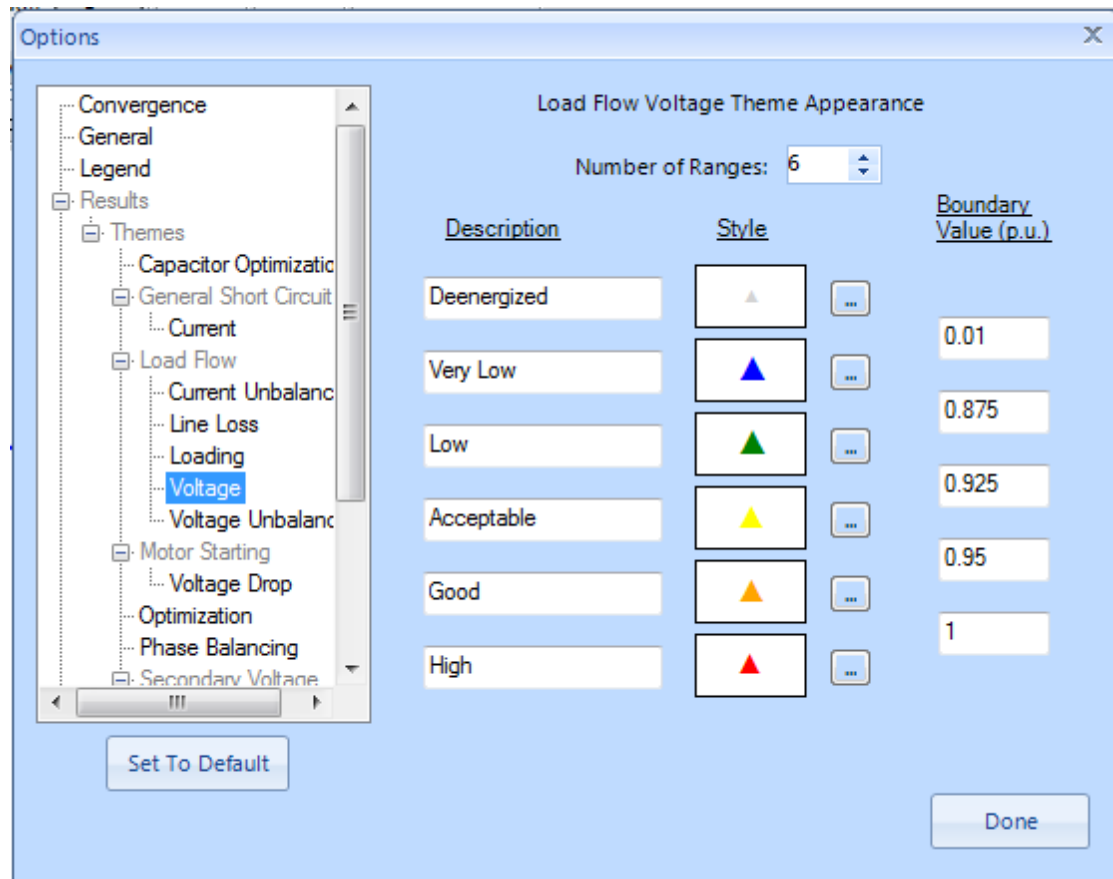


The Options Dialog


To change the appearance of a node or a line in this dialogue, double click on the button to the right of the style shown. Once you do this the dialogue used to modify the appearance of a node or line (shown above) will appear.

3.17 Moving the Docking Window

The [docking window](#) is a useful addition to the DESS interface which contains three separate sections.

These sections are each explained in the Reference Guide section of this help system. This section concerns the use of the docking window. The Docking window is very easy to move and adjust according to your preferences.

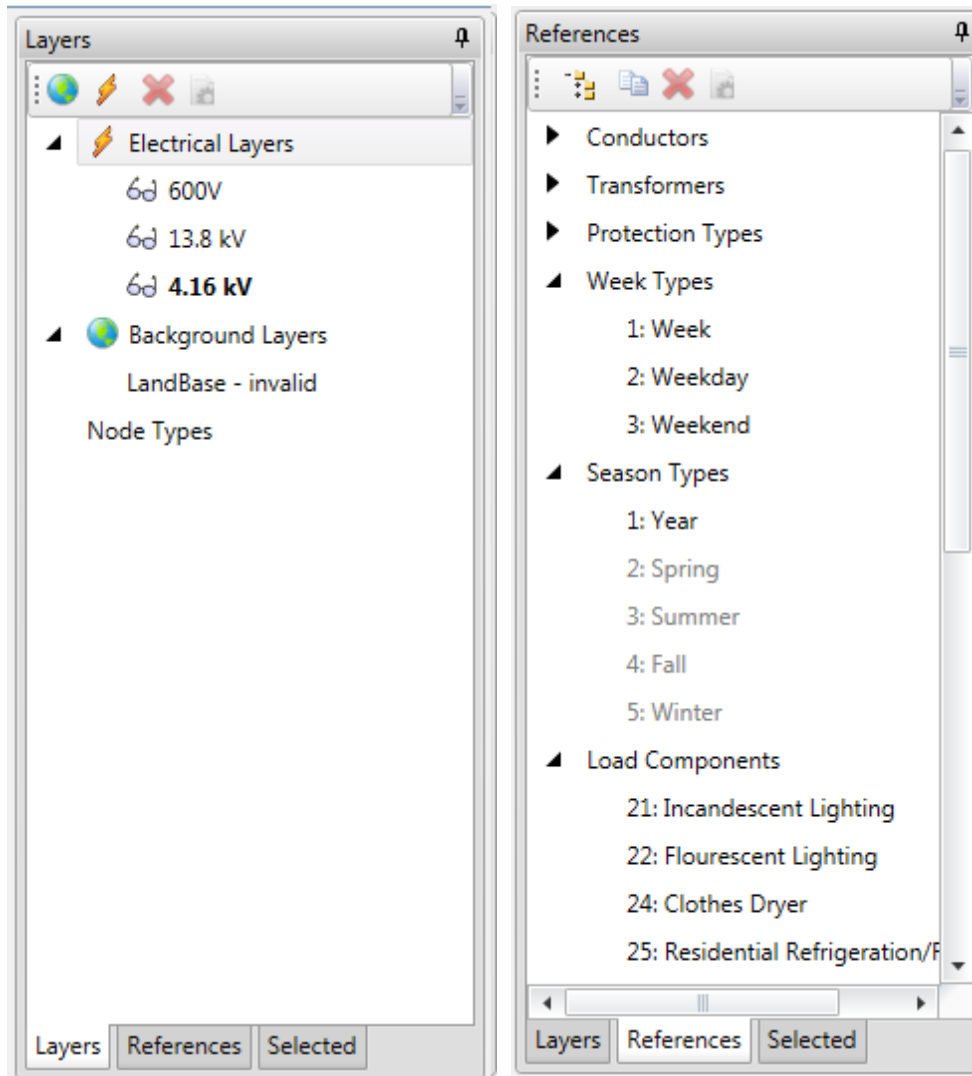

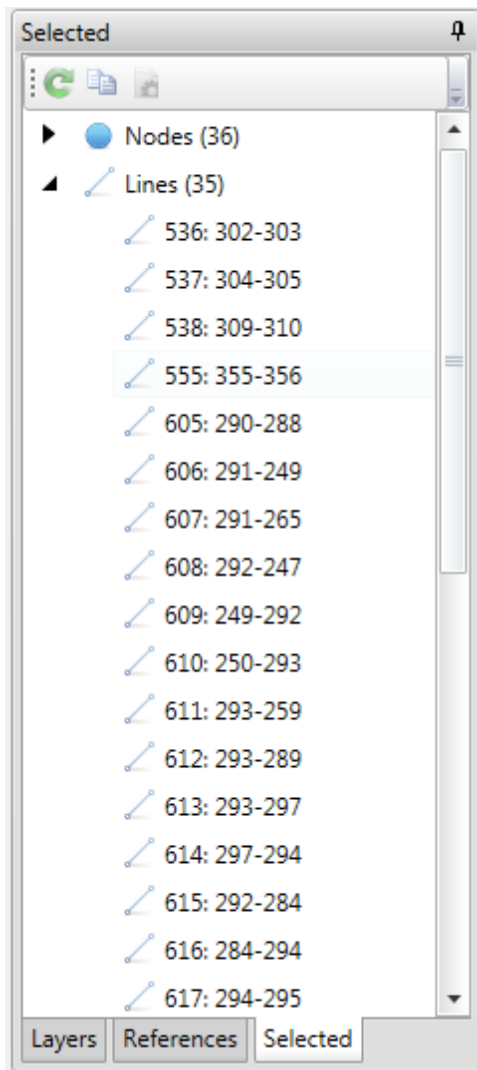

Width

The width of the docking window can be adjusted by clicking and dragging the blue bar on the right of the docking window. This will adjust the width of the docking window according to which direction you drag it. It will apply to each of the tabs, the setting is for the entire docking window. If the width becomes small enough to obscure some of the content in the window it will create a scroll bar on the bottom of the window so that you can still see everything (albeit with scrolling).

Tabs

There are three different tabs on the side of the docking window. These correspond to three different sets of functions inside the window. By clicking on any one of them the corresponding docking window view will appear. Each of these three views has its own content, and with each one the buttons on the top of the docking window change. You can switch between these tabs at will. By switching between the three different views you do not affect anything inside them, or anything outside of them. Changing these tabs is the equivalent of changing active windows on a desktop, it is merely for convenience

when viewing.

Pinning

Another feature of the docking window is the pin button. This button looks like a thumbtack and is shown in the upper right hand corner of the docking window. This button is a toggle and when the pin is upright the window will always appear on the side of the DESS map view. This is the default setting for it.

The other toggle sets the window to minimize to the side of the screen when it is not being used. This turns the icon to a sideways thumbtack. By placing your pointer over the labeled tabs on the left of the screen, the window corresponding to that tab will pop out. When you move the mouse off of the window it will minimize again. This is useful if you only use the docking window occasionally. You can toggle between the two modes at will by pressing the thumbtack button in the upper right hand corner of the screen.




Hint:

Note that while the docking window is set to minimize while not in use, you only need to place your cursor over the tab which you want to view, you don't have to click on the tabs.

3.18 Changing Switches

The status of switches can easily be changed in DESS. Simply select the nodes containing the switches which you want changed and then press the change switch tool. The Change Switch tool causes the switch to change status. If any phase of the switch was open, it is now closed and if it was closed, it will be fully opened. This tool is available on the [Editing](#) tab, or by right clicking on a switch. You can only have switch nodes selected to use this tool. You cannot switch any nodes unless every selected item is a switch. The can change a mixture of open and closed switches together in a single operation.



You can also change switch status from the [switch](#) element property dialogue by double-clicking a node containing a switch and then double-clicking on the switch element. You can then manually set the switch status, including opening only partial phases to simulate emergency or maintenance switch operations.

3.19 Finding Nodes

One frequently used tool in DESS is the [Find Asset dialogue](#). This tool allows you to find any [node](#) that currently exists in the system.

The Find Node dialogue can be accessed from the main menu by clicking on [Editing](#) > [Find Asset](#).

To use this dialogue you use one of three different tabs on the top of the dialogue to select which method you wish to use to locate a node.

**Hint:**

In certain cases a fourth tab becomes available, the map tab. This allows you to pan and zoom on a representation of the map view so that you can locate the node which you wish to find.

Finding Nodes

Nodes can be found by entering search criteria into the Filter By text box. All visible columns will be automatically filtered by the criteria. All of the nodes in the system whose name or description field contain the criteria will appear in the list box below the search fields. For example, if you entered "St" for Name, all nodes containing "St" anywhere in the visible information columns would be listed. You can click on the column header to sort the entire list by that column. You can click on a column heading again to reverse the sorting order, eg, ascending to descending. Clicking on the funnel icon next to a column header will allow you to filter only that column by any criteria.

Find Asset

Search: All Nodes [Go] Filter By: Search criteria...

Columns: Drag a column header and drop it here to group by that column

Name	Description	UniqueID	Voltage Layer	IsOutage	IsProposedO	Map Point	IncludeInSLC
FS50092	NC	FS50092	2: 27.6 kV	<input type="checkbox"/>	<input type="checkbox"/>	POINT (-83.0834	<input type="checkbox"/>
RE30051	Imported on 08-	RE30051	2: 27.6 kV	<input type="checkbox"/>	<input type="checkbox"/>	POINT (-82.5973	<input type="checkbox"/>
			2: 27.6 kV	<input type="checkbox"/>	<input type="checkbox"/>	POINT (-82.5855	<input type="checkbox"/>
FS3H337	NC	FS3H337	2: 27.6 kV	<input type="checkbox"/>	<input type="checkbox"/>	POINT (-82.6012	<input type="checkbox"/>
EP20594		EP20594	5: 240 V	<input type="checkbox"/>	<input type="checkbox"/>	POINT (-82.5902	<input type="checkbox"/>
EP20595		EP20595	5: 240 V	<input type="checkbox"/>	<input type="checkbox"/>	POINT (-82.5908	<input type="checkbox"/>
			5: 240 V	<input type="checkbox"/>	<input type="checkbox"/>	POINT (-82.5908	<input type="checkbox"/>
			5: 240 V	<input type="checkbox"/>	<input type="checkbox"/>	POINT (-82.5897	<input type="checkbox"/>
			5: 240 V	<input type="checkbox"/>	<input type="checkbox"/>	POINT (-82.5910	<input type="checkbox"/>

Ok Cancel

Finding a single node or a series of nodes using ID numbers.

Use the drop-down to select the asset type, then press **GO**. The visible columns may be updated with new relevant data for the chosen asset type. Enter any part of the node's information which would be in one of the columns into the Filter By text box.

You can double click, or click OK, on any asset in the list box to close the Find Asset dialogue and center the map view on that node, which will be selected.


3.20 Creating Reference Data

We suggest that you read about [Reference Data](#) in the [User's Guide](#) before editing any reference data items.

[Reference Data](#) is modified, edited and managed through the [docking window](#) on the left of the [map view](#). In the docking window, reference data is managed in the [Reference tab](#). When you first open the reference tab, you are presented with a series of expandable item types. In a brand new system you will have no reference data, and there are two different ways to get some. You can make it yourself, or you can copy it from another system. Importing your reference data is covered in [Import and Change References](#).

Creating Reference Data

In the docking window there are four buttons on the top of the window. The first, on the far left, called 'Add Item', adds a new item to your collection of reference data. When you click it it brings up a list of items which can be added to the list. When you select one of these items it brings up the appropriate dialogue for editing the data for that specific reference data item.

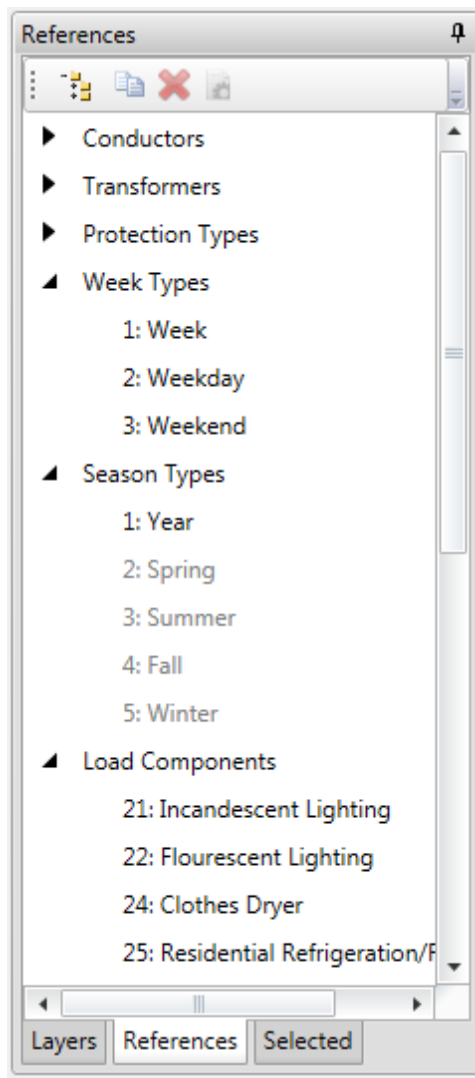

The second button, to the right of the 'Add Item' button, is called create copy. This button creates an

exact duplicate of an already existing item of reference data. This becomes useful when making a number of similar items.

The third button, the red 'X', is the delete button. Its function will be left up to your imagination.

The fourth button is the Edit Properties Button. This brings up the properties dialogue of the selected reference data item. This is the dialogue where you edit all of the information for that item of reference data.


Each of the property dialogs for reference data items is covered independently in the reference guide section of this manual at [Reference Guide](#) > [Dialogs](#) > [Reference Data Dialogs](#)

3.21 Modifying References

[Reference data](#) is essential to your system. Many items such as [lines](#), [loads](#) and [transformers](#) cannot be created without using reference data. There are two primary ways to get reference data. You can create them from scratch, or you can import them from a pre-existing [system](#).

Importing References

By far, the easiest method to populate the reference data in your system is to import reference data items from another system. You can import reference data from one system to another using the Import References Tool. To do this you select Import References from the tools [menu](#). A dialogue will appear prompting for a file. Navigate to the system which you want to import reference data from, and then select Open. Another dialogue will appear, and in this dialogue you can select which Reference Data items you want to import.

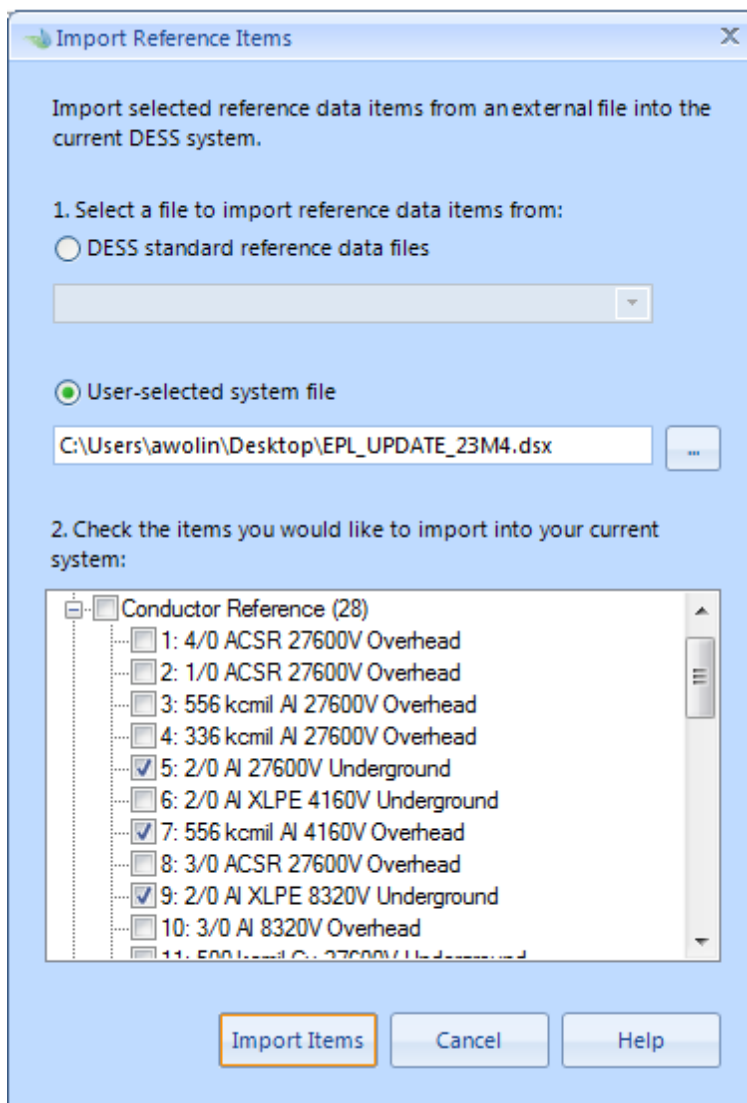

Select the reference data you want from the left and move it to the right.

Select which reference data items you wish to import on the left and click the right arrow to add it to the list of items to be added to your system. Nothing is added until you have pressed the OK button so you are able to remove items which you do not want. You remove items by selecting them on the right and pressing the left arrow. None of the reference data which is currently in your system is shown on the right, only the reference data to import.

You can import entire categories by importing their heading. eg. by selecting 'Week' and pressing the right arrow, all three of its items would be added. Likewise you can remove entire categories by selecting the category title on the right and pressing the left button. You can add all reference data by selecting the 'External System' title and pressing the right arrow. You can remove all reference data by selecting 'Items to Import' and pressing the left arrow.

This dialogue does not only import reference data. At the bottom of the list you can also select node, line and label styles to import. This allows you to easily keep all your systems looking the same.

When you are finished, select the OK button to import the items you've selected or Cancel to quit without making changes.

**Hint:**

When DESS is installed it creates a folder in the DESS install directory called Reference Data. This contains a number of files containing protective device reference data items which can be imported into your system.

Creating Reference Data


Sometimes the data you need isn't part of an existing DESS system and you must create your own reference data from scratch. This is a straight forward using the property dialogs for each item. To create reference data, right-click on the heading of the data type which you wish to create and select the add option. This will bring up the properties dialogue for that particular type of reference data. From there you fill in the required information and click OK.

The Copy tool makes this process much quicker. To use this tool, select the reference data item to copy, and then click on the Copy button on the docking window toolbar. An exact copy of that item will be created. This is extremely useful when you want a large number of similar items of reference data. You can create a template and make copies of it.

Each type of reference data has a different properties dialogue and so each of these is covered in detail in the reference data section of this guide, under [Dialogs](#) > [Reference Data Dialogs](#).

Changing References

The [Change References](#) tool in the Tools menu allows you to change the reference items associated with multiple nodes and lines at the same time. First select all of the lines and nodes which are to be changed. Then select Change References from the Tools menu.

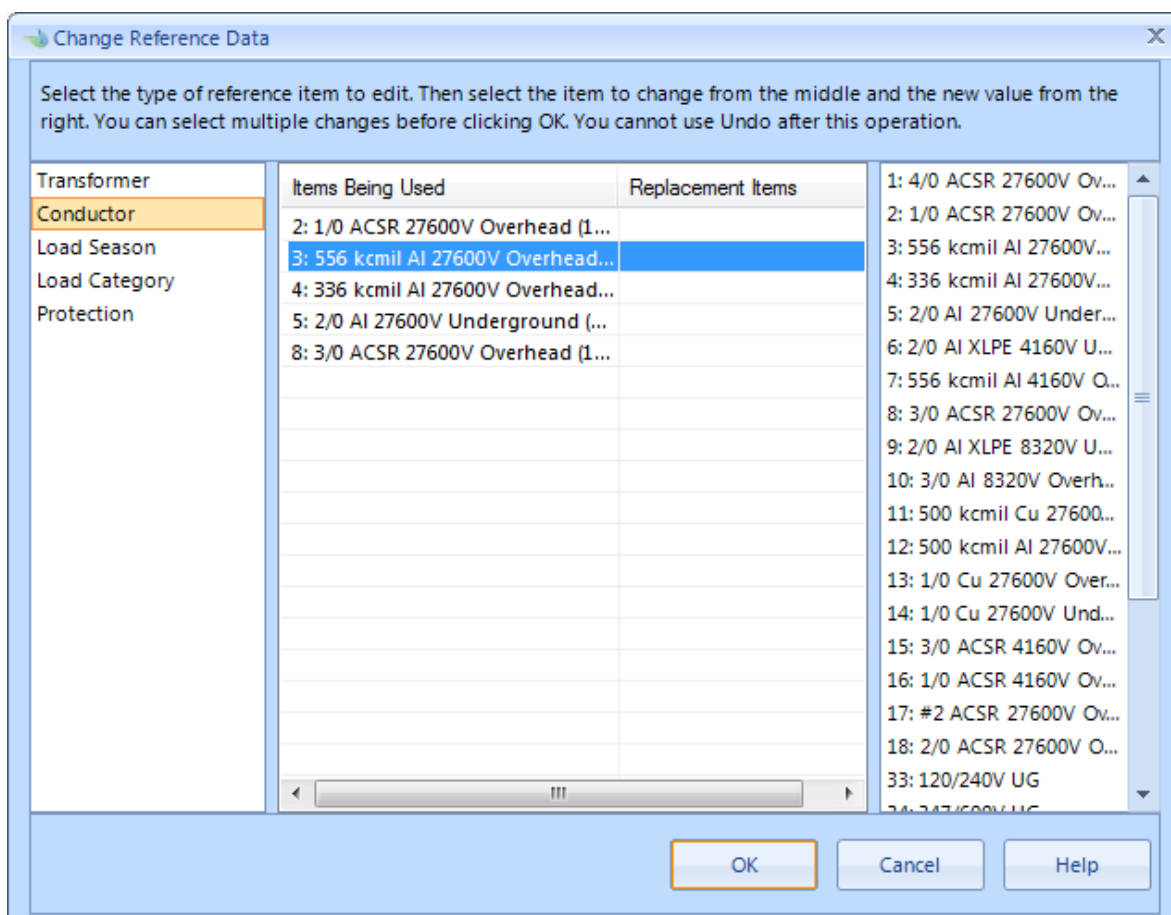

The Change References dialog allows you to change a large number of references at once, saving a lot of time.

Once this dialogue appears you can start to change reference data. First, select the type of reference data to be changed. After you do this a list of the reference data being used by the current system will appear. Select the item to change and select its replacement from the large list of reference data on the right. Repeat this process for all of the reference data which you want to change, and then select OK to make the change.



Warning:

You cannot [Undo](#) a change in reference data. However, if you use the [Selected](#) tab on the docking window you can 'remember' which nodes and lines were changed, and if you want to you can change them back through this.

3.22 Checking Your System For Errors

When editing your system you will occasionally use tools in such a way that errors are created in your system. An error in DESS is anything which puts the system data in an inconsistent state or any data items that contains questionable values. If you want examples, try making errors.

There are three different levels of an error:

Info - This refers to a piece of information which may not be an error but which the user should be aware of. The problem is unlikely to cause a problem for analysis. This includes closed loops or de-energized (disconnected) nodes and lines.

Warning - This means that the item may or may not be an error, but that questionable values or situations may cause problems for analysis. This includes very high transformer losses, bad phasing across a switch, etc.

Error - This means your system currently does not operate correctly because of a specific modeling problem and that the problem must be corrected before you can successfully run an analysis. This includes bad connectivity, bad phasing (e.g. red phase load on a single phase blue phase line), bad transformer data (3 phase transformer on a single phase line, etc).

Errors: 5 Items			⌵	×
Severity	Description	Items Affected	⌵	
Info	57 disconnected nodes in system			
Info	2 loops found in system			
Error	Bad connectivity between lines attached to node	Node:301		
Error	Load has incorrect phasing for distribution transformer on same node	Node:227		
Error	Load has incorrect phasing for distribution transformer on same node	Node:227		

Here are some deliberately created errors as an example.

You can display all of the errors, warnings and info in your system by using [Editing](#) > [Query](#) > [Check for Errors](#). This will display a window on the bottom of the DESS window. This window can be re-sized by dragging the thin blue bar at the very top of the errors window. The errors window displays the number of errors in the title bar.


If you double click on any error the map view will center on that (now selected) node or line. You can still use DESS normally while this window is open. This allows you to find and fix these errors while they are right in front of you, saving time and effort.

While this window shows all the errors so that you can work on them while seeing them all, it does not automatically refresh. In order to refresh you must access the tool again from the Query menu.

You can close this errors window when you are finished with it by simply clicking on the x in the top right corner of the errors window.

Show Disconnected

This tool, available from the [Editing](#) tab as [Query](#) > [Show Disconnected](#), shows you all of the nodes and lines which are currently in your system, which are not connected to a source through lines. When you click on Show Disconnected, a pop-up will appear listing how many nodes and lines are disconnected.

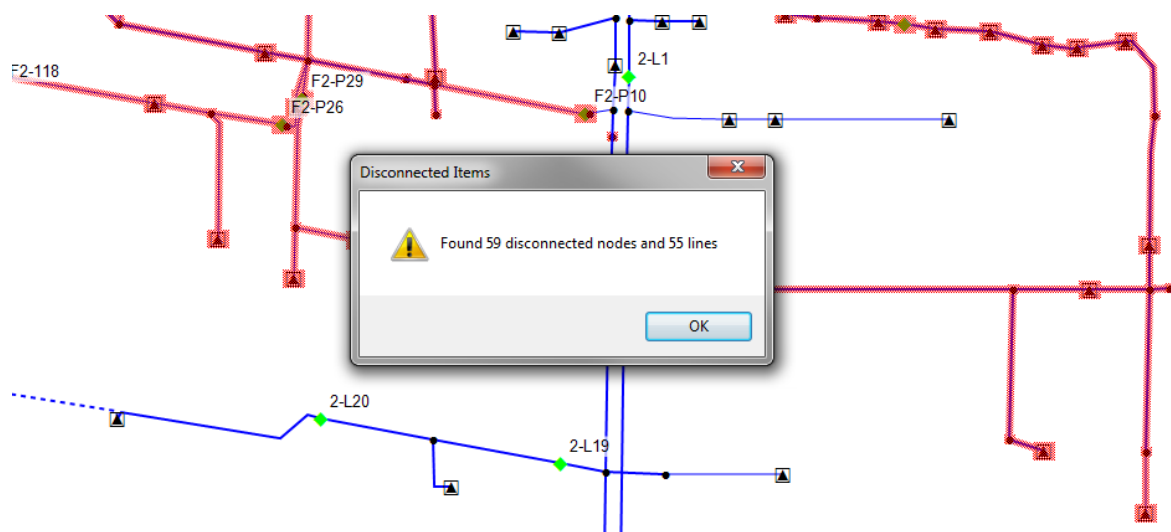


DESS will show you all of those nodes and lines which are not connected to a source.

DESS will also select all those nodes and lines which are disconnected. Note that this will deselect any previously selected nodes or lines.

Show Loops


This tool, available as [Query > Show Loops](#), shows all of the current closed loops in your system.

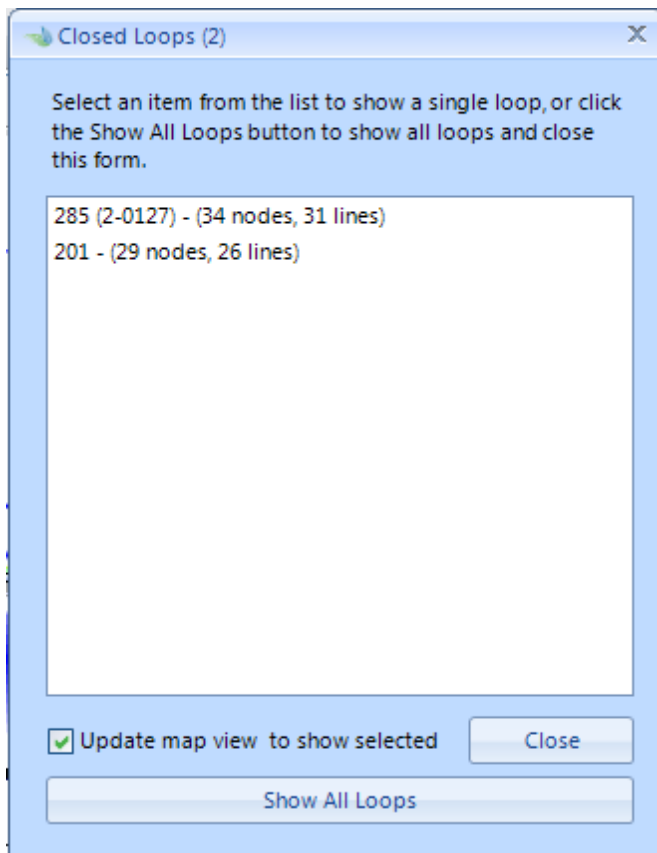


This tool constantly updates, and you can edit the map view with the dialogue open. More information on this tool is available in [Reference Guide](#) > [Editing Dialogs](#) > [Show Loops dialogue](#).

3.23 Multiple System Views


DESS has the ability to show a single system using tab options. At the top of the map view there is an **Add Tab** command, which will open the same system but allow you to be in a different area at a different zoom level.

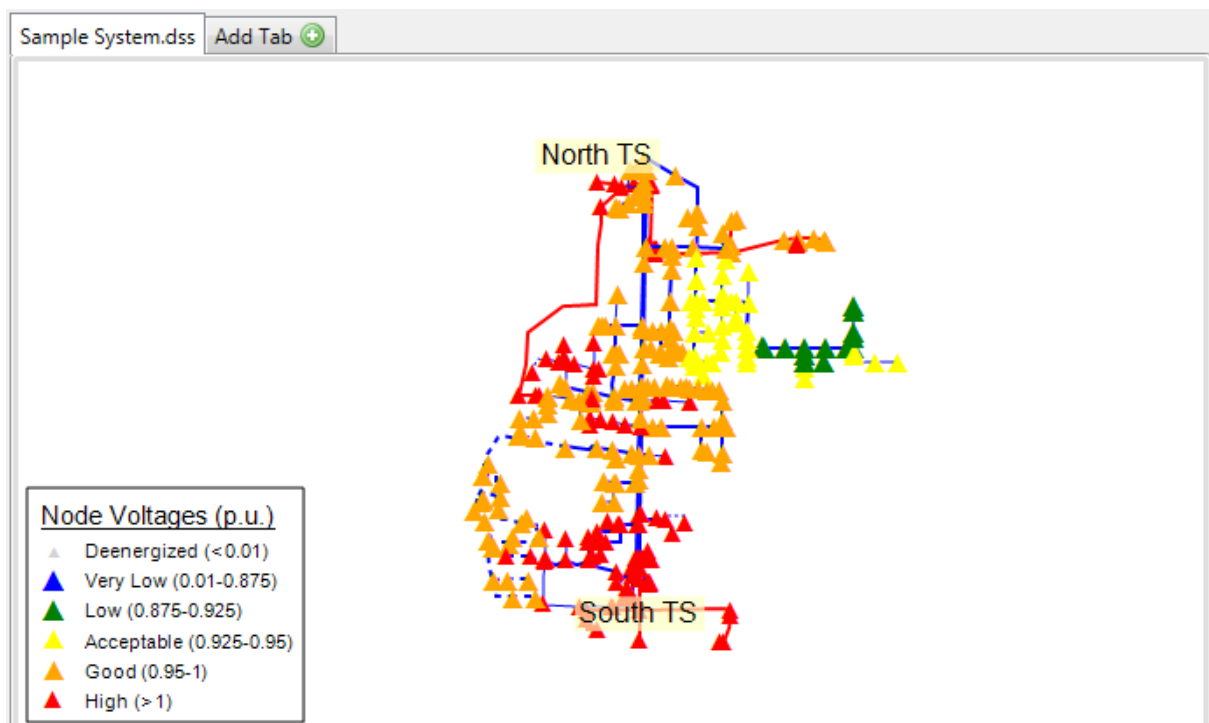


Tabs can be clicked and dragged to re-position the viewing pane in the main window. Clicking the **X** in the upper right hand corner of the unpinned window will close the tab. Clicking the **docking icon** next to the **X** will move the tab back to the main position. You can also click and drag it back into place.

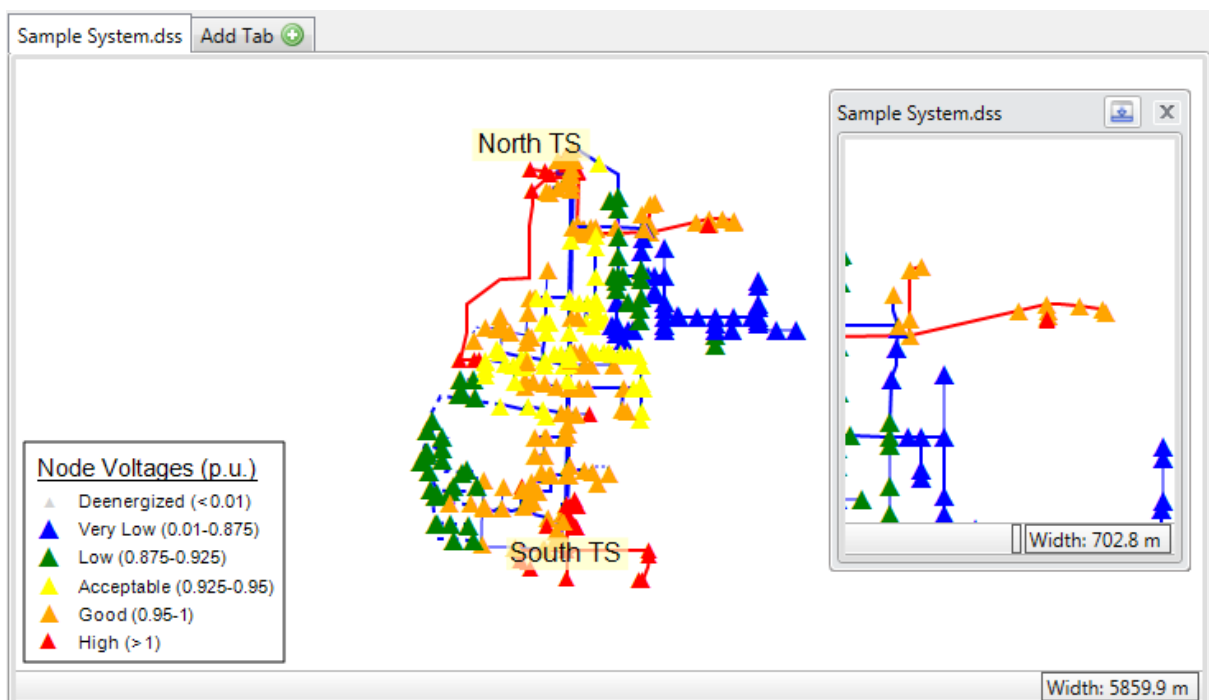

While clicking and dragging a tab around, the docking pop-up will appear in the center of the map view. This will automatically snap the tab to the left, right, top, bottom, or re-dock the tab. Simply drag the top of the unpinned tab to whichever arrow you would like, or over the center to re-pin the window.

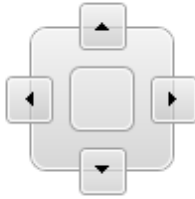

Once a tab has been pinned to the left, right, top or bottom of the map view, you can adjust the size of the panes by hovering over the dividing line and then clicking and dragging the edge of the pane to grow one and shrink another.

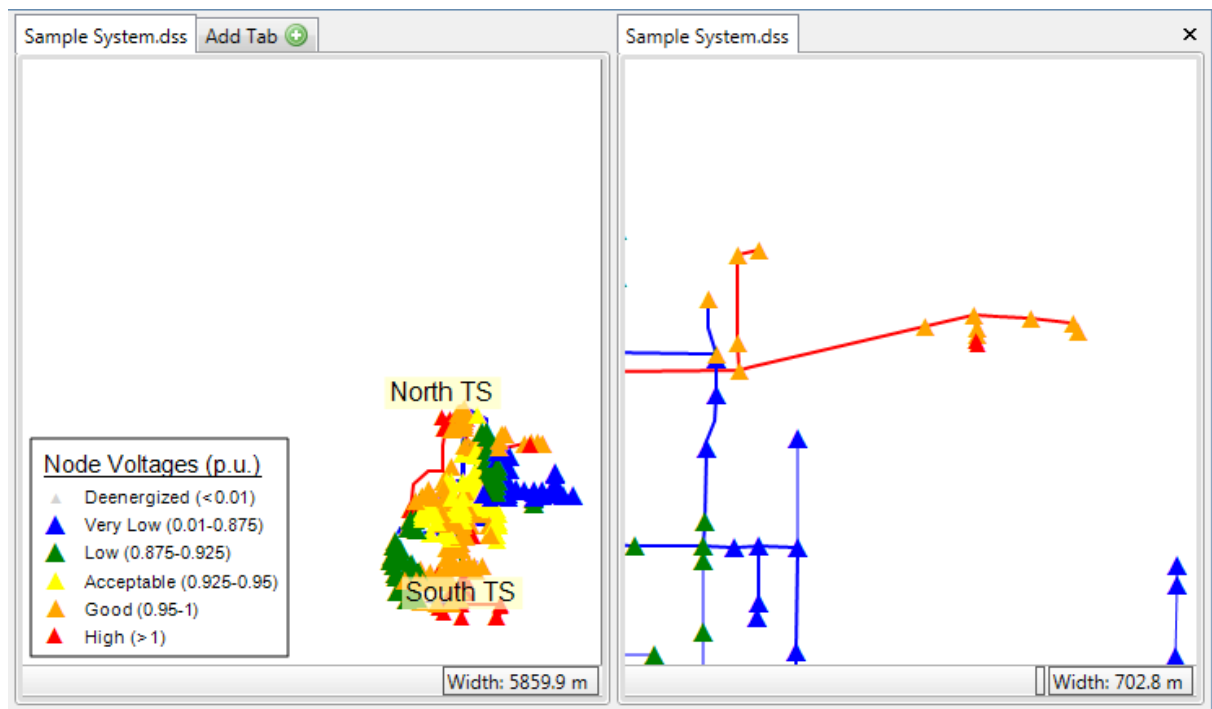

3.24 Update Current System Model

To update the current system model, first open it using [File](#) > [Open](#) > [Open Current System Model](#).

Next, enable editing by clicking on [Globe](#) > [Analysis](#) > [Update System Model](#).

The program will prompt you for your credentials. If another user is currently updating the model, the program will notify you with the other person's login. More than one person updating the model at a time can cause change conflicts.

Perform the edits, and then use [File](#) > [Save](#) > [Save As System Model](#) to update the file on the server.

4 Reference Guide

The reference guide provides detailed information on using DESS. It includes:

- [Globe](#)
- [Ribbon](#)
- [Docking Windows](#)

Dialogs

- [Element Data Dialogs](#)
- [Reference Data Dialogs](#)
- [Editing Dialogs](#)
- [Analysis Dialogs](#)
- [Other Dialogs](#)

4.1 Globe



The Globe contains options and information pertaining to the entire program. Each of the options in the menu are explained below.

Options


This dialogue allows you to update analysis result themes. See the [options dialogue](#) for more information.

Logout

Logs the current user out of the program and re-launches the login window.

4.2 Ribbon

Most commands in DESS are available from the Ribbon.

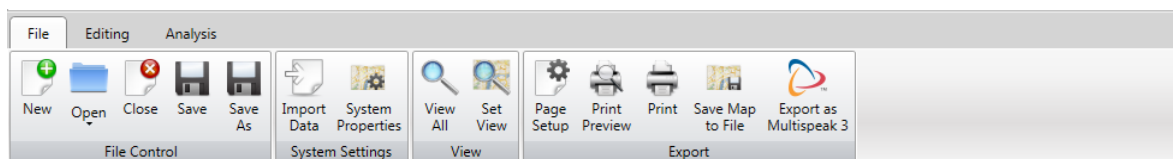

Each of the ribbon tabs contain commands which are related in one way or another.

[File](#) - for opening and saving system data and results


[Edit](#) - for editing and deleting data

[Analysis](#) - shows all of the available analyses

Double clicking on the tab will collapse or expand the ribbon.

Ribbon items with a down arrow have more than one option. Clicking on it will expand the menu and show all of the options.

4.2.1 File Tab

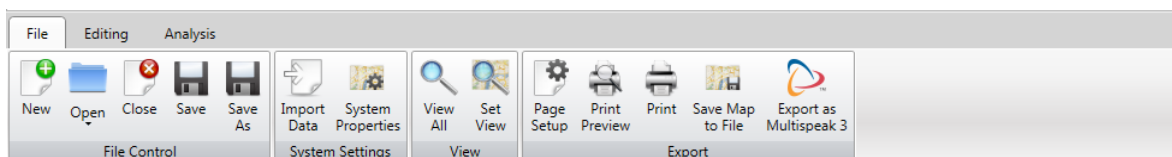

The File tab is used for opening, closing and saving system data. It contains the following commands:

File Control

New

Opens a new empty DESS [system](#). When you open a new system the [System Properties dialogue](#) will be displayed which lets you specify properties such as coordinate systems, phasing preferences, etc. Note that a new system will not initially contain any [reference data](#) or theme definitions for [nodes](#) or [lines](#), although these can be imported from other data using the [Analysis > References > Import References](#) command.

Open

Open Model opens an existing DESS system using a standard file dialogue. Most DESS system data files end with a .dss.xml extension (note the double extension). Note that you can open a read-only file even though you cannot save to it. Backup files can also be opened and have a .bak extension. Backup files are created using the [Auto Save](#) functionality in DESS.

Open Last Model opens the most recently accessed local DESS file.

Open Recent contains the most recent system files that have been opened. Click on a sub-menu item to open that data.

Close

Closes the currently open [system](#). If the system has not been saved, you will be asked whether you want to save the data first.

Save

Saves the current system. If the open system has not previously been saved you will be prompted for a location to save it. When you make edit the data in a DESS system, the changes will not be saved until you choose to Save System. Note however that if you have enabled the [Auto Save](#) feature, DESS will automatically save a backup copy of your system data regularly (by default every 15 minutes). These files have the same name and are stored in the same folder as your data, but have a .bak file extension.

Save As

Save the current system to a new file location. You can use this function to make a copy of your data. DESS system files are typically saved with a .dss.xml file extension.

System Settings

Import Data

This lets you import data in the DESS v6 XML format. Data imported this way must be structured much like actual DESS system data but is allowed to be more flexible for identifying nodes, lines and references. Import data can have, but typically does not have, any [reference data](#). This function can also be used to import data from one DESS system into another (.e.g if you wanted to combine two systems).

System Properties

This command brings up the [System Properties dialogue](#) where you can view and edit system properties and statistics. This command lets you set names for the phases (e.g. 'abc' or 'rwb'). You can also choose the coordinates to use for the map. The statistics tab shows how many objects (such as nodes, lines, switches, etc) you currently have in your system.

View

View All

This command sets the map view to encompass the whole system. It does not matter what the current zoom level or viewing area is, the program will center the system and zoom to have the whole system in the view.

Set View

This brings up the [Set View dialogue](#) so you can choose the coordinates of the map center and the current zoom. This can be useful if you know the coordinates of a point you want to view or want to display a specific view for print purposes, etc.

Export

Page Setup

Set up options for printing the map currently displayed on the screen, including paper size and margins.

Print Preview

Preview how the printed output for the currently displayed map will appear.

Print

Print the currently displayed view of the system.


Save Map To File

This brings up the [Save Map dialogue](#) which lets you save a specified section of the map to a graphics file. This can be useful for use in reports or if you wish to annotate a map in external graphics software.

Export as MultiSpeak 3

This command allows you to export the model in a MultiSpeak V3 XML file which can then be consumed by another program which is MultiSpeak V3 interoperable.

4.2.2 Editing Tab

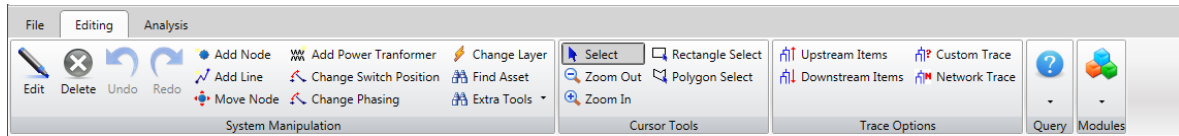

The edit menu is used for editing data and contains the command listed below. Most of these commands can also be accessed from the toolbar.

System Manipulation

Edit

You can use this command to bring up the [Node dialogue](#) or [Line dialogue](#) for the currently selected node or line on the current layer. This is equivalent to double-clicking on a node or line with the mouse.

Delete

This command will delete all currently selected [nodes](#) and/or [lines](#). Note that because of [connectivity](#) rules, deleting a node will delete all attached lines.

Undo

This command undoes recent changes to the [system](#). There is no limit to how many actions you can undo, however, some commands which make extensive changes to the data (especially some of the actions on the **Tools** menu) cannot be undone.

Redo

This command re-does the most recent **Undo** command.

Add Node

This command will allow you to add a node to the currently selected [electrical layer](#). Once a node is added, you may add an [element](#) to the node.

Add Line

Using this tool will allow you to add a line between two nodes on the same layer. The exception to this rule is if one node is on a [meter layer](#) and the other node has a [distribution transformer](#). To make a curve or bend in the line simply click where you would like the bend to be and then continue on to the next node. To terminate a line double click on the destination node. A line must always begin and end at a node. Once a line is created you can update its electrical properties by setting the appropriate conductor reference.

Move Node

This command allows you to move a node on the currently selected layer from one position to another.

Add Power Transformer...

This command is used to add a [power transformer](#) to the system. A power transformer creates a connection between [electrical layers](#). To use this command you must first select two [nodes](#) on different layers (you can select multiple nodes by holding down the CTRL key as you click on

nodes). These nodes will become the high and low voltage terminals of the power transformer.

If you are creating a 3-winding transformer you must select 3 nodes on at least two different layers. One node will become the HV terminal of the transformer, and the other nodes will become the secondary and tertiary terminals.

Once you have selected nodes, you can use this command and it will bring up the [Power Transformer dialogue](#).

Change Switch Position

Use this command to change the status of one or more switches. Select one or more switches you want to change and then choose this command.

Change Phasing

This command will allow you to update the phasing of all selected switches.

Change Layer

Use this command to change the layer for all selected items from one electrical layer to another. Note that if you are trying to move something from a [meter layer](#), you must move it to another meter layer to retain connectivity to a [distribution transformer](#).

Find Asset

This command brings up the universal search window. This window can also be accessed by typing Ctrl + F.

Extra Tools

Extra tools is a sub-menu containing several useful commands.

Cut Elements From Node allows the user to cut all [elements](#) and the name from one [node](#) and paste them onto another node of the same [electrical layer](#). Note that this does not cut the unique ID from the original node and paste it into the new node.

Copy Elements From Node allows the user to copy all elements and the name from one node and past them onto another node of the same electrical layer.

Paste Elements must be used in conjunction with one of the above commands. It allows the user to take the latest cut or copied elements and paste them onto the selected node.

Reset Line Lengths updates the length of lines through the whole system with the geographic length calculated by the distance between the two nodes on a line.

Set Feeder Names allows you to set up a naming condition for lines, either for the whole system or currently selected lines. This is explained in more detail in the Set Feeder Names Dialogue.

Affine Transform Map can be used to rotate and shift a system model to better fit it to actual conditions.

Affine Translate System allows the user to convert a system model from XY to latitude and longitude.

Cursor Tools

Select

The Select tool allows you to choose a single node or line by clicking on it. To select multiple items hold down Ctrl while clicking, to deselect an item hold Shift.

Rectangle Select

This tool will select any [nodes](#) or [lines](#) within the drawn rectangle which is on the currently selected [electrical layer](#).

Polygon Select

Polygon Select allows you to draw an abnormal shape to select any number of lines or nodes on the current electrical layer. To finish drawing the shape double click where the last corner should be.

Zoom Out

This tool lets you zoom out and view a larger area of the map. Click on a point to zoom out around that point.

Zoom In

Use this tool to zoom in on an area of interest on the map. You can either click once to zoom in by 50%, or you can click and drag a rectangle to zoom in on a specified area. You can also use the scroll wheel on a mouse to zoom in and out.

Trace Options

Trace Up

This traces upstream (i.e. back towards the supply) from the currently selected [node](#) or [line](#). All nodes and lines on the same [electrical layer](#) and which supply the start point will be selected. You can use the **Custom Trace...** command for more complicated queries.

Note that if you have a networked system (with closed loops in the circuit), the nature of up and downstream are no longer unique and an upstream trace may not give the expected results. Also, this command will not work on a circuit if there is no connectivity at the point where you start the trace. If you have no connectivity you can still use the **Network Trace** command.

Trace Down

This traces downstream (i.e. away from the supply) from the currently selected node or line. All nodes and lines on the same electrical layer and which are supplied by the start point will be selected. You can use the Custom Trace... command for more complicated queries.

Note that if you have a networked system (with closed loops in the circuit), the nature of up and downstream are no longer unique and a downstream trace may not give the expected results. Also, this command will not work on a circuit if there is no connectivity at the point where you start the trace. If you have no connectivity you can still use the **Network Trace** command.

Custom Trace...

This command opens the [Custom Trace dialogue](#) which lets you trace according to the system [connectivity](#), either upstream, downstream, across layers or even between a set of selected nodes. You will need to first select one or more [nodes](#) in order to use this command. You can also use this command to trace individual phases, which can be useful for diagnosing connectivity errors.

Note that if you have a networked system (with closed loops in the circuit), the nature of up and downstream are no longer unique and a custom trace may not give the expected results. Also, this command will not work on a circuit if there is no connectivity at the point where you start the trace. If you have no connectivity you can still use the **Network Trace** command.

Network Trace

This command traces all nodes and lines which are physically connected to the currently selected node or line on the same electrical layer. For example, you can use this command to select all feeders supplied from a given substation transformer, or you can use it to select a contiguous group of disconnected nodes.

Query

Custom Select

This command opens the [Custom Select dialogue](#) which allows you to query the nodes and lines in the model in order to select items which have specified characteristics. This can be very powerful if you want to select nodes with specific elements, phasing, or element properties. For example, you could use this command to select all nodes which contain overhead distribution transformers less than 100 kVA.

Query Property

This command opens the [Query Property dialogue](#) which allows you to query all (or a specified group of) objects of a specific type in order to find the count, average and total of a specific property of the object. For example you could query for total length of single-phase lines on a feeder.

Select All

This selects all nodes and lines in the entire system.

Invert Selection

This inverts the currently selected nodes and lines. All items which are currently shown selected are deselected, and all unselected items become selected. This tool can be useful in conjunction with other select tools to select items which do NOT have a specific characteristic (e.g. - use in conjunction with a **Trace Down** to select all nodes and lines not on a given feeder).

Show Disconnected

This command will select all [disconnected nodes](#) or lines in the system. Disconnected nodes and lines are cut off from any power supply and are not energized. This is a useful tool to use after making a number of edits in order to check the system is correctly configured. Note that if you have disconnected items you will be given a warning when you run an [analysis](#). This warning can be ignored if you disconnected part of the system on purpose (e.g. to represent de-energized lines or feeders).

Show Loops

This command will select all closed loops in the system. Closed loops may be the result of errors in configuration or accidentally leaving a [switch](#) closed that should be open. Note that if you have a closed loop you will be given a warning when you run an [analysis](#). This warning can be ignored if you created the loop on purpose (e.g. you are paralleling a transformer or modeling a switching operation).

Show Errors

This command performs a full check on the current system to check for errors, inconsistencies or warnings. This is the same check which is automatically performed before any analysis is run. Note that this function returns different levels of messages, including Info, Warning, and Error.

Info items represent situations which are unusual, such as disconnected nodes or loops, but which may not be an error. If you see this type of message, make sure you understand why and where these issues come from.

Warning items represent situations which are most likely in error, but which will not prevent an analysis being run. This includes items like overloaded distribution transformers. If you see this type of message, you should address the issue or at least understand the ramifications of the error.

Error items represent problems which will prevent the running of an analysis, such as incorrect phasing on elements, too many lines attached to a switch, etc. This type of problem must be corrected before attempting to run an analysis.

Find Loop Points

This command returns a list of nodes which are contained in a loop, if one exists.

Modules**Import ESRI GIS**


This module allows you to import data from an ESRI GIS file into your model. This is quite useful if your company already maintains a GIS connectivity model, since it can be re-used to produce the engineering model as well. This is explained more in the Import ESRI GIS Dialogue.

Switching Order

Switching Order allows you to choose a switch, from the model or a list, and then "operate" that switch. The details of what the effects of the change are will be outlined, and any switches which can be operated to restore power or break the created loop will appear in the list. This is explained in greater detail in the Switching Order Dialogue.

4.2.3 Analysis Tab

This tab gives you access to all the analysis tools in DESS. Note that the selection of tools will depend on those licenses purchased for DESS. If you need access to a certain function and see it listed here but it doesn't appear on the menu for your copy of DESS, please contact [Essex Energy](#) regarding the license.

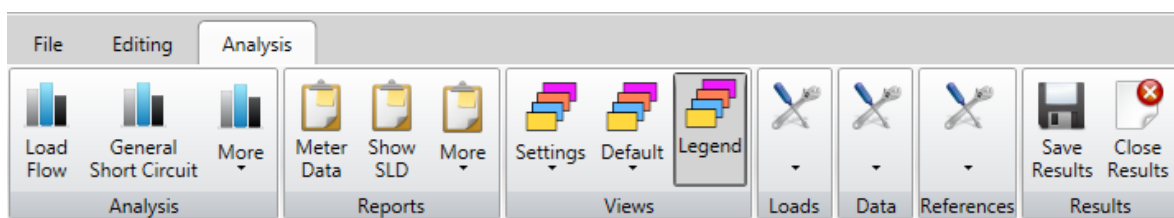

Analysis

Load Flow

Run the [load flow analysis](#). Show system voltages, currents, power and losses for a given set of loading conditions.

General Short Circuit

Runs the [general short circuit analysis](#). Shows fault levels for a set of points on the system.

More

Annual Load Flow

Run the [annual load flow analysis](#). Show range of voltages, currents, power and losses throughout the year plus energy.

Arc Flash

Arc Flash runs the [arc flash analysis](#). It shows the incident energy, fault protection level and protection zone for the selected assets.

Capacitor Optimization

Run the [capacitor optimization analysis](#). Show optimal location of capacitor banks.

Load Loss

Runs the [load loss analysis](#). Shows incremental losses due to load at a specific location.

Motor Starting

Runs the [motor starting analysis](#). Shows voltage drops and conditions due to starting a motor.

Open Point Optimization

Runs the [open point optimization analysis](#). Show optimal switching configuration for minimum losses.

Phase Balancing

Runs the [phase balancing](#) analysis to find phase changes for spurs and loads.

Protection Assistance

Protection Assistance has two different actions.

Select Protection Zone will select all nodes and lines in a protection zone when a protection element is selected.

Fault Range On Selected Nodes will give the calculated maximum and minimum fault values (using

the same parameters as [General Short Circuit](#) for the specified nodes.

Protection Coordination

Show device [coordination](#) upstream of a selected node.

SCADA Load Flow

Runs the [SCADA load flow analysis](#). This combines a standard load flow with real measurement information in order to dynamically scale modeled data to match real data.

Specific Short Circuit

Runs the [short circuit analysis](#). Shows fault levels for a set of points on the system.

Reports

Meter Data

Meter Data is a CSV exportable report containing information about selected meters or all meters in the system. The report includes: Node ID, Meter Number, Phasing, Voltage, Current, Customer Name, Address, and Transformer. Each of the columns can be shown or hidden, as well as filtered.

Show SLD

This command executes a trace through the system, either the whole or the currently selected portion, and creates a single line diagram from nodes which have "Include in SLD" checked off in the [node dialogue](#). Note that you must include a source or the program will not be able to trace the connectivity properly.

More

After any of the above analyses are performed, an analysis-specific set of reports will be generated and listed under More. This button will be hidden unless an analysis has been performed.

Views

Items on the Views menu are used to control how nodes and lines are displayed on the [map](#).

When you are editing a system, a default theme is used for nodes and lines. For example, you may have one symbol for transformers, and others for closed and open switches. Likewise, you may have different line styles for different voltages, different phasing and overhead vs. underground.

After running an analysis there may be additional items added to the Themes menu which provide additional views of map items depending on results from the analysis.

Settings

This command brings up a list of different sub areas where you can edit the default [appearance](#) of your system. There are three different items which you can select from this menu: Line Style Rules, Node Style Rules and Label Style Rules.

Node Style Rules

This command helps you to set up the default theme for nodes. This includes the styles to use for nodes depending on the properties of the nodes and the properties of any attached elements. This command brings up the [Node Style dialogue](#).

Line Style Rules

This command helps you to set up the default theme for lines. This includes the styles to use for lines depending on the properties of the lines and the properties of the conductors. This command brings up the [Line Style dialogue](#).

Label Style Rules

This brings up a the [Label Style dialogue](#) where you can edit the settings for the display of labels. Within this dialogue you can edit what labels are displayed on, what information is on the label and in what order the information is displayed. You can also change the font size, font and other factors in this dialogue.

Default

Clicking either on Default View or on the icon above Default will return the model to the default theme settings.

Additional items on the Default menu will be added depending on the type of analysis and results available, such as Node Voltages after running a [Load Flow analysis](#).

Show Legend

This option toggles whether or not the legend will show when showing themes from results. More information on Legend is available in the how to section under [Using Tooltips, Labels and the Legend](#).

Loads

Import Loads

This command lets you import load data from an external database (typically exported from a billing system). It works by matching up data in the external database with [loads](#) in DESS, and importing the defined values. You do not need the external data to be in a predefined format, as long as the data is present. See the [Import Loads](#) dialogue.

Create Loads

Use this command to create new [load](#) elements in DESS whose size is proportional to a [distribution transformer](#) present on the same node. This is useful for setting default loading on new transformers or those where exact load data is unavailable. See the [Create Loads](#) dialogue.

Load Scaling

The [Load Scaling](#) dialogue lets you modify the size of the loads within [load](#) elements on a selected set of nodes. You can choose to either modify the actual load values or just to modify the scaling factor within the element. You can scale selected loads by [season](#) and by [load category](#).

Combine Seasonal Loads

This command takes all seasonal loads on a single node and combines them to create a new single seasonal load.

SCADA Measurement Data

Use this dialogue to manage and edit data files which are used to store SCADA measurement data for use with the [SCADA load flow analysis](#). See the [Edit SCADA Measurement](#) dialogue for more details.

Data

Simplify Data

Simplify data will allow you to simplify your system by eliminating unnecessary spurs, nodes, and lines. See the [Simplify Data](#) dialogue for more details.

Reset Line Properties

This tool updates phasing and conductor type for selected lines. See [Set Line Properties](#) dialogue for more details.

Fix Switches With More Than Two Lines

This tool will automatically take switches with three or more lines and move the switch slightly upstream to a new node to fix the issue.

Open Short Loops

This tool will automatically open loops which have no loads or elements between loop points. Upon completion the number of loops opened will be displayed.

Copy Source and Power Transformer Info

This allows you to copy source and power transformer information from one system to another. Please see the [Copy Source and Power Transformer Info](#) dialogue for more details.

Reset Line Lengths

Reset Line Lengths updates the length of lines through the whole system with the geographic length calculated by the distance between the two nodes on a line.

Copy Conductor Info

This allows you to update any selected conductor's properties by copying the type or phasing from a different system. See [Copy Conductor Data](#) From Similar System dialogue for more instructions.

Create Node Data

This tool allows you to create multiple nodes from an external file, such as Access, Excel, CSV or DBase IV. See Create Node Data dialogue for more information.

Banked Transformers

Select Banks will select all banked transformers within the system.

Remove Empty Loads will remove loads on banked transformers which are 0kVA.

Spread Load on Bank will spread the load on a banked transformer equally among the phases.

Show Lines Missing Conductor References

This command assists you in identifying issues with the model by returning a list of lines missing references. Conductors not having references can be detrimental to analysis, since losses and loading will not be able to be calculated.

References

Change References

This very powerful and useful command allows you to make changes to the reference data for selected nodes or lines. For example, you can use it to change the conductor type for a set of lines, or to change one type of distribution transformer to another within a selected set of data. It also allows you to see how frequently different types of reference data are used in selected parts of your system. The following reference data can be affected: conductor types, transformer types, load seasons, load categories, protection types. See [Change References](#).

Create References

Creating references through this dialogue gives you much more control over the different configurations and parameters for the reference. It can be used to create overhead line and transformer references. See the [Create Reference](#) dialogue for more details.

Import References

This command lets you copy reference data items from another DESS system into the current DESS system. You may want to do this when creating a new system from scratch, or to import predefined items such as protection data into your system. See the [Import References](#) dialogue.

Organize References

This dialogue lets you change the order of a reference list. See [Organize References](#) dialogue for more details.

Results

Save Result

When a result is open (after running an analysis) you can save the raw result data to a number of different formats (including text, html and xml) so it can be accessed and manipulated by other software. You can also copy result data to the clipboard so that it can be pasted into other programs (e.g. spreadsheets or databases). The [Save Result dialogue](#) lets you specify what data to save and the format to use.

Close Result

Closes the results for an [analysis](#). Once you close a result or run another analysis, results from an analysis will no longer be available and are not automatically saved. If you want to save result data, either save the reports which are of interest to you, or use the [Analysis > Save Result](#) command to save the data of interest.

4.3 Docking Windows

There are three different docking windows in DESS. These items appear on the left side of the map and pop out as the mouse hovers over the items. They can also be pinned (fixed in place) using the thumbtack icon on the top right of the windows or clicked and dragged to anywhere on the screen. The windows are:

[Layer Docking Window](#)

[Reference Data Docking Window](#)

[Select Docking Window](#)


4.3.1 Layer Docking Window

Layer Docking Window



The Layer Docking Window allows you to set the current active electrical layer, add electrical layers, remove electrical layers, modify the visibility of layers and to add or modify background layers.

There are two different types of layers that can be modified in this window. [Electrical Layers](#) and [Background Layers](#).

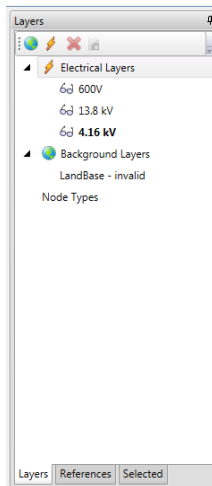

Electrical Layers

Underneath 'Electrical Layers', all of the current electrical layers are listed along with images denoting their current visibility. By double clicking on a layer you can view the [electrical layer properties dialogue](#). This dialogue contains all of the properties that you can set for a layer. Many of these can also be set by right clicking on the layer in the docking window.

Background Layers

Background layers can be easily modified, like electrical layers. All the [background layers](#) that are currently in this system are listed underneath 'Background Layers'.

Node Types

Using Node Types can set the visibility for specific types of nodes. For example, if you would like elbows (which are usually switches) to only show when meters are shown instead of when most switches are shown you can set that rule here. Rules are evaluated in order, from top to bottom. See the [node visibility dialogue](#) for more information.

Visibility

Visibility designates whether or not you can see any nodes and lines which are on a particular layer. If this option is turned off, you cannot see anything on that layer. If it is set to 'on', you can see all the nodes and lines on this layer if it is electrical, or the map image if it is a background layer. The last setting (Zoom) helps clear up your working space. This feature makes the layer visible only when zoomed in to a specific width. This range can be adjusted by using the minimum and maximum zoom text boxes on the right of the Layer Properties dialogue (whether electrical or background).

Selectable

You can toggle whether a particular electrical layer is selectable or not. If a layer is designated as not selectable, you cannot select any of the nodes or lines that are on the layer. You can still bring up the node dialogue box however, by double-clicking on the node, and edit the information associated with that node or line. You cannot select those nodes or lines, and consequently cannot move them, run

certain analyses on them, track them upstream or downstream, etc.

Active Layer


This is the electrical layer where all of the lines and nodes that are added to the system are currently added to. You can only have one active layer at a time. This active layer is shown by having bold text as the title of the active layer.

Edit Layer Properties

This brings up either the [Electrical Layer Properties](#) dialogue or the [Background Layer Properties](#) dialogue.

4.3.2 Reference Data Docking Window

The Reference Data docking window contains links to all of the [reference data dialogs](#) required to change your [reference data](#) items.

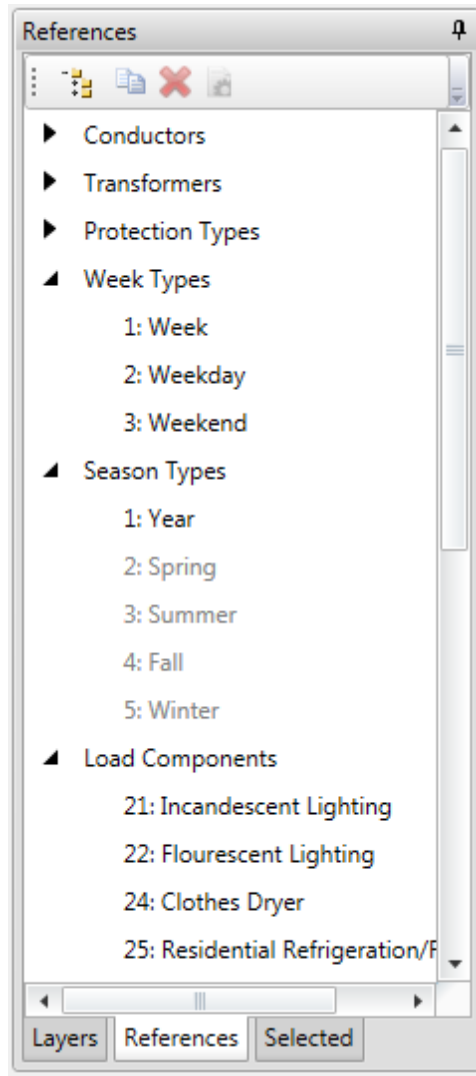

The reference data is organized according to type and then according to the order in which the items were created.

You can add new reference data by using the button that resembles a series of folders. This control is located at the top left of the docking window.

You can make a copy of a currently selected reference item using the icon one to the right of the add new reference data button.

You can delete a currently selected item by selecting it and pressing the red 'X'.


You can bring up an item's properties by selecting it and pressing the far right button. You can also double-click on an item to bring up its properties dialogue.

4.3.3 Select Docking Window

Select Docking Window



The Select Docking Window contains information about every node or line that is currently selected.

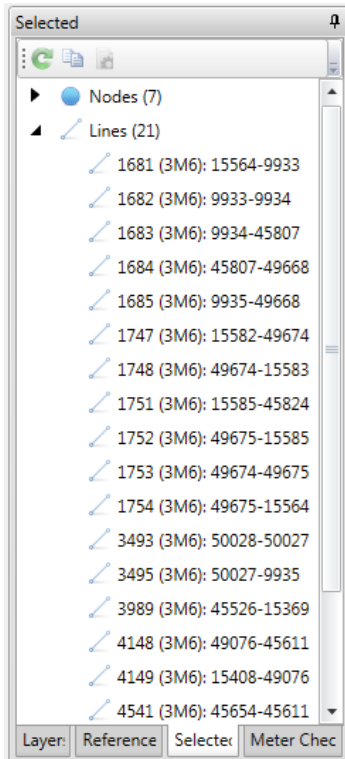

You can refresh the selected list at any time by clicking on the green refresh sign in the top left of the docking window.

This contains the ID's of all of the currently selected nodes and lines. By double-clicking on any of these ID's your screen will automatically center on the selected node or line. All of the currently selected lines will be displayed underneath the 'lines' heading. Note that the sidebar will not refresh until the green refresh button if the top left is clicked, so you can keep a selection of node ID's in the sidebar.

An equally important function of the select docking window is its ability to copy its currently selected list to the clipboard as simple text. From this you can save it, allowing you to save your selections for future reference.

4.4 Dialogs

The following sections describe specific details of dialogs in DESS.

Element Dialogs - These are dialogues which appear when creating or editing the properties of elements.

- [Capacitor dialogue](#)
- [Distribution Transformer dialogue](#)
- [Load Element dialogue](#)
- [Motor Generator dialogue](#)
- [Power Transformer dialogue](#)
- [Protection dialogue](#)
- [Reactor dialogue](#)
- [Regulator dialogue](#)
- [Source dialogue](#)
- [Switch dialogue](#)

Reference Data Dialogs - These dialogues appear when editing the reference data in the [reference data docking window](#)

- [Conductor dialogue](#)
- [Transformer Reference dialogue](#)
- [Week Type dialogue](#)

- [Season dialogue](#)
- [Load Component dialogue](#)
- [Load Category dialogue](#)
- [Protection Type dialogue](#)

Editing Dialogues - These dialogues are accessed through the [Editing](#) tab

- [Change Phasing dialogue](#)
- [Move Between Layers dialogue](#)
- [Find Asset dialogue](#)
- [Set Feeder Names dialogue](#)
- [Affine Transform Map dialogue](#)
- [Affine Translate System dialogue](#)
- [Custom Trace dialogue](#)
- [Show Loops dialogue](#)
- [Custom Query dialogue](#)
- [Query Property dialogue](#)
- [Import GIS dialogue](#)
- [Switching Order Dialogue](#)

Analysis Dialogs - These dialogues appear when running an analyses

- [Arc Flash dialogue](#)
 - [Capacitor Optimization dialogue](#)
 - [Create Loads dialogue](#)
 - [General Short Circuit dialogue](#)
 - [Import Loads dialogue](#)
 - [Label Style dialogue](#)
 - [Line Style dialogue](#)
 - [Load Flow dialogue](#)
 - [Load Loss dialogue](#)
 - [Load Scaling dialogue](#)
 - [Meter Data dialogue](#)
 - [Motor Starting dialogue](#)
 - [Node Style dialogue](#)
 - [Open Point Optimization dialogue](#)
 - [Phase Balancing dialogue](#)
 - [Protection Coordination dialogue](#)
 - [SCADA Load Flow dialogue](#)
 - [SCADA Measurement Data dialogue](#)
 - [Specific Short Circuit dialogue](#)
-
- [Change References dialogue](#)
 - [Create References dialogue](#)
 - [Import References dialogue](#)

- [Organize References dialogue](#)
- [Simplify Data dialogue](#)
- [Reset Line Properties dialogue](#)
- [Copy Substation Info dialogue](#)
- [Copy Conductor Info dialogue](#)
- [Create Node Data dialogue](#)
- [Save Result dialogue](#)

Other Dialogs - These dialogues appear in various areas of the program. Each one explains where it is accessed.

- [Options dialogue](#)
- [System Properties dialogue](#)
- [Set View dialogue](#)
- [Save Map dialogue](#)
- [Electrical Layer dialogue](#)
- [Background Layer dialogue](#)
- [Node Visibility dialogue](#)
- [Node dialogue](#)
- [Line dialogue](#)

4.4.1 Element Data Dialogues

Information is available for editing each type of [element](#) in DESS as follows:


- [Capacitor dialogue](#)
- [Distribution Transformer dialogue](#)
- [Load Element dialogue](#)
- [Meter dialogue](#)
- [Motor Generator dialogue](#)
- [Power Transformer dialogue](#)
- [Protection dialogue](#)
- [Reactor dialogue](#)
- [Regulator dialogue](#)
- [Source dialogue](#)
- [Switch dialogue](#)

4.4.1.1 Capacitor Element Dialogue

Description

This dialogue is used for entering data for a [capacitor element](#). It is accessed from the [Node dialogue](#), by adding a capacitor element or double clicking on an already created capacitor element.

Appearance

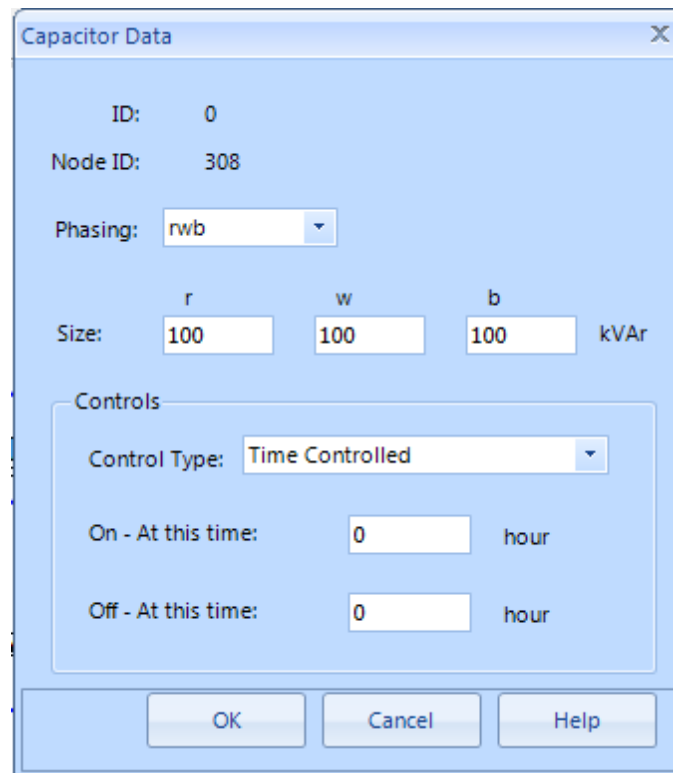

The image shows a 'Capacitor Data' dialog box with the following fields and controls:

- ID:** 0
- Node ID:** 308
- Phasing:** rwb (dropdown menu)
- Size:** Three input fields for phases r, w, and b, each containing the value 100, followed by the unit kVAr.
- Controls:** A sub-dialog box containing:
 - Control Type:** Time Controlled (dropdown menu)
 - On - At this time:** 0 hour
 - Off - At this time:** 0 hour
- Buttons:** OK, Cancel, and Help at the bottom.

Controls

ID

This is the automatically assigned and unique ID number of the capacitor element.

Node

This is the ID number of the node that the capacitor is attached to.

Phasing

Element phasing. This should be compatible with the phasing of the lines supplying the parent node.

Size

The nominal size of the capacitor bank per phase. This value represents the capacitive power of the banks with the parent node at nominal voltage. The actual power will vary depending on voltage.

Control Type

How the capacitor is controlled. It can be one of the following:

- Fixed - Capacitor is always on.
- Time Controlled - Turns on at a given hour (e.g. On Limit = 12). Turns off later at the specified time (e.g. Off Limit = 18).
- VAr Controlled - Turns on when the line VArS are too high (e.g. On Limit = 500). Turns off when the VArS are too low (e.g. Off Limit = 100).
- Power Factor Controlled - Turns on when power factor too low (e.g. On Limit = .95). Turns off when the power factor is too high (e.g. Off Limit = .99)
- Voltage Controlled - Turns on when the voltage is too low (e.g. On Limit = .94). Turns off when the voltage is too high (e.g. Off Limit = 1.04)

On and Off Limits


The values of the control variables at which point the capacitor bank is turned on and off (see Control Type above).

4.4.1.2 Distribution Transformer Dialogue

Description

This dialogue is used for entering data for a [distribution transformer element](#). It is accessed from the [Node dialogue](#), by adding a distribution transformer element or double clicking on an already created distribution transformer element.

Appearance

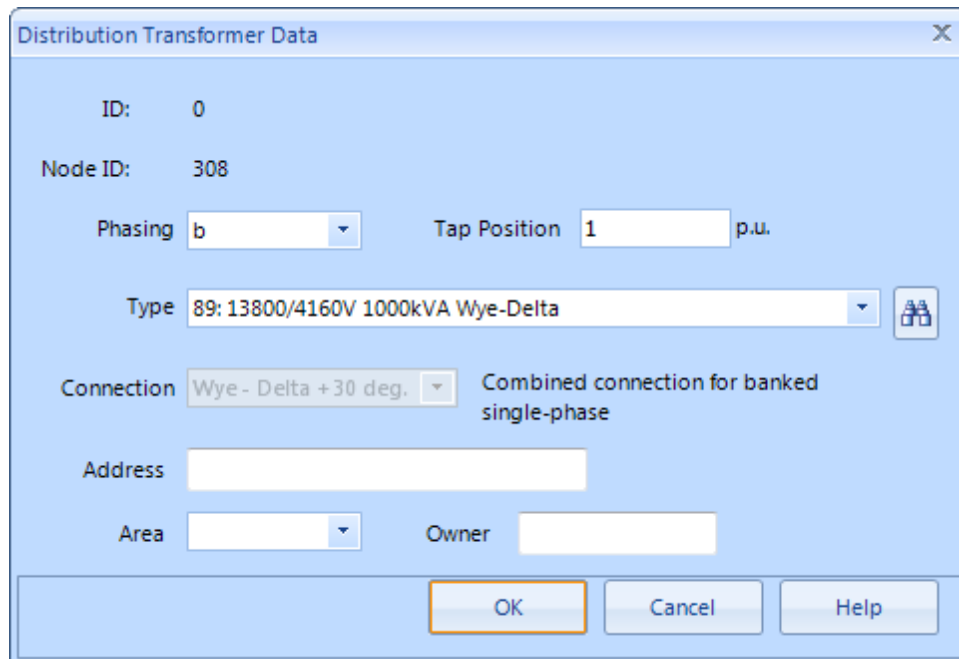

The screenshot shows a dialog box titled "Distribution Transformer Data". It contains the following fields and controls:

- ID: 0
- Node ID: 308
- Phasing: b (dropdown menu)
- Tap Position: 1 (text input) p.u.
- Type: 89: 13800/4160V 1000kVA Wye-Delta (dropdown menu) with a small icon button to the right.
- Connection: Wye - Delta +30 deg. (dropdown menu) with the text "Combined connection for banked single-phase" below it.
- Address: (empty text input)
- Area: (empty dropdown menu)
- Owner: (empty text input)
- Buttons: OK, Cancel, and Help at the bottom right.

Controls

ID

This is the automatically assigned and unique ID number of the distribution transformer element.

Node

This is the ID number of the node that the distribution transformer is attached to.

Phasing

Element phasing. This should be compatible with the phasing of the lines supplying the parent node and with any loads attached to the same node.

Tap Position

The tap position in per unit. A value of 1 is the nominal tap position. A value greater than 1 boosts the secondary voltage, and a value of less than 1 reduces the secondary voltage.

Type

Use this list to select the type of transformer. The drop down box shows a complete list of all available transformer reference data. Use the **Find** button to more easily find a specific type of transformer via the [Find Transformer dialogue](#). The type of transformer you pick must have the correct high voltage and phasing type (i.e. you cannot put a 3-phase transformer on a single phase line) or you will receive errors when you try to run an analysis.

Connection

This allows you to specify the connection of the transformer. In most cases the connection will be the same as specified in the [Transformer Reference Data dialogue](#). However, if you want to represent 3 single-phase transformers connected as a 3-phase transformer, you can specify the 3-phase connection here.

Address

This text field can store the physical address of an asset for later use and for matching with GIS.

Area

If a distribution system is broken into one or more areas, this field can be used to track which area a distribution transformer is in.

Owner

The owner of an asset can be indicated in this text field. This is useful if an upstream distributor's assets need to be modeled.

4.4.1.3 Load Element Dialogue**Description**

This dialogue is used for entering data for a [load element](#). It can be accessed from the [Node dialogue](#), by adding a load element or double clicking on an already created load element.

Appearance

Load Data

ID: 0
Node ID: 308

Load Connection
☐ Phase to phase
☒ Phase to neutral

Phasing: b

Load Category: 18: Fixed Load .9 PF

Micro-Generation Element: ☐ Unmetered Load: ☐

Load Set Info

ID	r	w	b	Season	Load Unit	Scaling Factor
1	0	0	20	Winter	kWh	1

Add... Edit... Delete

OK Cancel Help

Controls

ID

This is the automatically assigned and unique ID number of the load element.

Node ID

This is the ID number of the node that the load is attached to.

Load Connection

Choose how the load is connected to the primary system. Usually this will be phase-ground for 4-wire systems (with a neutral) and phase-phase for 3-wire systems (no neutral conductor).

Phasing

Element phasing. This should be compatible with the phasing of the lines supplying the parent node and with any distribution transformer attached to the same node.

Load Category

The load category reference data that defines the characteristics and load curves associated with this load.

Micro-Generation Element

This check box indicates that the load is actually a small generator. This can be used for small solar sites, back up generators or distributed generation.

Unmetered Load

This check box is used to indicate that a load is not metered, such as streetlights.

Load Set Info

The load set data contains the actual load values and periods of load for this load element. For a typical load that is active throughout the year, you would have one load set per season.

Use the **Add** button to add a new load set. Use the **Edit** button or double-click on a row to edit the data. Use the **Delete** button to delete the currently selected load set. Adding or editing a load set brings up the [Load Set dialogue](#).

4.4.1.3.1 Simple Load Dialogue

Description

This dialogue is used for entering data for a [load element](#). It can be accessed from the [Node dialogue](#), by adding a load element or double clicking on an already created load element.

Appearance

Controls

ID

This is the automatically assigned and unique ID number of the load element.

Node ID

This is the ID number of the node that the load is attached to.

Phasing

Element phasing. This should be compatible with the phasing of the lines supplying the parent node and with any distribution transformer attached to the same node.

Load Connection

Choose how the load is connected to the primary system.

Unmetered Load

This check box is used to indicate that a load is not metered, such as streetlights.

Balanced Load

This indicates that the load on each phase is balanced, and only the three phase kW and kVAr need to be entered. If this box is not checked off, you may enter the kW and kVAr per phase.

Voltage-Power


This drop-down determines how the load will consume power. There are several options, including a custom option where the PV and QV can be entered per phase.

4.4.1.3.2 Load Set Dialogue

Description

The load set dialogue lets you enter load data for a particular period of the year. It is accessed from the [Load Element dialogue](#), by adding a set of load data or double clicking on an already created set of load data.

Appearance

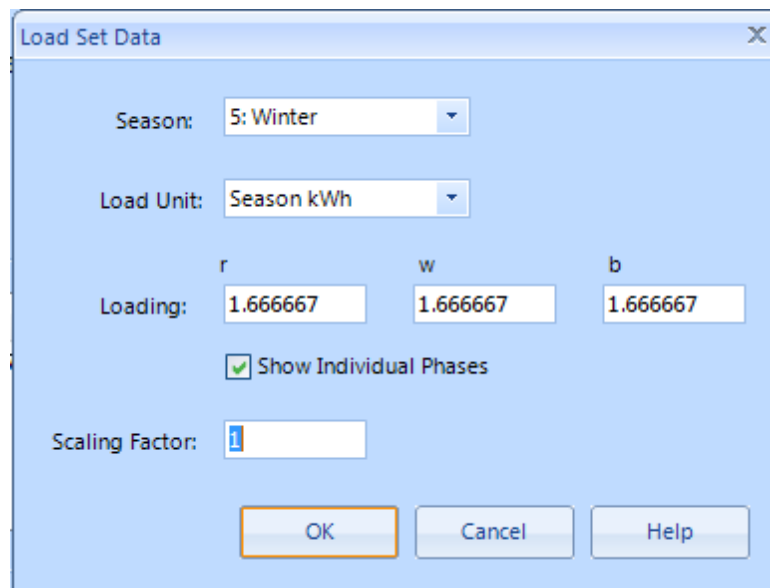

The screenshot shows a dialog box titled "Load Set Data" with a close button (X) in the top right corner. The dialog contains the following fields and controls:

- Season:** A dropdown menu currently showing "5: Winter".
- Load Unit:** A dropdown menu currently showing "Season kWh".
- Loading:** Three input fields labeled "r", "w", and "b" above them. Each field contains the value "1.666667".
- Show Individual Phases:** A checkbox that is checked, with a green checkmark icon to its left.
- Scaling Factor:** An input field containing the value "1".
- Buttons:** Three buttons at the bottom: "OK", "Cancel", and "Help".

Controls

Season

Choose the season reference data item that defines the period this load is active for.

Load Unit

The unit of measurement of the load that the Loading measures. You can choose from:

- Peak kVA - The average peak during the load period. Measured in kVA.
- Peak kW - The average peak during the load period. Measured in kW.

- Peak Amps - The average peak during the load period. Measured in Amps.
- kWh - The total energy measured in kWh used during the period specified by the Season. For example, if the season were summer (June, July August), the loading value would represent the total kWh used during those 3 months.

Loading

The actual load values on each phase in units specified by Load Unit.

Show Individual Phases

If you have a two or three phase load you have the option of entering the entire load in one text box or you can enter the load for each phase (picture). If you are entering a balanced load it's usually easier to enter it as a single total value.

Scaling Factor

An additional scaling factor modifying the loading. This scaling factor can be used to temporarily change the values of specific loads without losing the original loading values.

4.4.1.4 Meter Dialogue

Description

The boundary meter dialogue is used to enter data for a [meter element](#). It is shown when you create a new boundary meter from the [Node dialogue](#) or double clicking on an already created meter element.

Appearance

Meter Data

ID: 21781 TX ID: 46614

Node ID: 37962 TX Description: 75 kVA 1ph 27600V-240V Pad

Phasing: r

Meter Info

Meter Number: p16284

Voltage: 240 V Current: 200 A

Customer: Sample

Address: 2565 Lane

OK Cancel Help

General Parameters Tab Controls

ID

This is the automatically assigned and unique ID number of the [transformer element](#).

Node ID

This is the ID number of the node that the meter is attached to.

TX ID

This is the ID number of the transformer that the meter is attached to.

Phasing

This is the phase of the meter, it is automatically derived from the transformer the meter is attached to.

Meter Info

This information is editable, and represents the customer's information.

4.4.1.5 Motor Generator Dialogue**Description**

This dialogue is used for entering the data for a [motor generator element](#). It is accessed from the [Node dialogue](#), by adding a motor generator element or double clicking on an already created motor generator element.

Appearance

The screenshot shows the 'Motor Generator Data' dialog box with the following fields and controls:

- ID:** 0
- Node ID:** 308
- Selection:** ☐ Synchronous, ☒ Motor, ☒ Induction, ☐ Generator
- Rated Size:** 1000 kVA
- Impedances:**

	R	X	
Zero Sequence:	0.02	0.2	p.u.
Negative Sequence:	0.02	0.2	p.u.
Subtransient:	0.02	0.2	p.u.
- Grounding:** ☒ Grounded.

	R	X	
Ground:	0	0	Ohms
- Power (kW, kVA):**

P:	500
Q:	0
- Starting Parameters:**

Current Multiple:	6
Power Factor:	0.35
- Voltage Regulation:**

Min kVA:	-300	
Max kVA:	800	
Regulator Setting:	1	p.u.
- Buttons:** OK, Cancel, Help

Controls

ID

This is the automatically assigned and unique ID number of the motor/generator element.

Node ID

This is the ID number of the node that the motor generator is attached to.

Synchronous / Induction

Determines whether the element represents a synchronous machine or an induction machine. Most motors are induction machines, and most large generators are synchronous.

Motor / Generator

Determines whether the element represents a 3-phase motor or a 3-phase generator.

Rated Size

Nominal power rating of the machine (kVA). Impedances are specified in p.u. on the rated size.

Zero Sequence Impedance

The zero sequence impedance in p.u. on rated kVA. This, in conjunction with the ground impedance, affects the zero sequence infeed to a fault.

Negative Sequence Impedance

The negative sequence impedance of the machine in p.u. on rated kVA. This determines the negative sequence infeed to a fault.

Subtransient Impedance

The subtransient impedance of the machine in p.u. on rated kVA. This determines the positive sequence infeed to a fault.

Grounded

Check this box if the generator terminals are grounded.

Ground Impedance

The ground impedance if any in Ohms, if the generator is grounded.

Power

The actual power consumption of a motor or power output of a generator. Note that for a synchronous machine, the voltage regulation will change the actual VAR output as described below. If you want to specify an exact VAR output for a synchronous generator, set both voltage regulation VAR limits (**Min kVAR** and **Max kVAR**) to the desired reactive power.

The following table describes the meaning of P and Q for different types of machines

	Synchronous Machine		Induction Machine	
	Motor	Generator	Motor	Generator
P	kW power consumed	kW power generated	kW power consumed at nominal voltage. Constant current at other voltages.	kW power generated

Q	Initial value for kVAr generated by machine. Final value determined by terminal voltage and Min kVAr and Max kVAr limits.	kVAr used by induction machine at nominal voltage. Constant impedance at other voltages.
----------	---	--

Current Multiple

The multiple of the rated kVA that the motor uses at start up. This is used for Motor Starting analyses to determine the maximum voltage drop. For motors without any kind of soft start this may be in the range of 5-6. Different types of soft starting, such as starting capacitors or low-voltage starting can significantly reduce this value.

Power Factor

The power factor of the motor during start up. This is used for Motor Starting analyses to determine the maximum voltage drop. For a motor without any type of soft start this may be as low as .15-.2 .

Voltage Regulation

For synchronous machines, these values specify the maximum range of VAr that the machine can output in order to regulate the voltage at the output terminal of the generator. These values, combined with the voltage at the terminal of the machine and the regulator setting will determine the actual VAr output of a synchronous machine. The input value of Q is only the starting value before the analysis starts iterating.

Regulator Setting

The desired per unit value of the voltage at the terminal of the synchronous machine. DESS will change the VAr output of the machine (within the allowed VAr limits) in order to maintain this voltage. There is no deadband for generator voltage regulation.

4.4.1.6 Power Transformer Element Dialogue

Description

The power transformer dialogue is used to enter data for a [power transformer element](#). It is shown when you create a new power transformer using the [Editing Tab](#) and existing power transformers can be edited from the [Node dialogue](#) of the HV node of the transformer.

Appearance

The screenshot shows the 'Power Transformer Data' dialog box with the 'General Parameters' tab selected. The dialog contains several input fields and checkboxes for configuring transformer parameters.

General Parameters Tab Controls

- ID:** 0
- Node ID:** 308
- Phasing:** rwb (dropdown)
- Winding Connection:** Wye - Wye (dropdown)
- Size (kVA):**
 - Nominal Size: 1000
 - ☐ Forced Cooling
 - Maximum Size: 0
- Shunt Losses (kW, kVAR):**
 - Real: 0
 - Reactive: 0
- Impedances (per unit on kVA size):**

	R	X
Primary Secondary:	0	0.01
Primary Tertiary:	0	0.01
Secondary Tertiary:	0	0.01
X0 to X1 Ratio:	1	
- Grounding Impedances (Ohms):**

	R	X
<input checked="" type="checkbox"/> Primary Grounded		
Primary Neutral:	0	0
<input checked="" type="checkbox"/> Secondary Grounded		
Secondary Neutral:	0	0
<input checked="" type="checkbox"/> Tertiary Grounded		
Tertiary Neutral:	0	0

Buttons: OK, Cancel, Help

General Parameters Tab Controls

Some of the settings in this dialogue only apply to 3-winding transformers. The term '3-winding transformer' used below refers to a transformer with one HV primary winding and two secondary windings which are both connected to LV systems.

ID

This is the automatically assigned and unique ID number of the transformer element.

Node ID

This is the HV node that the power transformer is attached to.

Phasing

The phasing of the transformer

Winding Connection

The type of connection between the windings:

- Wye-Wye
- Wye-Delta + 30 - The most common type of YD
- Wye-Delta - 30
- Delta - Delta
- Delta - Wye - 30 - The most common type of DY
- Delta - Wye + 30
- Wye - delta - Wye - Primary Y, Secondary Y with a D winding between them to reduce fault currents. (extra impedance information)
- Autotransformer - Single winding transformer
- Autotransformer with Delta Tertiary (extra impedance information)
- Single Phase

Nominal Size

The rated kVA of the transformer. Per Unit impedances are based on this rating.

Forced Cooling

Check this option for transformers which use forced cooling (mixtures of pumps, fans, etc) to allow the transformer to carry a load greater than the Nominal Size

Maximum Size

This is the maximum rated kVA of the transformer with forced cooling. This is the size which is used to determine the % Loading on the transformer during various analyses.

Primary Secondary Impedance

The main transformer impedance. For a 3-winding transformer the impedance between the high voltage winding and the first of the secondary windings.

Primary Tertiary Impedance

The impedance between the high voltage and tertiary windings. This only applies to 3-winding transformers or transformers with an intermediate tertiary winding (YDY or Autotransformer with D tertiary).

Secondary Tertiary Impedance

The impedance between the secondary and tertiary windings. This only applies to 3-winding transformers or transformers with an intermediate tertiary winding (YDY or Autotransformer with D tertiary).

X0 to X1 Ratio

This ratio is used to represent the different in reactance between the zero sequence (X0) and the positive sequence (X1). Normally this is 1.0. However, for some transformers there may be a difference. For example, a value of .95 is sometimes used to represent the slightly lower reactance of the zero sequence for DY and YD transformers.

Shunt Losses

The no-load transformer losses in kW/kVAr. These losses are independent of transformer loading.

Primary Grounded

Check this box if the primary winding is grounded. Typically, Y windings attached to a 4-wire system are generally grounded. Delta windings are not usually grounded although they can be using a zig-zag grounding transformer.

Primary Neutral Impedance

Impedance of the primary winding grounding. Zero if solidly grounded.

Secondary Grounded

Check this box if the secondary winding is grounded. Typically, Y windings attached to a 4-wire system are generally grounded. Delta windings are not usually grounded although they can be using a zig-zag grounding transformer.

Secondary Neutral Impedance

Impedance of the secondary winding grounding. Zero if solidly grounded.

Tertiary Grounded

Impedance of the tertiary winding grounding. Zero if solidly grounded. This only applies to 3-winding transformers.

Tertiary Grounding Impedance

Check this box if the secondary winding is grounded. Typically, Y windings attached to a 4-wire system are generally grounded. Delta windings are not usually grounded although they can be using a zig-zag grounding transformer. This setting only applies to a 3-winding transformer.

The screenshot shows the 'Power Transformer Data' dialog box with the 'Tap Settings' tab selected. The dialog has two sub-tabs: 'General Parameters' and 'Tap Settings'. The 'Tap Settings' sub-tab contains the following controls:

- ☒ Tap on HV Winding
- Tap Position: 1 p.u.
- Tertiary Tap Position: 1 p.u.
- Minimum Tap Position: 0.8 p.u.
- Maximum Tap Position: 1.2 p.u.
- Tap Step Size: 0.01 p.u.
- ☐ Automatic Tap Changer
 - Setting: 1 p.u.
 - Deadband: 0.02 p.u.
 - ☐ Tertiary Winding is Regulated
- ☐ Use Line Drop Compensation
 - Real Voltage: 0 p.u.
 - Reactive Voltage: 0 p.u.

At the bottom of the dialog are three buttons: OK, Cancel, and Help.

Tap Settings Tab Controls

Tap on HV Winding

Check this if the transformer tap is on the HV winding. Uncheck if the tap is on the LV winding(s). You cannot directly represent a transformer with taps on both the HV and LV side. To do this, use a power transformer with an HV tap and add a regulator element next to the LV terminal.

Tap Position

The tap position. If you have an HV tap then a value greater than 1 will reduce the LV voltage and a value less than 1 will boost the LV voltage. If you have the tap on the LV side then a tap position greater than 1 will increase the LV voltage.

Tertiary Tap Position

If you have a 3-winding transformer with LV taps, this will let you change the tap on the tertiary winding.

Minimum Tap Position

The minimum tap position (used by the automatic voltage regulator to limit tap position travel)

Maximum Tap Position

The maximum tap position (used by the automatic voltage regulator to limit tap position travel)

Tap Step Size

The p.u. size of the tap step. If your tap steps are quoted as voltages you will need to convert them. For example, taps on a 44kV winding of 44000V, 45100V, 46200V, 47300V would correspond to a minimum tap of 1.0, and maximum tap of 1.075 and a tap step of .025 p.u.

Automatic Tap Changer

Check this box if the transformer has an automatic tap changer with voltage regulation.

Setting

The p.u. voltage setting on the secondary side of the transformer. The voltage regulator will try to maintain this voltage by changing taps. For example, setting a value of 1.0 will cause the regulator to try and maintain nominal voltage on the secondary.

Deadband

Automatic voltage regulator dead band. This represents the size of change that is required to trigger a tap step change. No tap change will occur while the difference between the node voltage and the Regulator Settings is less than the size of the deadband. Typically, the size of the deadband should be larger than the tap step size, otherwise it may cause 'hunting' where the tap setting becomes unstable and a load flow analysis cannot find a final solution.

Tertiary Winding is Regulated

If you have a 3-winding transformer and the voltage regulation is based on the voltage at the tertiary winding, check this box. If the box is unchecked, it is assumed that voltage regulation on a 3-winding transformer is based on the voltage at the secondary winding.

Line Drop Compensation

Check this box to make use of line drop compensation for voltage regulation. Line drop compensation is a way to make the voltage regulator act as if it is regulating a point downstream of the regulator where the voltage drop between the regulator and the desired control point is equal to the specified values.

Real Voltage

The p.u. real voltage drop between the regulator location and the desired control location.

Reactive Voltage

The p.u. reactive voltage drop between the regulator location and the desired control location.

4.4.1.7 Protection Element Dialogue


Description


This dialogue is used for editing data for a [protective element](#). This dialogue is accessed from the

[Node dialogue](#), by adding a protection element or double clicking on an already created protection element.

Appearance

For relays and then for fuses:

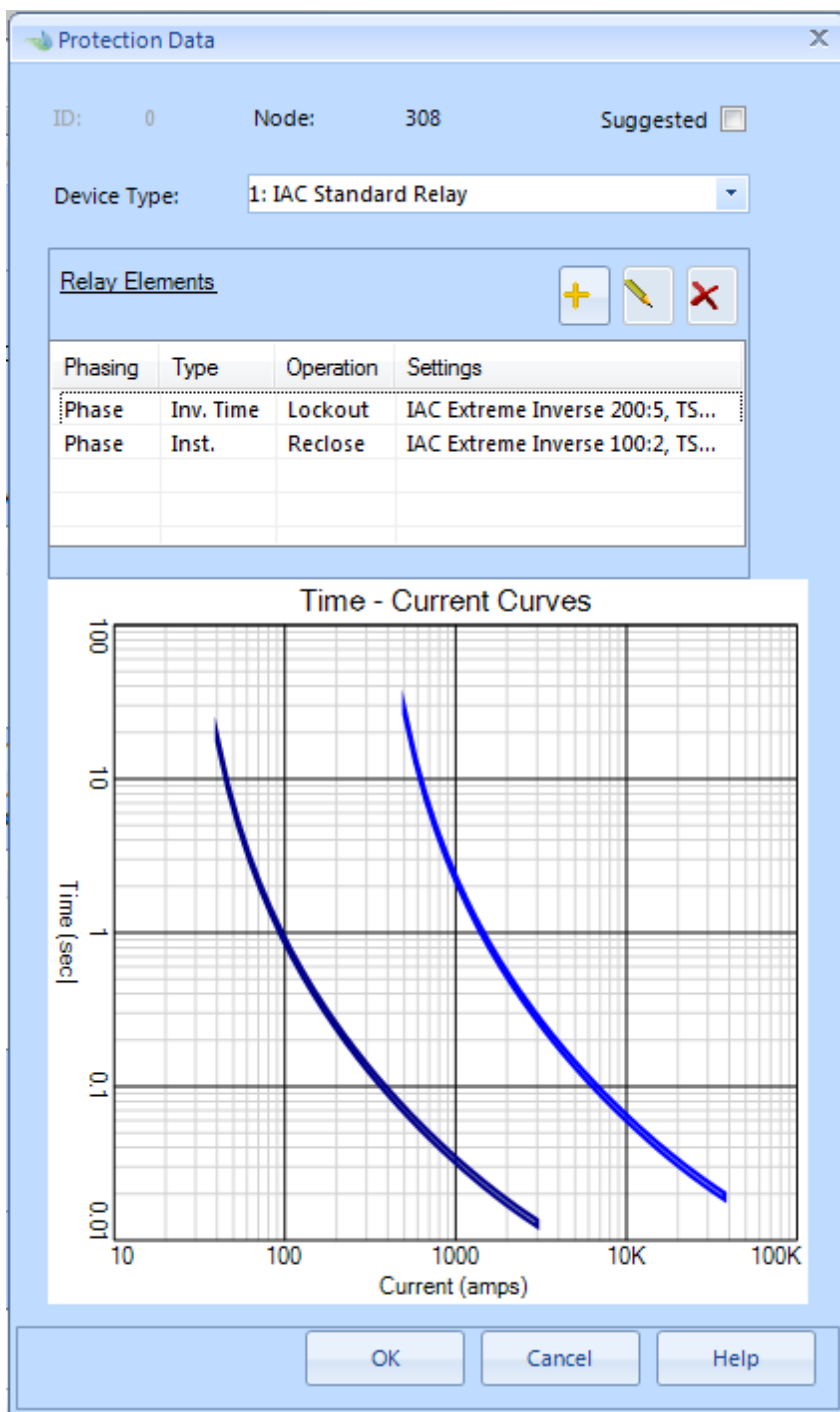

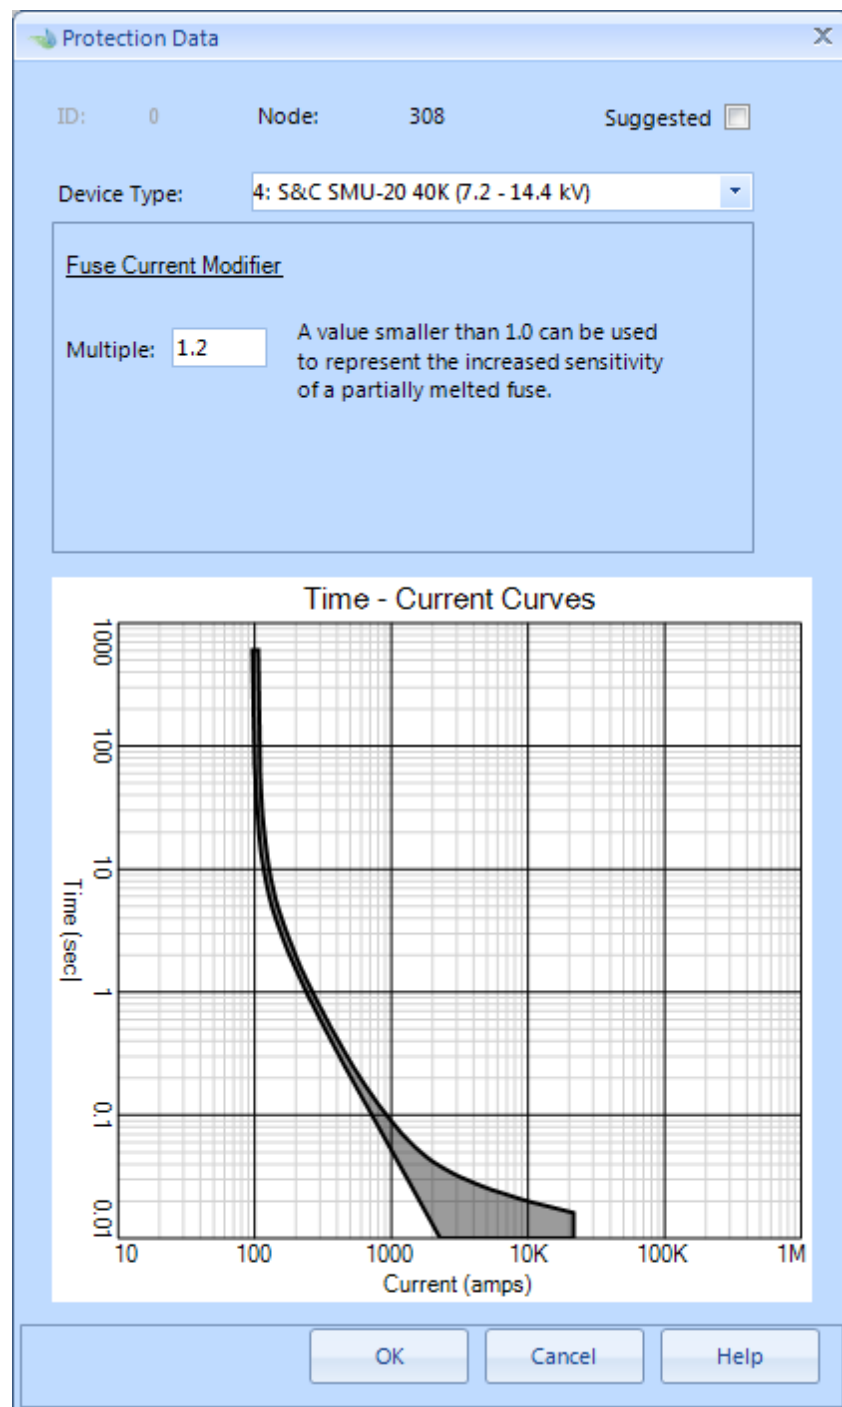**Hint:**

Unlike most data dialogs, you can change the size of the Protection data dialogue. Put your mouse over the edge of the dialogue and drag. You can do this to make the graph bigger and easier to see.

General Controls

ID

This is the automatically assigned and unique ID number of the protection element.

Node

This is the ID number of the node that the Protection element is attached to.

Device Type

Shows a list of [protection reference](#) devices (fuses, relays, etc) defined in the reference data.

Fuse Settings

When a fuse is selected (as shown at right above), the following settings are available:

Current Modifier Multiple

Sets the current multiple override for this type of fuse. Normally set at 1.0 to represent standard fuse operation. Can be set to less than 1.0 to represent the faster operation of a partially melted fuse.

Relay Settings

When a relay is selected (as shown at left above), the following settings are available:

Relay Elements

Shows one or more relay elements defined for this device.

Use the [Add](#) button (Yellow Plus) to add a new item and display options in the [Relay Settings dialogue](#)

Use the [Edit](#) button (Pencil), or double-click on an existing item to edit the item.


Use the **Delete** button (Red 'X') to delete the item.

4.4.1.7.1 Relay Setting Dialogue

Description

This dialogue lets you choose a settings group for a relay curve. It is accessed from the [Protection Element dialogue](#), by adding a relay setting (by clicking the yellow plus button) or by double clicking on an already created relay setting.

Appearance

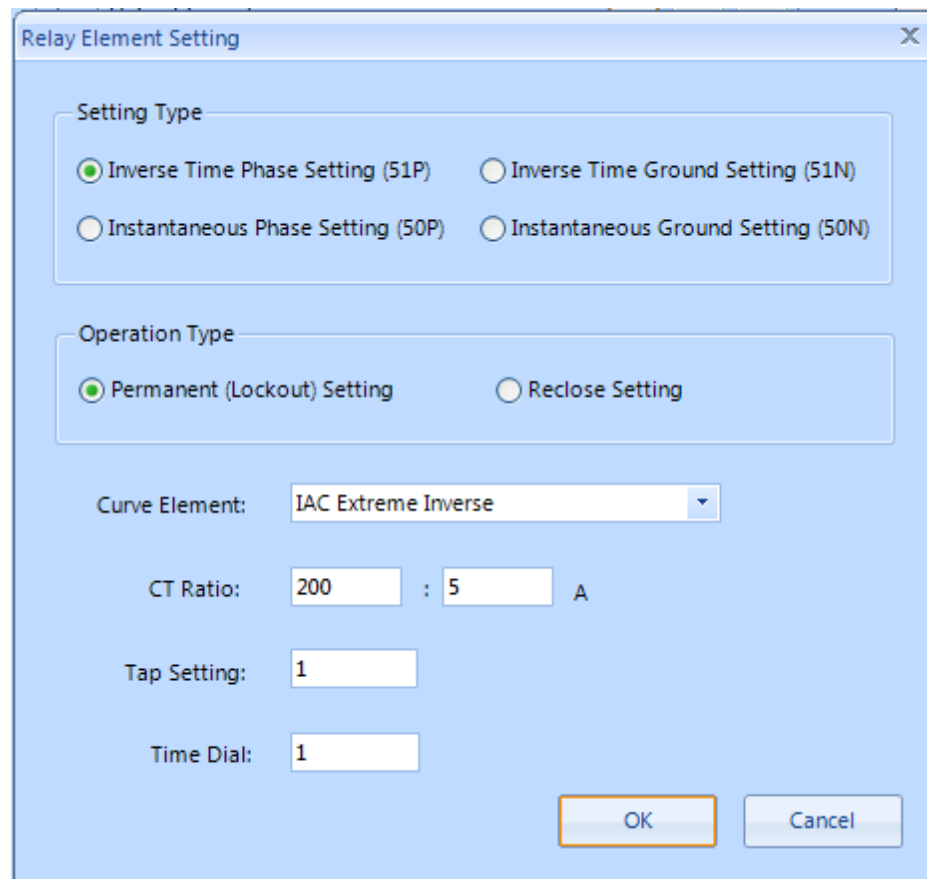

The image shows a 'Relay Element Setting' dialog box with the following fields and options:

- Setting Type:**
 - ☒ Inverse Time Phase Setting (51P)
 - ☐ Inverse Time Ground Setting (51N)
 - ☐ Instantaneous Phase Setting (50P)
 - ☐ Instantaneous Ground Setting (50N)
- Operation Type:**
 - ☒ Permanent (Lockout) Setting
 - ☐ Reclose Setting
- Curve Element:** A dropdown menu showing 'IAC Extreme Inverse'.
- CT Ratio:** Two input fields with '200' and '5', followed by a colon and the letter 'A'.
- Tap Setting:** An input field with the value '1'.
- Time Dial:** An input field with the value '1'.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

Controls

Setting Type

The specific setting type. Settings for the same phase group and operation type are combined on time-current graphs, so permanent settings for 51P and 50P would be combined, as would 51N and 50N

Operation Type

Lets you choose either normal permanent breaker settings or initial settings for reclose operations.

Curve Element

The type of curve to use for this condition. All curves available from the [Protection Reference](#) data are shown in the list.

CT Ratio

CT stands for Current Transformer. This is the current transformer ratio to use for this relay setting.

Tap Setting

The tap setting of this curve. Larger values of tap setting shift the curve to the right, and vice versa.

Time Dial


The time dial setting of this curve. Generally, larger values of time dial shift the curve up, and vice versa.

4.4.1.8 Reactor Element Dialogue

Description

This dialogue is used for entering data for a [reactor element](#). It is accessed from the [Node dialogue](#), by adding a reactor element or double clicking on an already created reactor element.

Appearance

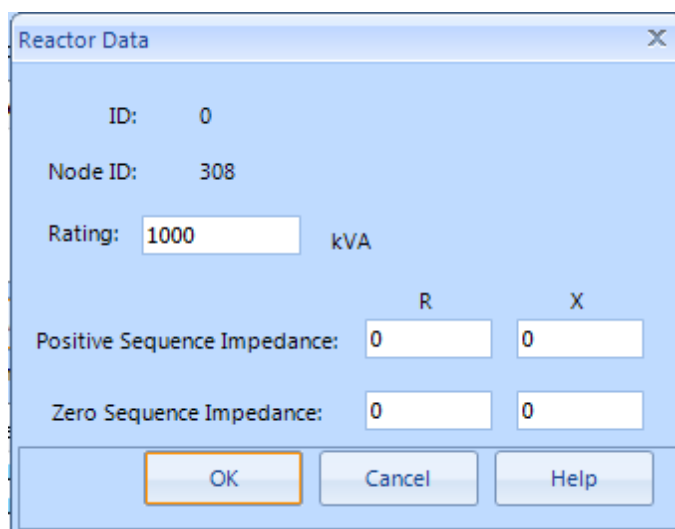

The image shows a 'Reactor Data' dialog box with a light blue background and a standard Windows-style title bar with a close button (X). The dialog contains the following fields and controls:

- ID:** A text field containing the value '0'.
- Node ID:** A text field containing the value '308'.
- Rating:** A text field containing '1000' followed by the unit 'kVA'.
- Positive Sequence Impedance:** Two text fields labeled 'R' and 'X', both containing the value '0'.
- Zero Sequence Impedance:** Two text fields labeled 'R' and 'X', both containing the value '0'.
- Buttons:** At the bottom, there are three buttons: 'OK' (highlighted with an orange border), 'Cancel', and 'Help'.

Controls

ID

This is the automatically assigned and unique ID number of the reactor element.

Node

This is the ID number of the node that the reactor element is attached to.

Rating

The nominal rating of the reactor. Used for calculating impedance.

Positive Sequence Impedance

The positive sequence impedance of the series reactor in p.u. on rated kVA. The negative sequence impedance is equal to this.

Zero Sequence Impedance

The zero sequence impedance of the reactor. This value can allow you to use the reactor as an arbitrary unbalanced impedance on the system. In most cases this value should be the same as the positive sequence impedance.

4.4.1.9 Regulator Element Dialogue

Description

This dialogue is used for entering data for a [regulator element](#). It is accessed from the [Node dialogue](#),

by adding a regulator element or double clicking on an already created regulator element.

Appearance

The image shows a 'Regulator Data' dialog box with the following fields and sections:

- ID:** 0
- Node ID:** 308
- Phasing:** rwb (dropdown menu)
- Rating:** 250 kVA
- Sequence Impedances (p.u. on kVA):**
 - Positive:** R=0, X=0
 - Zero:** R=0, X=0
- Tap Settings:**
 - Tap Position:** 1 p.u.
 - Minimum Tap Position:** 0.8 p.u.
 - Maximum Tap Position:** 1.2 p.u.
 - Tap Step Size:** 0.01 p.u.
- Automatic Regulation:** ☐
 - Regulator Setting:** 1 p.u.
 - Regulator Deadband:** 0.01 p.u.
- Line Drop Compensation:** ☐
 - Real Voltage:** 0 p.u.
 - Reactive Voltage:** 0 p.u.

Buttons at the bottom: OK, Cancel, Help.

Controls

ID

This is the automatically assigned and unique ID number of the regulator element.

Node ID

This is the ID number of the node that the regulator element is attached to.

Phasing

Element phasing. The phasing should be consistent with the phasing of the lines supplying the parent node.

Rating

Regulator rating in kVA. Note that the rating of a regulator is usually much smaller than the power being regulated.

Tap Position

Regulator tap position in p.u. A tap position greater than 1 boosts the downstream voltage. A tap position less than 1 bucks the voltage.

Minimum Tap Position

The minimum tap position in p.u. (affects automatic voltage regulation).

Maximum Tap Position

The maximum tap position in p.u. (affects automatic voltage regulation).

Tap Step Size

Size of each tap step in p.u.

Sequence Impedances

The sequence impedances of the regulator in p.u. on kVA rating. Typical regulator impedances are very small and can be left as zero if desired.

Automatic Regulation

Check if the regulator tap should be automatically changed to maintain the desired downstream voltage.

Regulator Setting

The desired p.u. voltage on the secondary side of the regulator.

Regulator Deadband

Automatic voltage regulator dead band. This represents the size of change that is required to trigger a tap step change. No tap change will occur while the difference between the node voltage and the Regulator Settings is less than the size of the deadband.

Line Drop Compensation

Check this box to make use of line drop compensation for voltage regulation. Line drop compensation is a way to make the voltage regulator act as if it is regulating a point downstream of the regulator where the voltage drop between the regulator and the desired control point is equal to the specified values.

Real Voltage

The p.u. real voltage drop between the regulator location and the desired control location.

Reactive Voltage

The p.u. reactive voltage drop between the regulator location and the desired control location.

4.4.1.10 Source Element Dialogue

Description

This dialogue is used for entering data for a [source element](#). It is accessed from the [Node dialogue](#), by adding a source element or double clicking on an already created source element.

Appearance

The 'Source Data' dialog box is used to configure a source element. It includes fields for ID, Node ID, and Name. A checkbox for 'Balanced 3-Phase Voltage' is checked. Below this, there are input fields for Voltage (4160 V (L-L)) and Angle (0 Degrees). A section for 'Impedances (p.u. on 100MVA)' contains a table for Maximum and Minimum Impedance values for Positive, Negative, and Zero sequences. A checkbox for 'Source Is Grounded' is also checked, with corresponding Zero Sequence impedance fields. The dialog has OK, Cancel, and Help buttons at the bottom.

	Maximum Impedance: (Min Fault Level)		Minimum Impedance: (Max Fault Level)	
	R:	X:	R:	X:
Positive Sequence:	0	0	0	0
Negative Sequence:	0	0	0	0
Zero Sequence:	0	0	0	0

Controls

ID

This is the automatically assigned and unique ID number of the source element.

Node

This is the ID number of the node that the source element is attached to.

Voltage

Actual voltage supplied from the source in volts. This will typically be different than the nominal voltage of the layer containing the source node.

Angle

Source angle with respect to the arbitrary zero degrees. You would use a non-zero source angle if you had two or more sources with a measurable difference in supply voltage angle. This would allow you to model the effect of closing a switch between the two regions supplied from the different sources.

Impedances

The sequence impedances of the source, representing the impedance of the transmission system, measured in p.u. on 100 MVA. Typically, the positive sequence and negative sequence impedances are identical.

The maximum impedance values give the lowest fault current levels on the system and the minimum impedances give the largest fault current levels in the short circuit analysis.


If you have fault levels at the source or impedances on a different base you can calculate the required impedances in p.u. at 100 MVA. See [Converting Source Impedances](#).

4.4.1.11 Switch Element Dialogue

Description

This dialogue is used for entering data for a [switch element](#). It can be accessed from the [Node dialogue](#), by adding a switch element or double clicking on an already created switch element.

Appearance

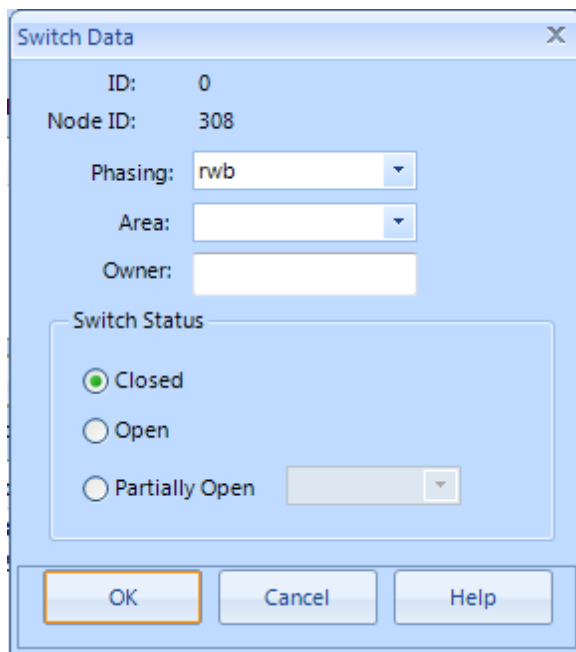

Switch Data

ID: 0

Node ID: 308

Phasing: rwb

Area:

Owner:

Switch Status

☒ Closed

☐ Open

☐ Partially Open

OK Cancel Help

Controls

ID

This is the automatically assigned and unique ID number of the switch element.

Node ID

This is the ID number of the node that the switch is attached to.

Phasing

The phasing of the switch element represents the phases that can be switched. If you include extra

phases which are not present in adjacent lines they will be ignored.

Area

If a distribution system is broken into one or more areas, this field can be used to track which area a switch is in.

Owner

The owner of an asset can be indicated in this text field. This is useful if an upstream distributor's assets need to be modeled.

Switch Status

Specify the status of the switch. Normally you would choose either Open or Closed. However, you can simulate partial switching by choosing which phases of the switch are open.

4.4.2 Reference Data Dialogues

Information regarding properties and editing for [reference data](#) is available for each type of data:

- [Conductor dialogue](#)
- [Transformer Reference dialogue](#)
- [Week Type dialogue](#)
- [Season dialogue](#)
- [Load Component dialogue](#)
- [Load Category dialogue](#)
- [Protection Type dialogue](#)

4.4.2.1 Create Reference Dialogue

Description

This dialogue is used for creating new [conductor data](#) and [transformer data](#). It is accessed from the Analysis tab, under [References > Create References](#).

Appearance

Conductor Data

ID: 2

Description: 1/0 ACSR 27600V Overhead

Characteristics

Material: ACSR

☒ Overhead Line
☐ Underground Cable

Nominal Voltage: 27600 V Cross Section: 53.5 sq mm

Sequence Impedances (Ohms)

R1: 0.5523 /km
X1: 0.4852 /km
R0: 0.9644 /km
X0: 1.4641 /km

Ratings (Amps)

Hot Rating (40°C): 273
Hot Emergency Rating: 273
Cold Rating (-10°C): 273
Cold Emergency Rating: 273

Charging Capacitance: (kVar/ph)
0.915 /km

Damage Curve: [dropdown] View Curve

Temperatures

Max Insulation Temp. [empty]
Initial Operating Temp. 80

OK Cancel Help

Controls

ID

The unique ID of this reference data item. Automatically assigned.

Description

User description of the conductor. This description appears whenever the user needs to select a conductor, such as in the [line dialogue](#).

4.4.2.2 Conductor Data Dialogue

Description

This dialogue is used for editing [conductor data](#). It is accessed from the **Conductors** section of the

Reference docking window either by adding a new reference or double clicking on a reference which was already created. This data is used from the [Line dialogue](#).

Appearance

Conductor Data

ID: 2

Description: 1/0 ACSR 27600V Overhead

Characteristics

Material: ACSR

☒ Overhead Line
☐ Underground Cable

Nominal Voltage: 27600 V Cross Section: 53.5 sq mm

Sequence Impedances (Ohms)

R1: 0.5523 /km
X1: 0.4852 /km
R0: 0.9644 /km
X0: 1.4641 /km

Ratings (Amps)

Hot Rating (40°C): 273
Hot Emergency Rating: 273
Cold Rating (-10°C): 273
Cold Emergency Rating: 273

Charging Capacitance: (kVAR/ph)

0.915 /km

Damage Curve

Temperatures

Max Insulation Temp.
Initial Operating Temp. 80

Controls

ID

The unique ID of this reference data item. Automatically assigned.

Description

User description of the conductor. This description appears whenever the user needs to select a conductor, such as in the [line dialogue](#).

Material

The conductor material. Choose from:

- Unknown
- Copper - solid or stranded copper conductor
- Aluminum - aluminum or aluminum alloy conductor
- ACSR - aluminum core steel reinforced conductor
- Steel - steel stranded or solid connection (busbar)

Nominal Voltage

The nominal phase-phase voltage of the layer where this type of conductor will be used. This is not necessarily the same as the rated voltage of a cable. For example, if you had a cable that is rated at 15kV but is being used at 13.8kV, you would enter 13800 here.

Overhead Line / Underground Cable

Choose whether this represents an overhead conductor bundle or an underground cable.

Cross Section

Cross-sectional area of the phase conductor.

**Note:**

The data for description, material, nominal voltage, overhead/underground and cross-section is only used for descriptive purposes and for purposes of showing themes and performing queries. These data items have no actual effect on analysis calculations.

Positive Sequence Impedance**Zero Sequence Impedance**

The positive and sequence impedance of the conductor bundle or cable in ohms/km. These values implicitly include the effects of conductor size, neutral size and conductor spacing. For single-phase lines the zero sequence impedance should equal the positive sequence impedance.

Charging Capacitance

The kVAR equivalent of the capacitance per km per phase. This effect is more prevalent at higher voltages (proportional to the square of the voltage).

Damage Curve

This allows you to enter the damage curve for the conductor. It will be used during [protection coordination](#).

Max Insulation Temp.

The maximum temperature that the insulation on a conductor can withstand. This will be used during [protection coordination](#).

Initial Operating Temp.

The initial temperature of the conductor for analysis purposes.

Ratings (Hot, Cold, Emergency)

The rated cable ampacities at hot (40C) and cold weather (-10C) conditions. The emergency ratings

are the ratings allowed for short durations (one-two hours).

If you choose different ratings for hot and cold then the line loading (% of rated capacity) in the analysis results will make use of the different ratings. For example, consider a line with a hot rating of 300A and a cold rating of 400A. If the line was carrying 150A at a 40C ambient temperature, the loading would be 50%. If it was carrying 150A at -10C, the loading would only be 37.5%.

4.4.2.2.1 Find Conductor Dialogue

Description

This dialogue is used to help select a particular conductor. It is called from the [Line Data dialogue](#) (and from some of the utilities).

Appearance

Criteria			Matching Items:
Voltage	Location	Material	
Any	Any	Any	16: 1/0 ACSR 4160V Overhead
208V	Overhead	Unknown	15: 3/0 ACSR 4160V Overhead
416V	Underground	Copper	
600V		Aluminum	
1000V		ACSR	
4160V		Steel	
8320V			
27600V			

Buttons: OK, Cancel, Help

Controls

Criteria

Use the different criteria to select characteristics of the [conductor](#) you want to find. For each criteria (nominal voltage, location, material), you can choose a specific value in order to reduce the size of the list of matching items.

Matching Items


This list shows the types of conductor which match the specified criteria. Once you have selected one of these items in the list you can click **OK** to choose that item.

OK

Chooses the selected item. OK is only enabled when you have make a selection from the **Matching Items** list.

4.4.2.3 Transformer Reference Data Dialogue**Description**

This dialogue is used for editing [distribution transformer reference data](#). It is accessed from the Transformers section of the Reference docking window either by adding a new reference or double clicking on a reference which was already created. This data is used from the [Distribution Transformer Element dialogue](#).

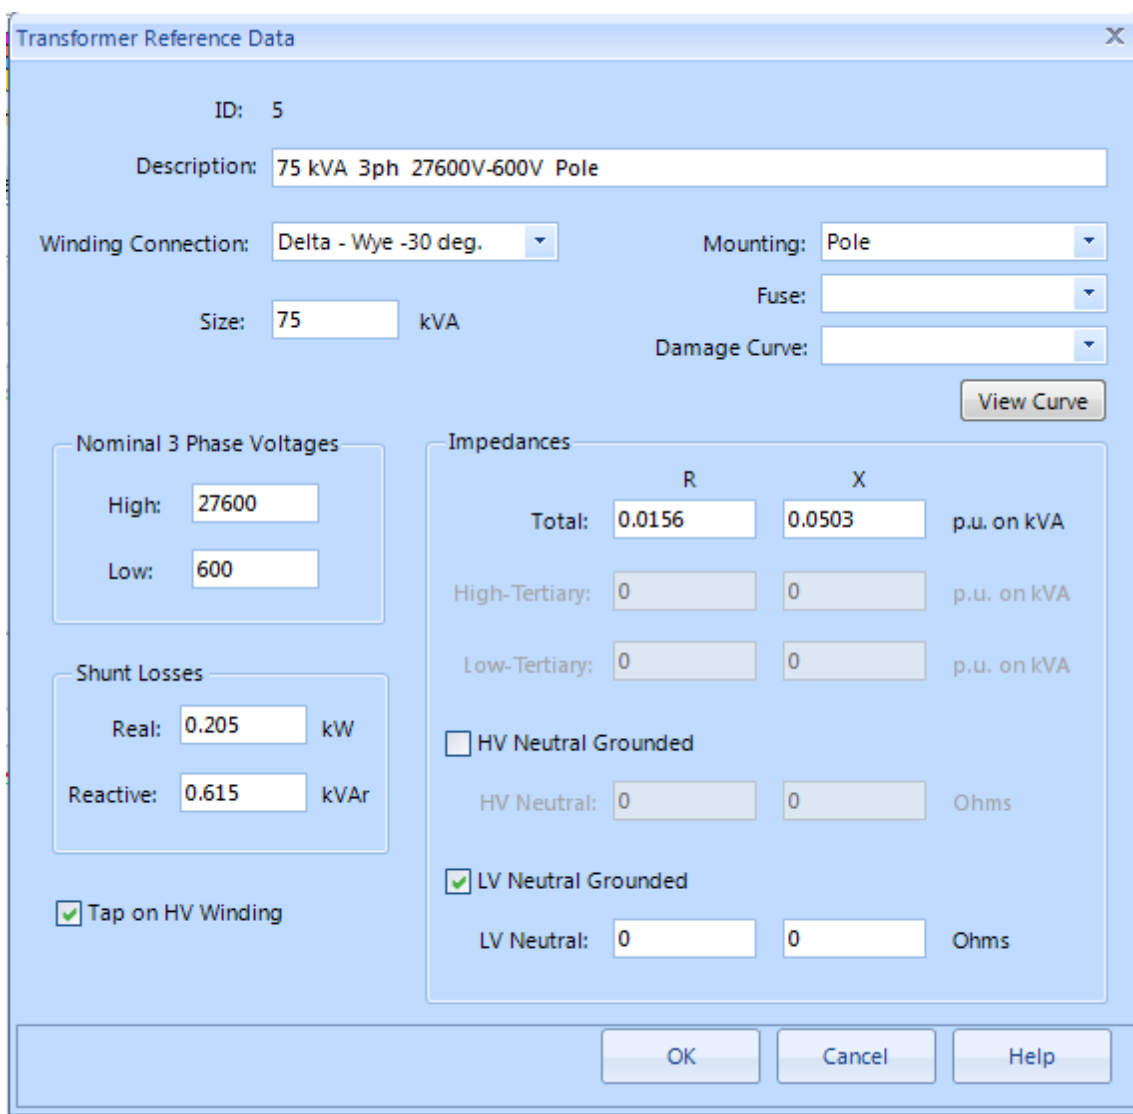Appearance

The screenshot shows the 'Transformer Reference Data' dialog box. It contains the following fields and controls:

- ID:** 5
- Description:** 75 kVA 3ph 27600V-600V Pole
- Winding Connection:** Delta - Wye -30 deg. (dropdown)
- Mounting:** Pole (dropdown)
- Size:** 75 kVA
- Fuse:** (dropdown)
- Damage Curve:** (dropdown)
- View Curve** button
- Nominal 3 Phase Voltages:**
 - High:** 27600
 - Low:** 600
- Shunt Losses:**
 - Real:** 0.205 kW
 - Reactive:** 0.615 kVAr
- ☒ **Tap on HV Winding**
- Impedances:**

	R	X	
Total:	0.0156	0.0503	p.u. on kVA
High-Tertiary:	0	0	p.u. on kVA
Low-Tertiary:	0	0	p.u. on kVA
<input type="checkbox"/> HV Neutral Grounded			
HV Neutral:	0	0	Ohms
<input checked="" type="checkbox"/> LV Neutral Grounded			
LV Neutral:	0	0	Ohms

At the bottom are **OK**, **Cancel**, and **Help** buttons.

Controls

ID

The unique ID of this reference data item. Automatically assigned.

Description

User description of the transformer type. This description appears whenever the user needs to select a transformer, such as in the [distribution transformer dialogue](#).

Winding Connection

The connection between the high and low voltage windings. For YD and DY transformers the most common connections are listed first (Wye-Delta +30 and Delta-Wye -30) The degree angle refers to the angle of the secondary voltage relative to the angle of the primary voltage.

You should select the actual connection for a single transformer here. If you want to represent 3 single-phase transformers connected as a 3-phase transformer, select a Single Phase connection here, and specify the 3-phase connection in the [distribution transformer dialogue](#).

Size

The size of the transformer in kVA. This is used to calculate impedances which are input as p.u. on transformer size.

Mounting

The location of the transformer. Not used for analysis purposes but can be useful for queries and node style themes. Choices are:

- Unknown
- Pad - mounted at grade, usually on a concrete pad
- Pole - mounted on a pole, usually supplied by overhead lines
- Vault - mounted below grade
- Submersible - a submersible transformer, usually below grade

Fuse

This drop down allows you to select the fuse type which will be protecting the transformer. This will be used during [protection coordination](#).

Damage Curve

This drop down allows you to select the damage curve for the transformer. This will be used during [protection coordination](#).

Nominal 3 Phase Voltages

The high voltage is the nominal phase-phase voltage of the layer where this transformer will be used. The low voltage is the nominal phase-phase voltage of the transformer secondary.

**Hint:**

Voltages in DESS are always input as phase-phase values, even if the equipment being described is only being used on single-phase areas of the system.

Shunt Losses

The no-load losses for the transformer. This losses are independent of the transformer loading.

Tap on HV Winding

Check if the tap is on the HV winding, uncheck if on the LV winding.

Total Impedance

The short circuit impedance between the primary and secondary windings, in p.u. on transformer size.

High-Tertiary Impedance

The impedance between the high voltage and tertiary windings. This only applies to transformers with an intermediate tertiary winding (YDY or Autotransformer w/ D tertiary).

Low-Tertiary Impedance

The impedance between the low voltage and tertiary windings. This only applies to transformers with an intermediate tertiary winding (YDY or Autotransformer w/ D tertiary).

HV Neutral Grounded

Check this box if the HV winding is grounded. Typically, Y windings attached to a 4-wire system are generally grounded. Delta windings are not usually grounded although they can be using a zig-zag grounding transformer.

HV Neutral Impedance

Impedance of the HV winding grounding. Zero if solidly grounded.

LV Neutral Grounded

Check this box if the LV winding is grounded. Typically, Y windings attached to a 4-wire system are generally grounded. Delta windings are not usually grounded although they can be using a zig-zag grounding transformer.

LV Neutral Impedance


Impedance of the LV winding grounding. Zero if solidly grounded.

4.4.2.3.1 Find Transformer Dialog

Description

This dialogue is used to help select a particular distribution transformer type. It is called from the [Distribution Element dialogue](#) (and from some of the utilities).

Appearance

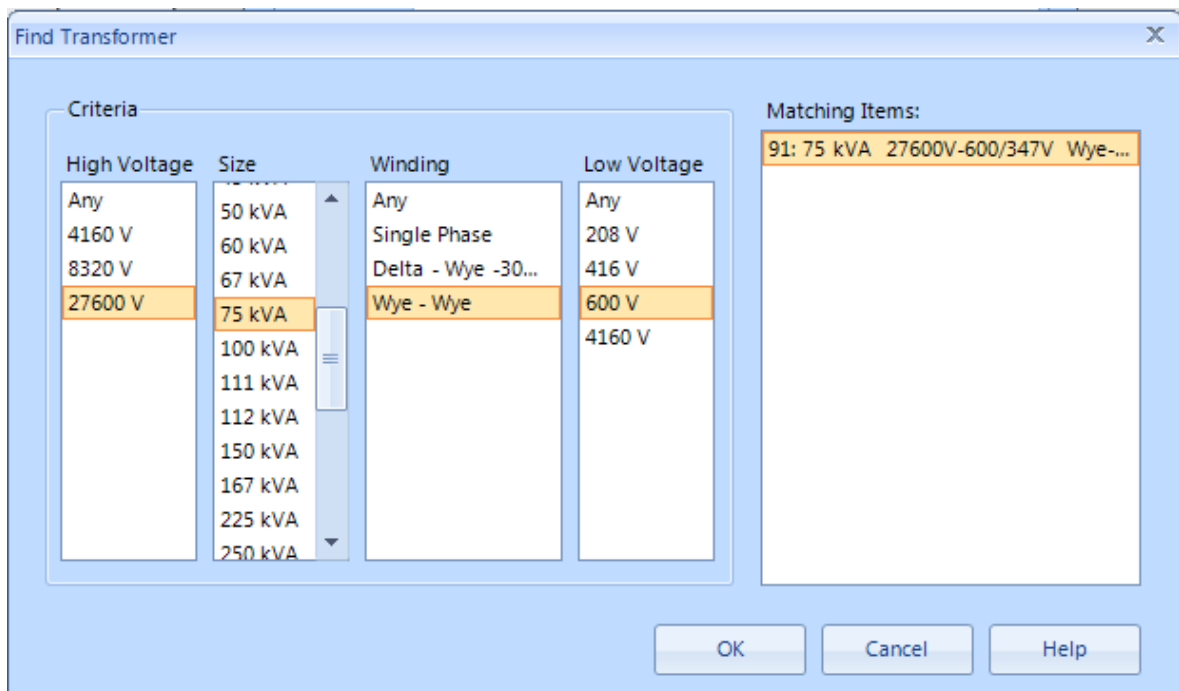

Controls

Criteria

Use the different criteria to select characteristics of the [distribution transformer](#) you want to find. For each criteria (high voltage, size, winding and low voltage), you can choose a specific value in order to reduce the size of the list of matching items.

Matching Items

This list shows the types of transformer which match the specified criteria. Once you have selected one of these items in the list you can click **OK** to choose that item.

OK


Chooses the selected item. OK is only enabled when you have make a selection from the **Matching Items** list.


4.4.2.4 Protection Type Reference Data Dialogue

Description

This dialogue is used for editing [protection reference data](#) items. It is accessed from the Protection Types section of the Reference docking window either by adding a new reference or double clicking on a reference which was already created. The [protection element dialogue](#) allows you to select an item of this type.

Appearance (for Fuses, Relays, Reclosers and damage curves)

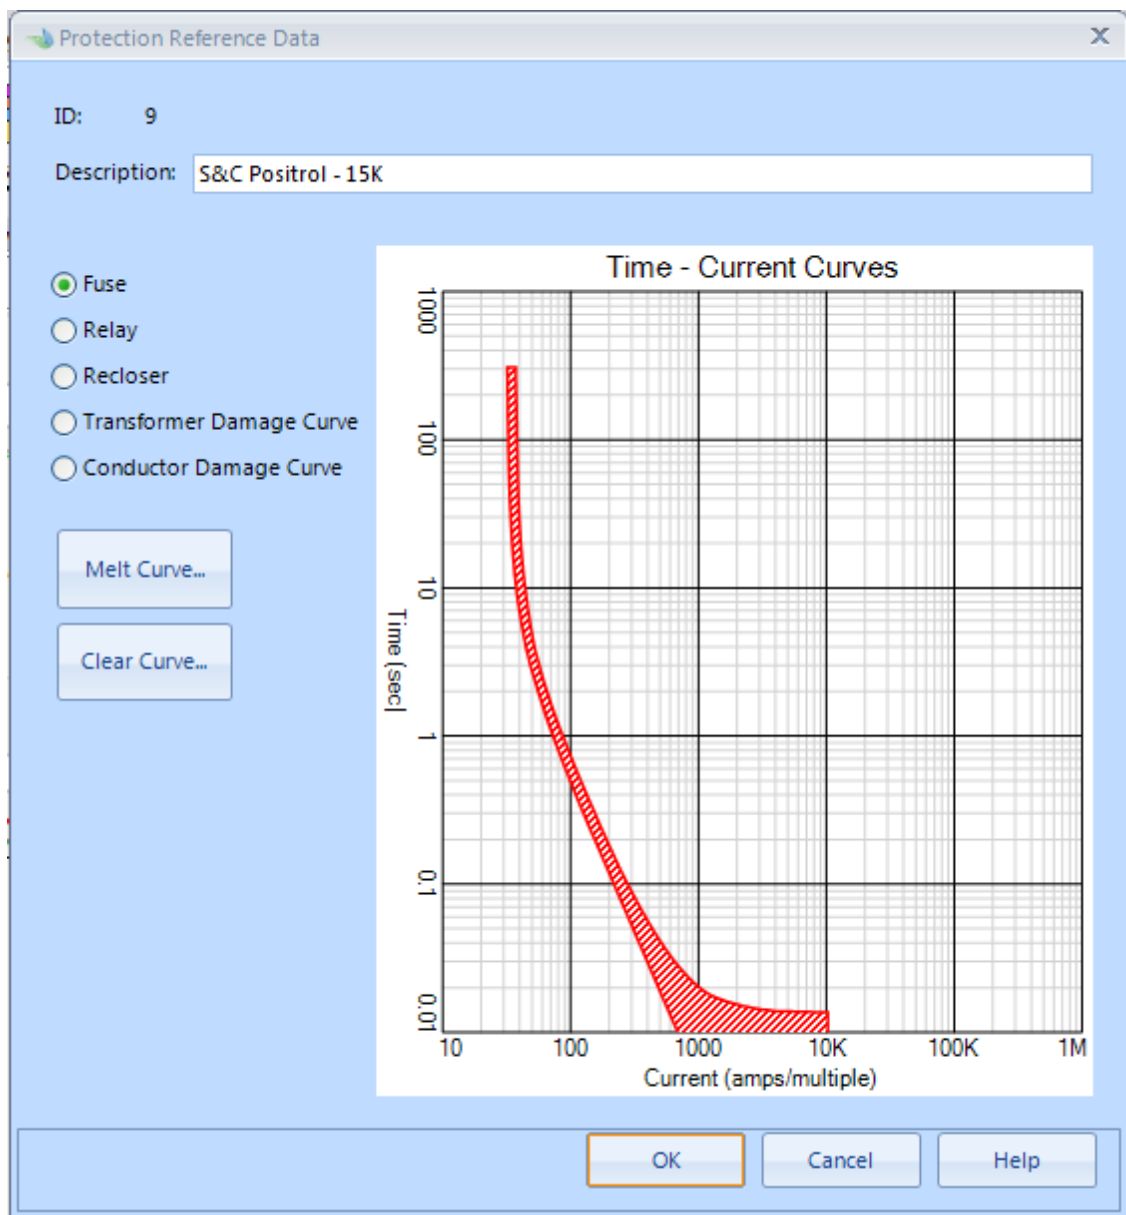

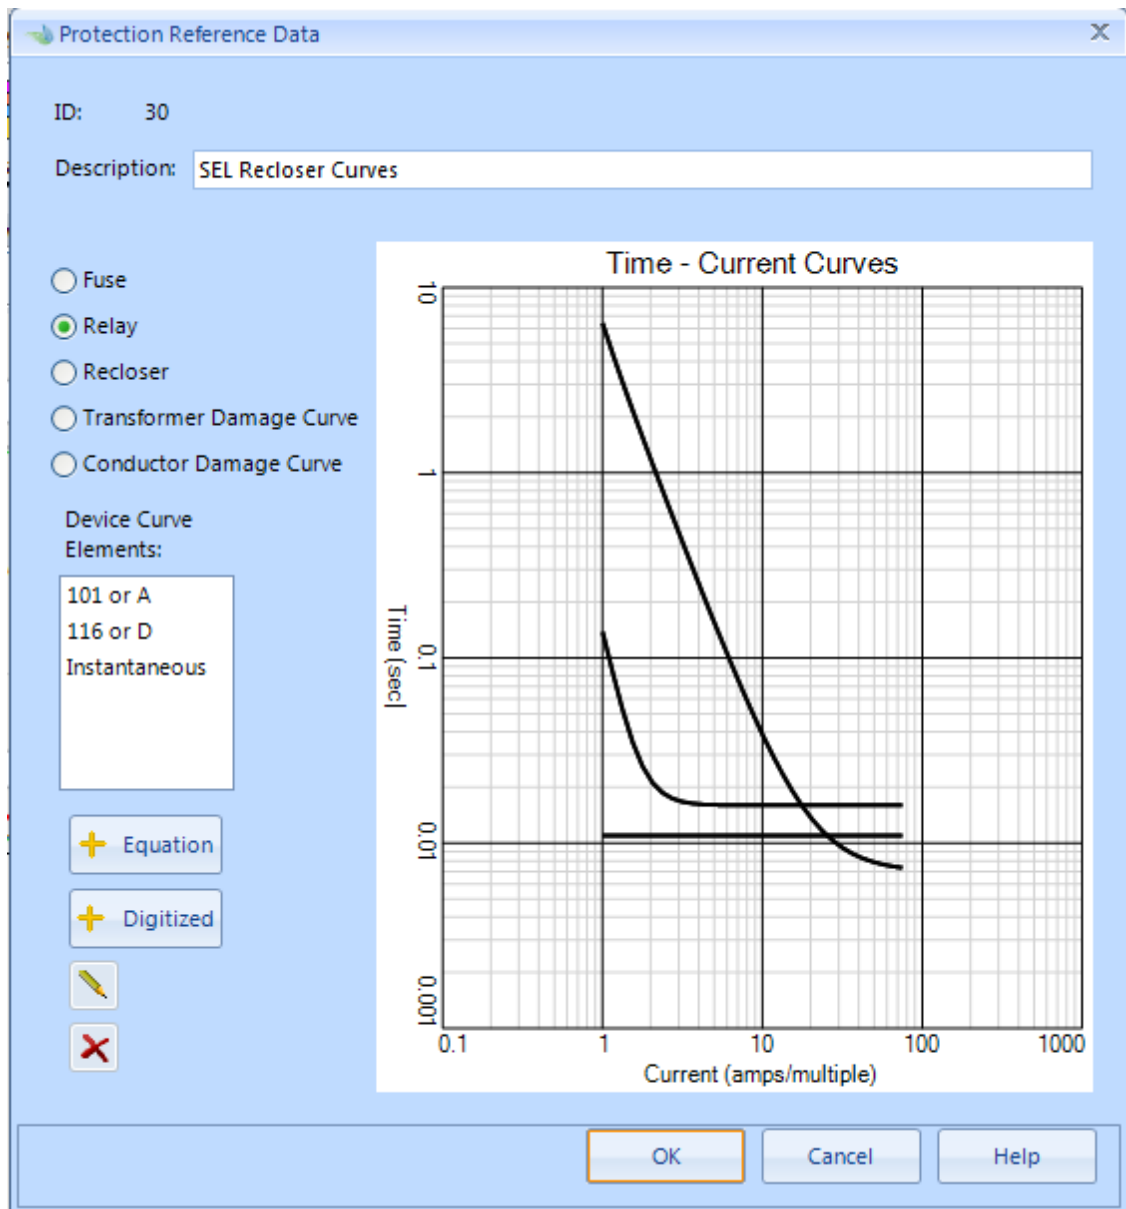

Controls

ID

Unique ID of the reference data item. Automatically assigned.

Description

User description of the type of protective device.

Fuse / Relay / Recloser / Transformer Damage Curve / Conductor Damage Curve

Choose the type of device to model.

A fuse lets you model a single curve with melt and clear curves. When you create a new fuse you only have to option to override the current scaling.

A relay, reclosure or damage curve lets you model a number of curve elements, each of which can contain a set of curves, or an equation defining a set of curves, such that the curve element response to time dial setting can be modeled. When you create a [protection element](#) defined as a relay you can pick which of the curve elements (e.g. inverse, instantaneous) to use, and can set time dial, CT ratio and tap setting.

Melt Curve

For fuses, this brings up the [Time Current Curve Points dialogue](#) so you can enter the fuse melt curve. This is the lower curve defined for fuses which represents the time-current for which the fuse will start to melt.

Clear Curve

For fuses, this brings up the [Time Current Curve Points dialogue](#) so you can enter the fuse clear curve. This is the upper curve for fuses which represents the time-current for which the fuse finishes melting and opens.

Device Curve Elements

This list shows the currently defined curve elements for a relay type of protection. Use the Equation button to define a new curve element defined by an equation (often used to model electronic relays) via the [Equation Based Relay Element dialogue](#). Use the Digitized button to define a new curve element defined by a set of digitized curves (often used to model electromechanical relays) via the [Digitized Relay Element Data dialogue](#). Use the Edit and Delete buttons to remove selected curve elements.

Graph


The time-current graph shows any curves defined for this type of protection. If there are multiple curves (for a relay), the currently selected item is shown in red and the others in black.

4.4.2.4.1 Time Current Curve Points Dialogue

Description

This dialogue is used to manually enter the points that define a time current curve. It is accessed from the [Protection Type Reference Data dialogue](#) for fuses, and from the [Digitized Relay Element Data dialogue](#) for relays.

Appearance

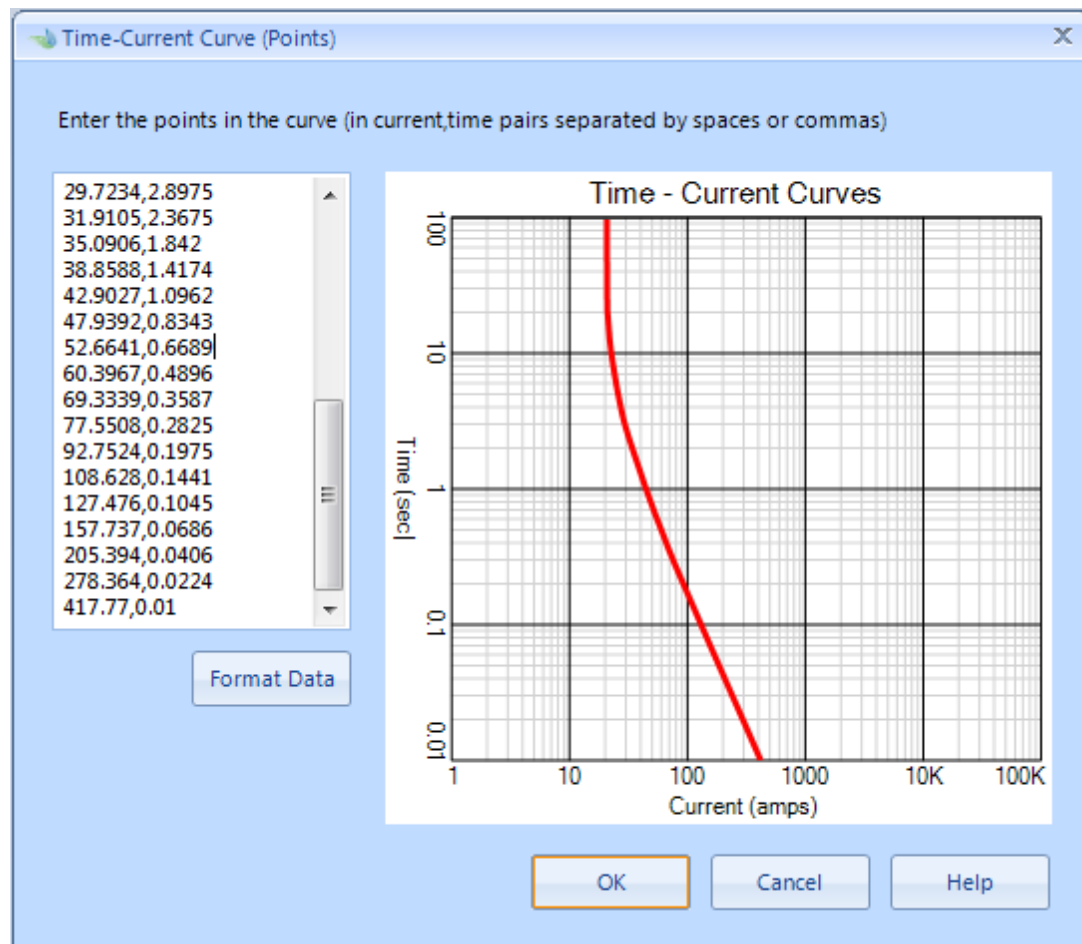

Controls

Point List

This list shows the time, current points that define the curve displayed in the graph. You can edit these points directly in the list. You can also cut and paste items directly into the list. Use the Format Data button to format data as shown above such that each point is on its own line with the current and time separated by a comma.

To cut and paste data into the list it is only necessary to have a list of points arranged in order of current1, time1, current2, time2, etc... The values can be separated by either commas or white space (space, tab, new line). You will find that you can cut and paste data directly from spreadsheets arranged with a column of current values followed by a column of time values.

For example, if you had a text file containing the following values:

```
curr1 time1 curr2 time2 curr3 time3 curr4 time4
```

if you paste it into the list and click the **Format Data** button, it would appear as:

```
curr1,time1
```

```
curr2,time2
```

```
curr3,time3
```

curr4,time4

Graph


Shows the graph defined by the points in the list. As the data changes the curve will automatically be updated.

4.4.2.4.2 Digitized Relay Element Data Dialogue

Description

This dialogue lets you edit a relay curve element defined by a set of individual digitized time-current curves. It is called from the [Protection Type Reference Data dialogue](#) for relays and calls the [Time Current Curve Points dialogue](#).

Appearance

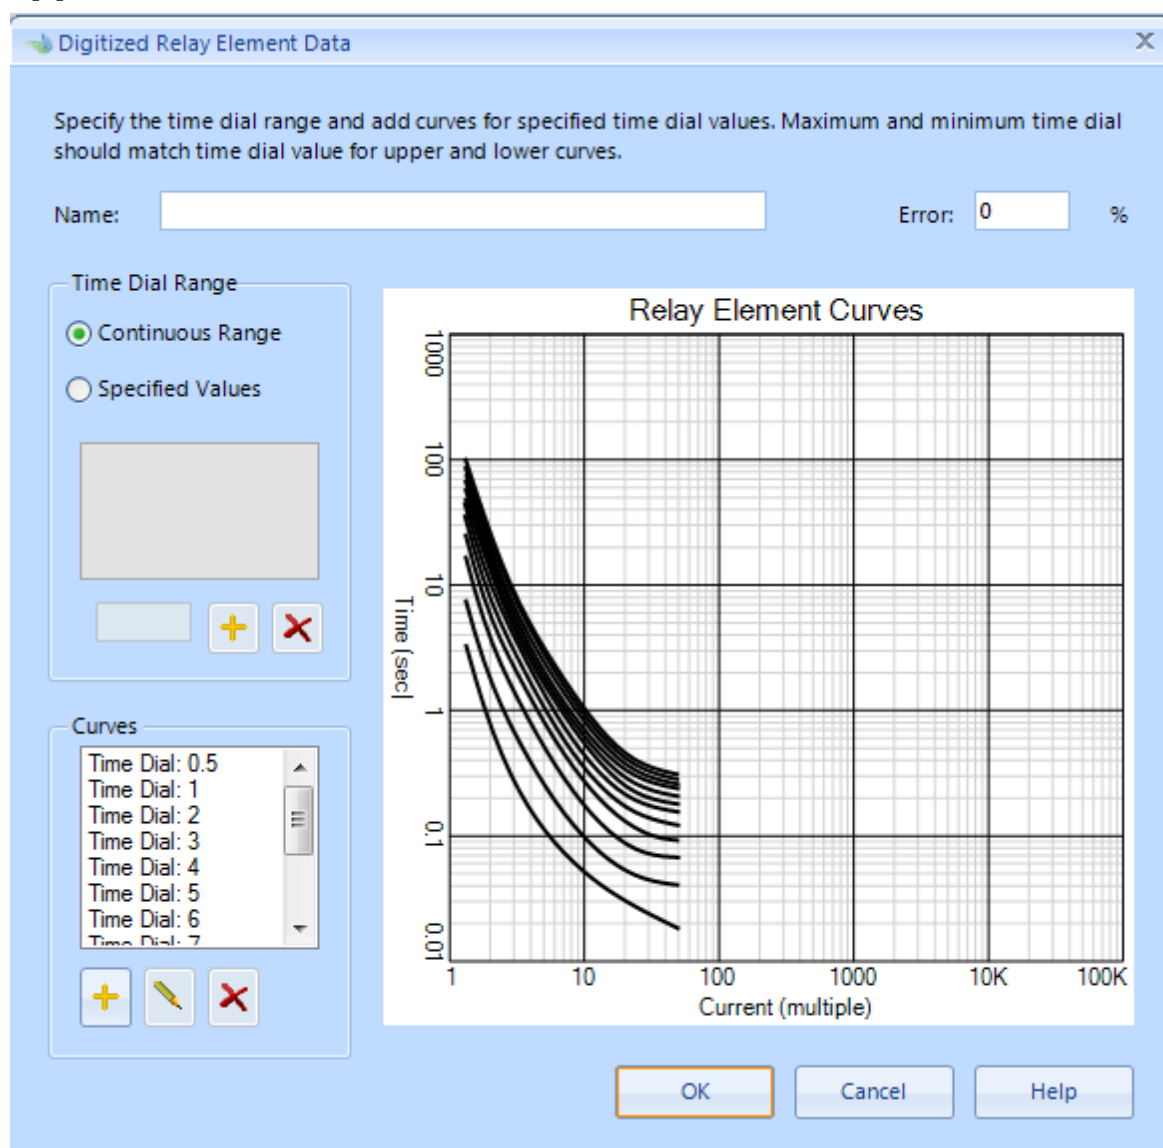

Controls

Name

The name of this curve element within a relay or recloser.

Error

The percent error band around an input value. For example, if you specify 10%, the time values shown on the graph will be +/- 10% of the nominal input value. If the value is 0%, the curves shown on the graph will be a simple line with no area.

Time Dial Range

You can specify whether the time dial values are continuous or limited to specific values. For example if you input two curves for Time Dial = 1 and Time dialogue = 5 and specified a continuous range, the [protection element](#) settings would allow you to choose a time dial such that $1 \leq \text{time dial} \leq 5$. If you choose specified values of 1,2,3,4,5 then in the protection element settings you could only choose one of these 5 time dial values.

Curves

This list shows all the curves defined in this set of curves. The currently selected curve is shown in red. Adding a new curve or editing the existing curve brings up the [Time Current Curve Points dialogue](#).

4.4.2.4.3 Equation Based Relay Element Data Dialogue

Description

This dialogue is used to enter data for a relay curve element that is defined by a mathematical equation (instead of just digitized points). It is accessed from the [Protection Type Reference Data dialogue](#).

Appearance

Equation Base Relay Element Data

Enter the equation of the time-current curve using variables 'I' for current multiple and 'td' for time dial

Name:

Equation:

Time Dial Range

☒ Continuous Range

☐ Specified Values

Error: %

Relay Element Curve

Controls

Name

The name of this curve element.

Equation

Enter the equation that defines the curve. It is of the form $\text{time} = f(\text{current}, \text{time dial})$. Use 'I' for current and 'td' for time dial as variable names.

Time Dial Range


You can specify whether the time dial values are continuous or limited to specific values. For example if you input two curves for Time Dial = 1 and Time dialogue = 5 and specified a continuous range, the [protection element](#) settings would allow you to choose a time dial such that $1 \leq \text{time dial} \leq 5$. If you choose specified values of 1,2,3,4,5 then in the protection element settings you could only choose one of these 5 time dial values.

Error

The percent error band around an input value. For example, if you specify 10%, the time values shown on the graph will be +/- 10% of the nominal input value. If the value is 0%, the curves shown on the graph will be a simple line with no area.

4.4.2.5 Week Type Reference Data Dialogue**Description**

This dialogue is used for editing [week type reference data](#) items, which form part of the data for load modeling. It is accessed from the Week Types section of the Reference docking window. This data is used in the [Load Category dialogue](#) and sub-dialogs.

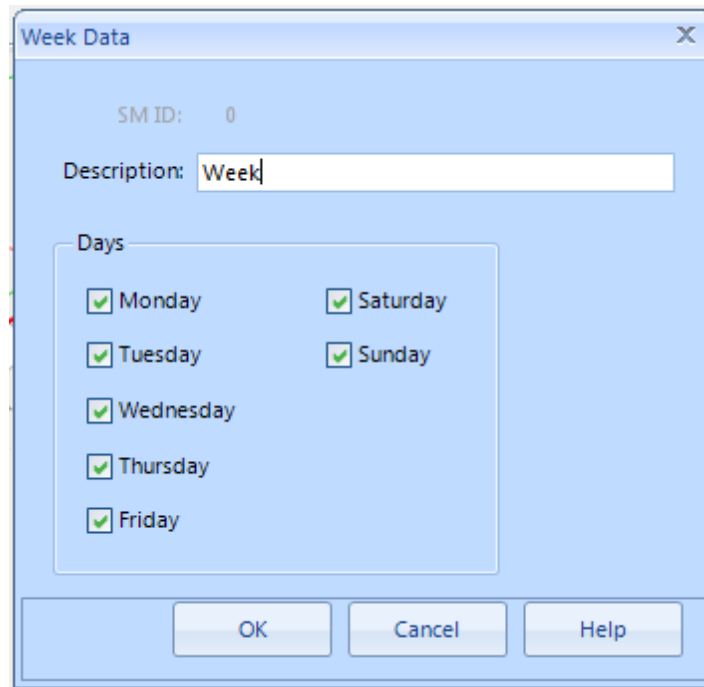Appearance**Controls****ID**

Unique ID of the reference data item. Automatically assigned.

Description

User description of the portion of a week.

Days


Select which days are associated with this part of a week.

4.4.2.6 Season Type Reference Data Dialog

Description

This dialogue is used for editing [season type reference data](#) items, which form part of the data for load modeling. It is accessed from the **Season Types** section of the [Reference Docking Window](#). This data is used in the [Load Element dialogue](#) and the [Load Category dialogue](#) and sub-dialogues.

Appearance

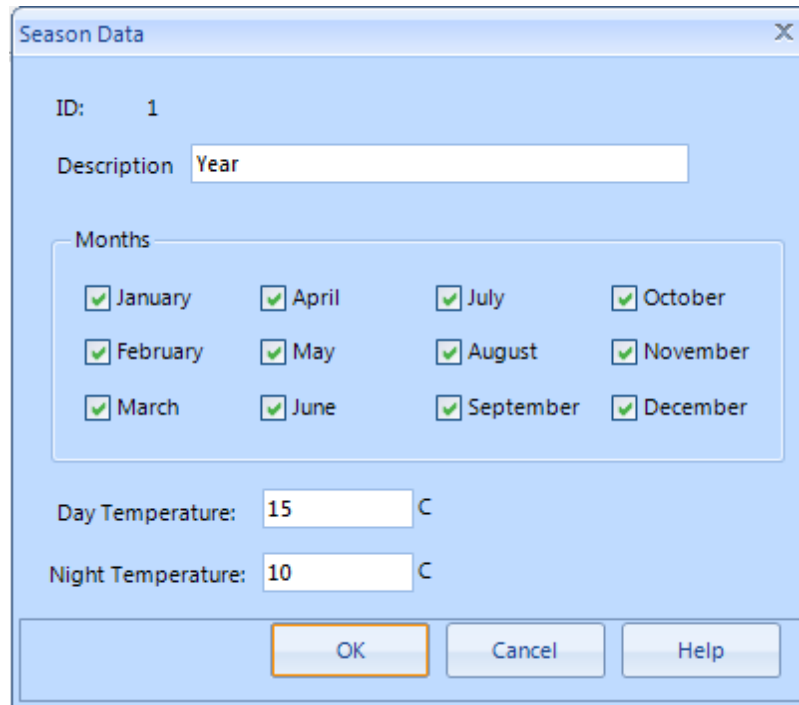

Season Data

ID: 1

Description: Year

Months

<input checked="" type="checkbox"/> January	<input checked="" type="checkbox"/> April	<input checked="" type="checkbox"/> July	<input checked="" type="checkbox"/> October
<input checked="" type="checkbox"/> February	<input checked="" type="checkbox"/> May	<input checked="" type="checkbox"/> August	<input checked="" type="checkbox"/> November
<input checked="" type="checkbox"/> March	<input checked="" type="checkbox"/> June	<input checked="" type="checkbox"/> September	<input checked="" type="checkbox"/> December

Day Temperature: 15 C

Night Temperature: 10 C

OK Cancel Help

Controls

ID

Unique ID of the reference data item. Automatically assigned.

Description

User description of the portion of a year.

Months

Select which months are associated with this part of a week.

Night Temperature

The average night temperature during this time of year. When load categories are set to be scaled according to temperature, the scaling factor is computed based on the difference between the ambient temperature and this temperature. Night temperatures are in effect from 9PM to 10AM.

Day Temperature

The average day temperature during this time of year. When load categories are set to be scaled according to temperature, the scaling factor is computed based on the difference between the ambient

temperature and this temperature. Day temperatures are in effect from 10AM to 9PM.

4.4.2.7 Load Component Reference Data Dialogue

Description

This dialogue is used for editing [load component reference data](#) items, which form part of the data for load modeling. It is accessed from the **Load Components** section of the Reference docking window. Load components are used in the [Load Component Data dialogue](#), which is part of the [Load Category dialogue](#).

Appearance

Component Data

ID: 35

Description: Air Conditioning

PV Factor: 0.08 Motor Factor: 1

QV Factor: 1.6 Reenergization Factor: 3

Power Factor: 0.8

Load Curve (Drag bar tops to edit curve data)

Hour	Value
0	0.3
1	0.3
2	0.3
3	0.3
4	0.3
5	0.3
6	0.3
7	0.4
8	0.4
9	0.4
10	0.5
11	0.6
12	0.8
13	1.0
14	1.0
15	1.0
16	1.0
17	0.9
18	0.7
19	0.7
20	0.6
21	0.5
22	0.4
23	0.3

Hour: 0 Value: 0.3

OK Cancel Help

Controls

ID

Unique ID of the reference data item. Automatically assigned.

Description

User description of the load component.

PV Factor

The relationship between voltage and real power for this type of load. The actual power produced is the nominal power times the p.u. voltage raised to this factor:

$$P = P_0 V^{PV}$$

A value of 0 means that the power is independent of voltage (constant power). A value of 1 means power is proportional to voltage (constant current), and a value of 2 means power varies with the square of the voltage (constant impedance).

QV Factor

The relationship between voltage and reactive power for this type of load. The actual power produced is the nominal power times the p.u. voltage raised to this factor:

$$Q = Q_0 V^{QV}$$

A value of 0 means that the power is independent of voltage (constant power). A value of 1 means power is proportional to voltage (constant current), and a value of 2 means power varies with the square of the voltage (constant impedance).

Power Factor

The power factor of the load (lagging). There is no way to specify a component with a leading power factor.

Motor Factor

The proportion of the load composed of motors. This affects re-energization after an outage (cold load pickup) because motors draw an especially large load during the first few seconds of start up.

Reenergization Factor

The proportion of the load energized during re-energization. For some loads such as heating and air conditioning this value will be greater than 1.0 due to a loss of load diversity during an outage. For other loads, such as certain industrial load, the value will be less than 1.0 as loads will not be automatically applied during re-energization but will be manually started later.

Graph

The graph shows the load variation over a 24-hour period. Note that the graph should be normalized so that the peak is always 1.0 (top of the graph). You can edit the graph values by using the **Hour** and **Value** controls or you can use the mouse to drag the top of each bar.

Hour

The hour of the day, ranging from 0 (12 AM midnight) to 23 (11 PM).

Value

The value of the current bar (shown in graph and listed in **Hour**) as a value between 0 (no load) and 1 (peak).

4.4.2.8 Load Category Reference Data Dialogue

Description

This dialogue is used for editing [load category reference data](#) items, which form part of the data for load modeling. It is accessed from the **Load Categories** section of the [Reference Docking Window](#). The [load element dialogue](#) allows you to select the load category for a specific load.

Appearance

Load Category Data

ID: 14

Description: Commercial

Load Curves



Year, Weekday

Year, Weekend

Load Components (Optional)



Year, Week

Load Characteristics

Period	PV	QV	PF	Motor	Re-en...
Year, Week	1.35	2.48	0.87	0.5	1.27

Year, Week

OK Cancel Help

Controls

ID

Unique ID of the reference data item. Automatically assigned.

Description

User description of the load category.

Load Curves

Edit the set of curves which define how the load varies over a given 24 hour period. You can enter a separate curve for any combination of season type and week type defined. You must enter data that exactly covers an entire year.

Use the add button to add data for a new period and use the delete button to delete the currently selected data. You can edit a set of data by clicking on the period of the year containing the data to modify or selecting the period from the list and clicking the edit button.

Curve data and the period for each curve is edited using the [Load Curve Data dialogue](#).

Load Components (Optional)

Use this control to edit sets of components that define subcomponents of the load which are applicable to different periods of the year. You do not need to enter load components, they can be left empty if you don't have any information for subcomponents of the load category.

Use the add button to add data for a new period and use the delete button to delete the currently selected data. You can edit a set of data by clicking on the period of the year containing the data to modify or selecting the period from the list and clicking the edit button.

Load components and the period they apply for is edited using the [Load Component Data dialogue](#).

Load Characteristics

This control lets you define load characteristics for a given period. Load characteristics include parameters like power factor, load response to voltage and re-energization details. You must enter data that covers the entire year. This can be a single item which applies for the whole year or multiple items so that different data (such as power factor) applies for different periods of the year.

Use the add button to add data for a new period and use the delete button to delete the currently selected data. You can edit a set of data by clicking on the period of the year containing the data to modify or selecting the period from the list and clicking the edit button.


Load characteristic data and the period it applies to is edited using the [Load Characteristic Info dialogue](#).

4.4.2.8.1 Load Curve Data Dialogue

Description

This dialogue is used to edit 24-hour load curves. It is accessed from the [Load Category dialogue](#) and help define [load category reference data](#) items.

Appearance

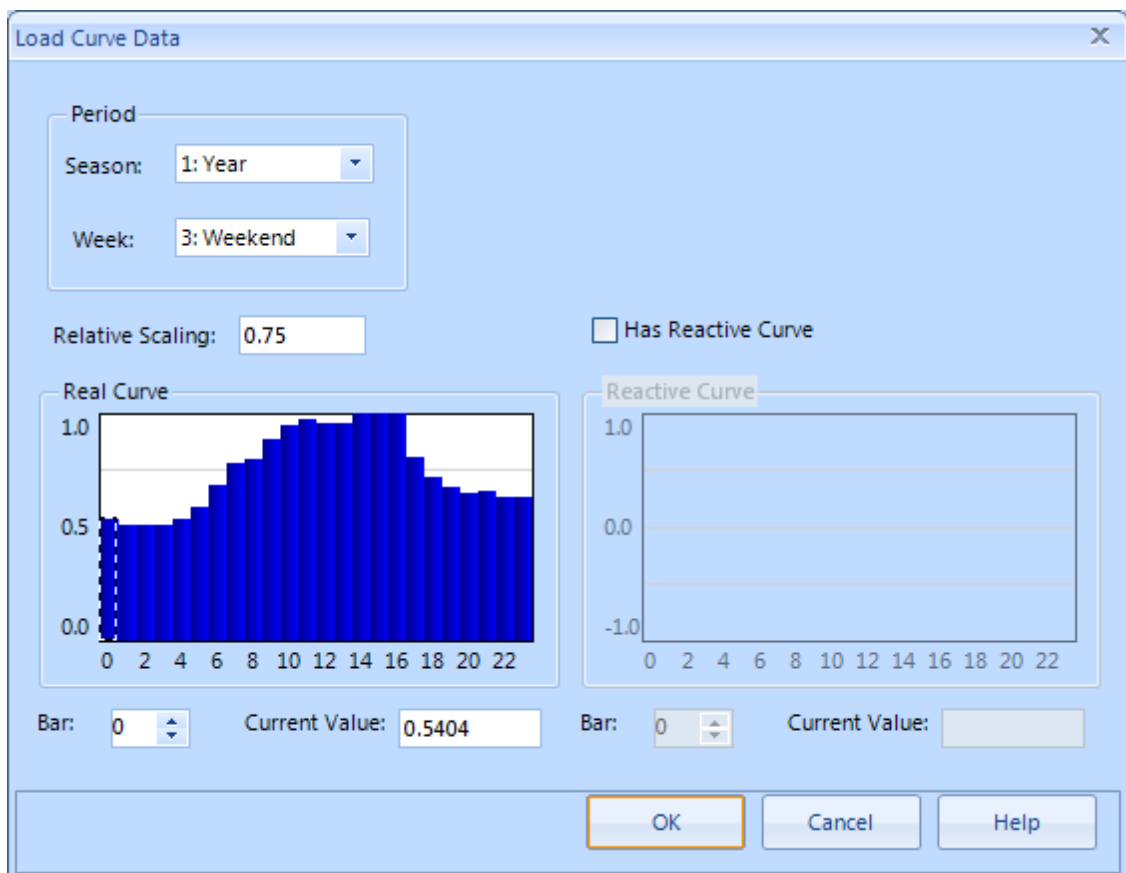

Controls

Season

The part of the year that this curve applies to.

Week

The part of the week that this curve applies to.

Relative Scaling

The size of the peak for this curve relative to the size of the peak for other curves. For example, if weekend loads are substantially smaller than weekday loads, then you might have a weekday curve with a scaling factor of 1 and a weekend curve with a scaling factor of 0.75.

Has Reactive Curves

Check this box if you want to define both real and reactive curves for the load. If you do define both real and reactive curves, the relationship between the two curves will override any settings for power factor elsewhere in the load category data.

Real Curve

The 24 hour curve for real power. The curve is normalized so it should have a peak value of 1.0

Reactive Curve

This graph represents the 24 hour curve for reactive power. You can use this definition to model

changing power factor over a 24-hour period. Positive values represent lagging or inductive reactive load (normally the case), and negative values represent leading or capacitive reactive power. The combination of the real and reactive curves define the power factor during the specified period.

Bar

The hour currently selected in the appropriate graph.

Current Value


The value of the currently selected bar.

4.4.2.8.2 Load Component Data Dialogue

Description

This dialogue is used to edit load components sets. It is accessed from the [Load Category dialogue](#) and helps to define [load category reference data](#) items.

Appearance

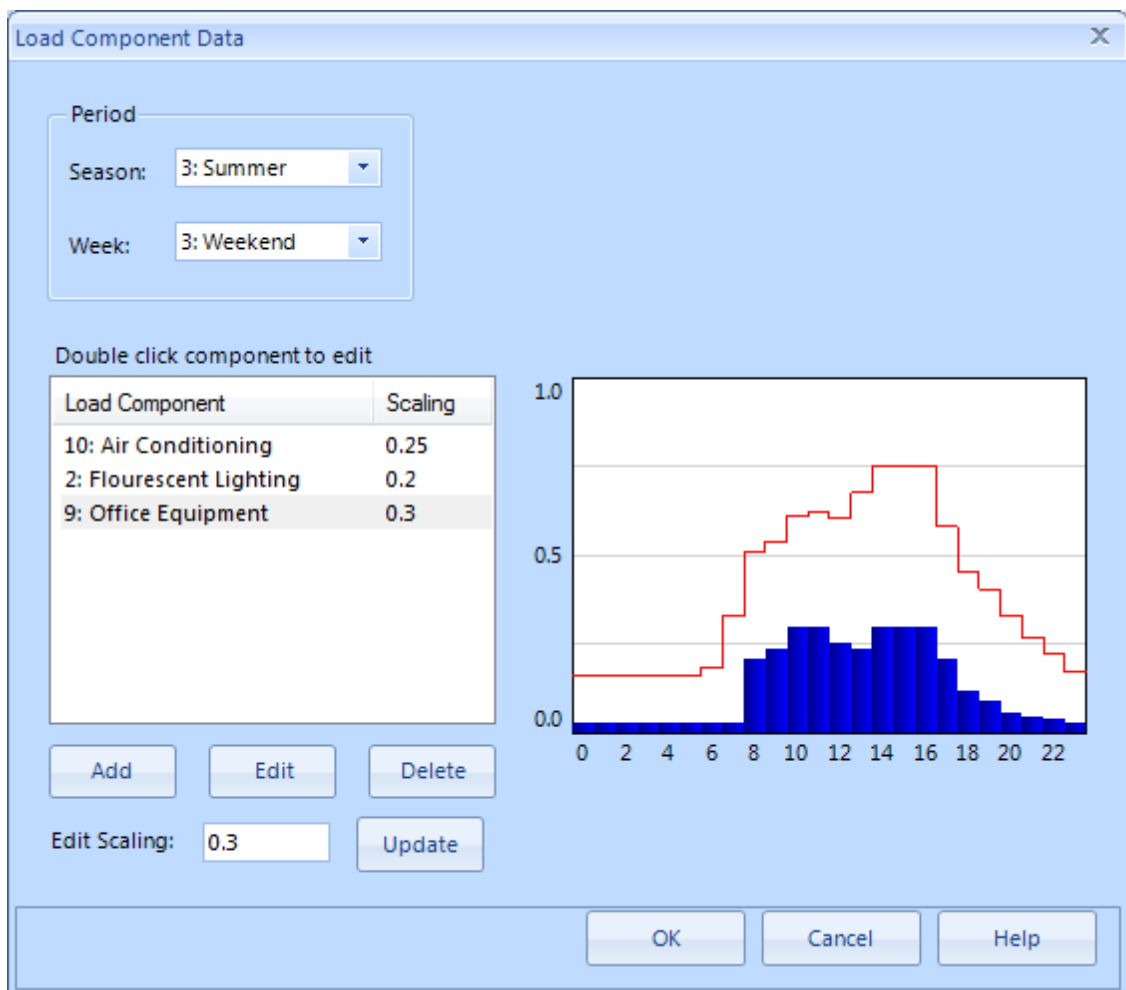

Controls

Season

The part of the year this data applies to.

Week

The part of the week that this data applies to.

Scaled Components

A list of [load components](#) currently part of this set of data along with the scaling factor. The resultant curve shown on the graph is the load component graph multiplied by the scaling factor.

Add

Add a new type of component to this set.

Edit

Bring up the [Load Component dialogue](#) for editing the data for the currently selected item. You can also double-click on a row of the list bring up the dialogue.

Delete

Delete the currently selected component from this set.

Edit Scaling

Edit the scaling factor for the currently selected component. Push the **Update** button to set the value.

Graph

The graph shows each individual scaled load component in blue, and the total of all the scaled load components is shown as a red line. To be valid, the total of the load components should be less than any of [load curves](#) that exist for the same period.

4.4.2.8.3 Characteristic Info Dialogue

Description

This dialogue is used to edit load characteristics. It is accessed from the [Load Category dialogue](#) and help define [load category reference data](#) items.

Appearance

Characteristic Info

Period

Season: 1: Year

Week: 1: Week

Power Factor: 0.87

Voltage Response

PV Factor: 1.35

QV Factor: 2.48

Re-energization

Reenergization Factor: 1.27

Motor Factor: 0.5

Temperature Scaling

Day Factor: 0.005

Night Factor: 0.005

OK Cancel Help

Controls

Season

The part of the year this data applies to.

Week

The part of the week that this data applies to.

Power Factor

The default power factor (lagging) for the load category.

If load components have been defined for this category, they will have their own power factor information and this value will only apply to that portion of the load not covered by components.

Furthermore, if load curves for this category have both [real and reactive curves](#) defined, this value is ignored completely. The ratio of real to reactive curve values will determine the power factor. Using real and reactive curves is also the only way to define a load with a leading power factor.

PV Factor

The default PV factor for this load.

If load components have been defined for this category, they will have their own PV values and this value will only apply to that portion of the load not covered by components.

The relationship between voltage and real power for this type of load. The actual power produced is the nominal power times the p.u. voltage raised to this factor:

$$P = P_0 V^{PV}$$

A value of 0 means that the power is independent of voltage (constant power). A value of 1 means power is proportional to voltage (constant current), and a value of 2 means power varies with the square of the voltage (constant impedance).

QV Factor

The default QV factor for this load.

If load components have been defined for this category, they will have their own QV values and this value will only apply to that portion of the load not covered by components.

The relationship between voltage and reactive power for this type of load. The actual power produced is the nominal power times the p.u. voltage raised to this factor:

$$Q = Q_0 V^{QV}$$

A value of 0 means that the power is independent of voltage (constant power). A value of 1 means power is proportional to voltage (constant current), and a value of 2 means power varies with the square of the voltage (constant impedance).

Reenergization Factor

The proportion of the load energized during re-energization. For some loads such as heating and air conditioning this value will be greater than 1.0 due to a loss of load diversity during an outage. For other loads, such as certain industrial load, the value will be less than 1.0 as loads will not be automatically applied during re-energization but will be manually started later.

Motor Factor


The proportion of the load composed of motors. This affects re-energization after an outage (cold load pickup) because motors draw an especially large load during the first few seconds of start up.

Day Factor

This factor determines how much the temperature affects the load. A positive factor will increase the load as the analysis temperature exceeds the season temperature. The day factor affects the period of 9AM to 10PM.

$$S = e^{c\Delta t}$$

The load scaling is equal to the exponential of the factor multiplied by the temperature difference in Celsius. The graph below shows the resultant scaling factors for four different factors for temperature differences between 0 and 30C.

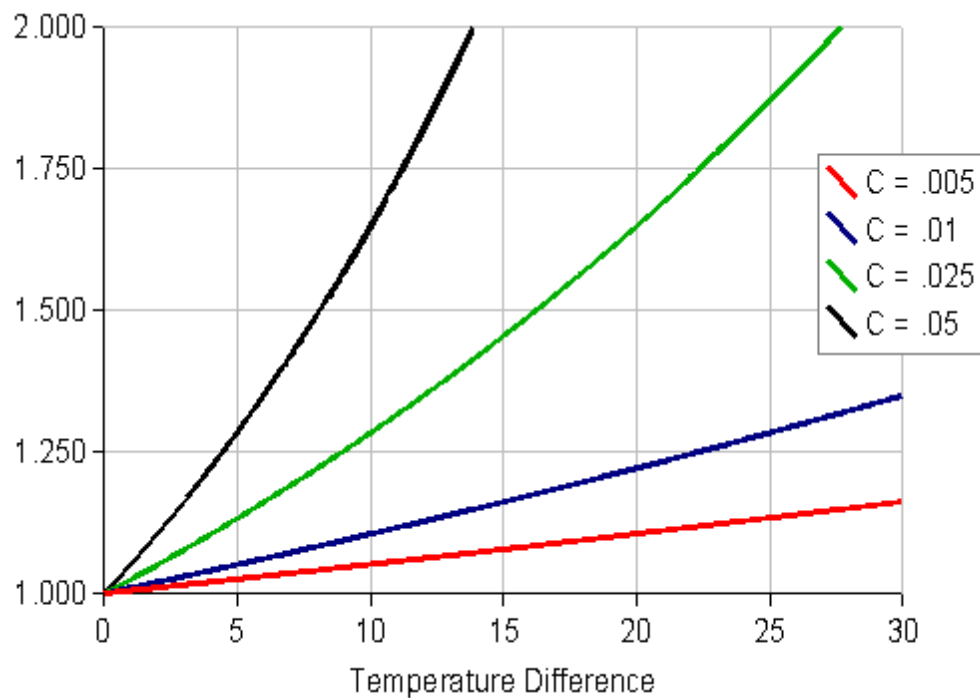

Night Factor

This factor determines how much the temperature affects the nighttime load between the hours of 10PM to 9AM. The factor calculations and scaling relationships are the same as for Day Factor.

4.4.3 Editing Dialogues

The following dialogues are associated with commands on the [Editing Tab](#) in DESS which update the state or contents of the model.

Editing Dialogues:

- [Change Phasing dialogue](#)
- [Move Between Layers dialogue](#)
- [Find Asset dialogue](#)
- [Set Feeder Names dialogue](#)
- [Affine Transform Map dialogue](#)
- [Affine Translate System dialogue](#)

Trace Options Dialogues:

- [Custom Trace dialogue](#)

Query Dialogues:

- [Show Loops dialogue](#)
- [Custom Query dialogue](#)
- [Query Property dialogue](#)

Modules Dialogues:

- [Import GIS dialogue](#)
- [Switching Order Dialogue](#)


4.4.3.1 Change Phasing Dialogue

Description

This tool lets you change the phasing on a set of [nodes](#) and [lines](#). Select the nodes and lines you want and then use this dialogue to change the phasing of the lines and any elements on the nodes. The most common use of this tool is to [select](#) a single-phase spur and change it to another phase as part of a phase balancing study. This dialogue is shown from the [Editing > Change Phasing](#) command.

Note that you cannot undo this operation so it's important to confirm your actions, and/or save your work before doing this.

Appearance

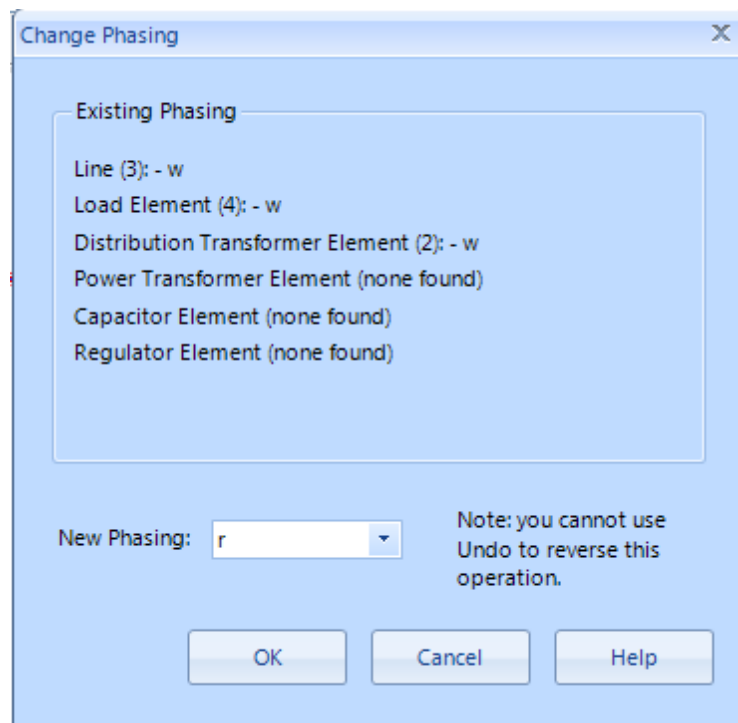

Controls

Existing Phasing

This list gives you detailed information on the existing phasing of the selected lines and elements on the selected nodes. Use this information to confirm the phasing of the items you will be changing and ensure that you have not inadvertently selected extra or wrong items.

New Phasing

Select the new phasing for lines and elements.


4.4.3.2 Move Between Layers Dialogue

Description

This tool allows you to move a group of selected nodes and lines from one [electrical layer](#) to another. You might want to do this to correct import errors or as part of a simulation for upgrading the voltage for part of a network. After moving the items you may want to change references for [conductors](#) and [transformers](#) using the [Change References](#) tool.

You can use this tool by selecting the group of connected nodes and lines you want to move and then choosing the **Move Between Layers** command from the [Editing](#) tab.

Appearance

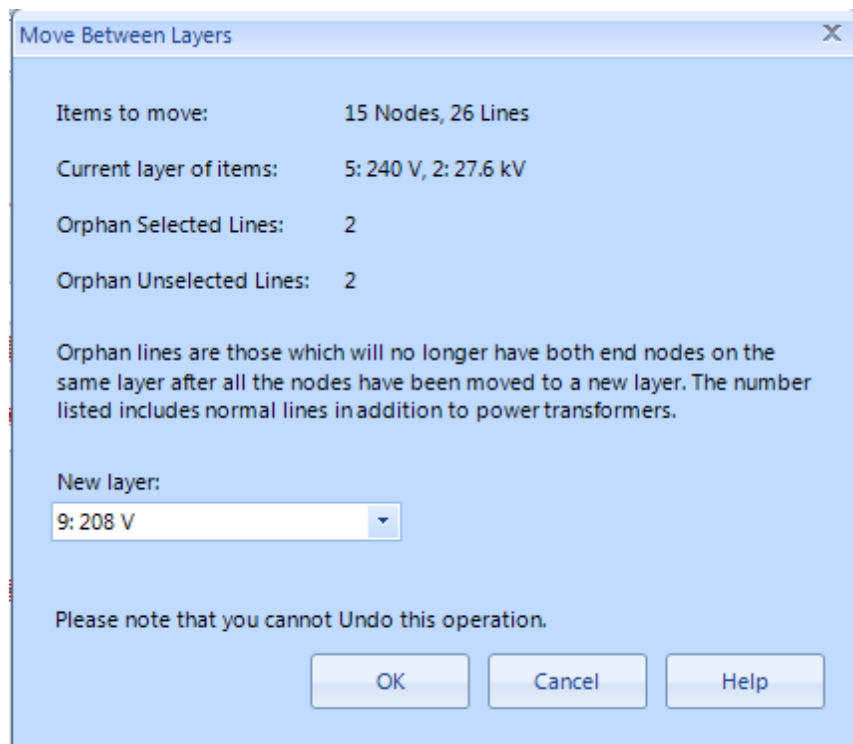

Controls

Items to move

This shows the number of currently selected nodes and lines which will be moved to a new electrical layer.

Current layer of items

This shows the current [electrical layer](#)(s) of the selected nodes and lines.

Orphan Selected Lines

This shows the number of selected lines which will be deleted by this operation. If a selected line has an end node which is not part of the selection it cannot be moved and will be deleted.

Orphan Unselected Lines

This shows the number of non-selected lines which will be deleted by this operation. If an unselected

line has an end node which is part of the selection it will be deleted in order to prevent problems with [connectivity](#).

New layer

Select the layer you want to move the group of nodes and lines to.

OK


Click OK to perform the move operation. This process cannot be reversed with the **Undo** command.

4.4.3.3 Find Asset Dialogue

Description

This dialogue help you to find a specific [node](#) (or nodes) on the distribution system. You can find a node in four different ways as described below (either by ID, by Name/Description, or from a list). You can access this dialogue from the Editing tab, or by using Ctrl+F. Other dialogues will sometimes use this dialogue to find an asset.

Appearance

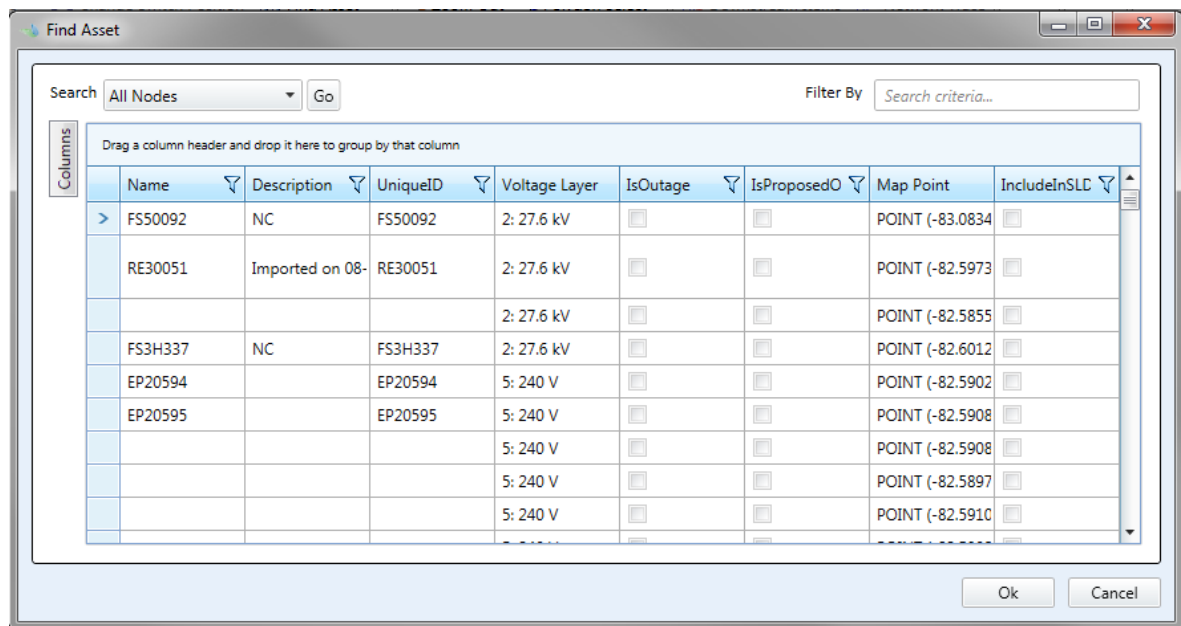

Controls

Search

This drop-down will filter the results by the type of node selected. All asset types are available, and each asset type may have different columns if a different column type is relevant. Click **GO** to apply the drop-down selection.

Filter By

This is a text box which will filter the results of all visible columns by the text entered.

Columns

This control allows you to choose which columns you can see in the view. By selecting and deselecting check-boxes you can add or remove columns.

Filter Column

The funnel icon next to the column name will open a special filter which will be applied to that column only. It can filter by almost any criteria.

OK

This will close the Find Asset window and move the model to center on the asset. You can also double-click to achieve the same result. Note that the program will not change the zoom level.


4.4.3.4 Set Feeder Names Dialogue

Description

This tool allows you to name selected [lines](#) or all lines with the name of a feeder. The tool is very useful for quickly checking what feeder a line belongs to. It can also be set to automatically update the line names automatically after a switch change. If more than one feeder is powering a line, both feeder names will be assigned to the line.

You can use this tool by selecting the group of connected nodes and lines you want to update or simply opening the **Set Feeder Names** command from Extra Tools in the [Editing](#) tab.

Appearance

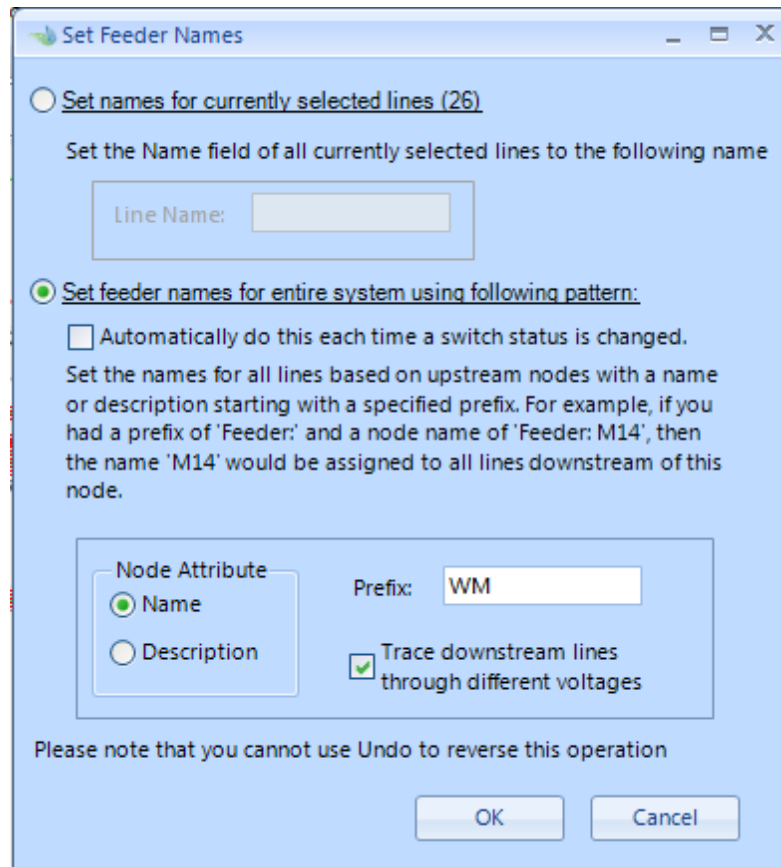

Controls

Set Names for Currently Selected Lines

This shows the number of currently selected lines which will be renamed.

Line Name

This text box allows you to enter what the set of lines will be named.

Set Feeder Names for Entire System

This allows you to re-name all of the lines in the system, whether you currently have some selected or not.

Automatically Do This

This enables the Set Feeder Names to run each time a switch is changed. Changing a switch position could potentially change which feeder a line is on, so setting this automatically would ensure that the feeder line names are always correct.

Node Attribute

This allows you to choose which field, node name or node description, will determine that a node is a feeder.

Prefix

If a node's name or description, depending on which is selected above, starts with the prefix in the text box it will be considered a feeder. Lines downstream will be named with the text which comes after the prefix. For example, with the prefix WM and a node named WM3M9, all lines would be named 3M9.

OK

Click OK to perform the move operation. If you have checked off Automatically Do This, the command will run on its own from now on.

4.4.3.5 Affine Transform Map Dialogue

Description

This tool allows you to shift and rotate the model. After a GIS import, or changing from XY to Latitude and Longitude, the model may not be positioned exactly as it should.

You can use this tool by opening the **Affine Transform Map** command from Extra Tools in the [Editing](#) tab.

Appearance

DESS System Coordinate Transformation

Define two points to scale or move points. Define at least three points to scale, translate or rotate points. If you define more than three points, subsections of the map will be transformed independently. This operation cannot be undone.

Current X	Current Y	New X	New Y

You can use the mouse on the map to indicate changes. Click on the Current location and release the mouse on the New location. This will fill in the coordinates below.

Selected Point

Current DESS Coordinate:	New Coordinate:	<input type="button" value="Add New"/> <input type="button" value="Set"/> <input type="button" value="Delete"/>
X: <input type="text"/>	X: <input type="text"/>	
Y: <input type="text"/>	Y: <input type="text"/>	

Controls

Current DESS Coordinate

Enter the current XY or latitude and longitude coordinates into these text boxes.

New Coordinate

Enter the updated coordinates which correspond to the current coordinates which were just entered into these text boxes.

Add New

This adds the current and new set of coordinates to a list which the program uses as reference points to shift the model. At least three sets of points must be entered before the command can be executed.

Automatically Do This

This enables the Set Feeder Names to run each time a switch is changed. Changing a switch position could potentially change which feeder a line is on, so setting this automatically would ensure that the feeder line names are always correct.

Set

This allows you to update the values of a previously entered point set with the current values in the text boxes.

Delete

This will delete whichever point set is currently selected.

OK


Click OK to perform the move operation. Note that depending on model size, this operation could take some time.

4.4.3.6 Affine Translate System Dialogue**Description**

This tool allows you to change a model from XY to latitude and longitude.

You can use this tool by opening the **Affine Translate System** command from Extra Tools in the [Editing](#) tab.

Appearance

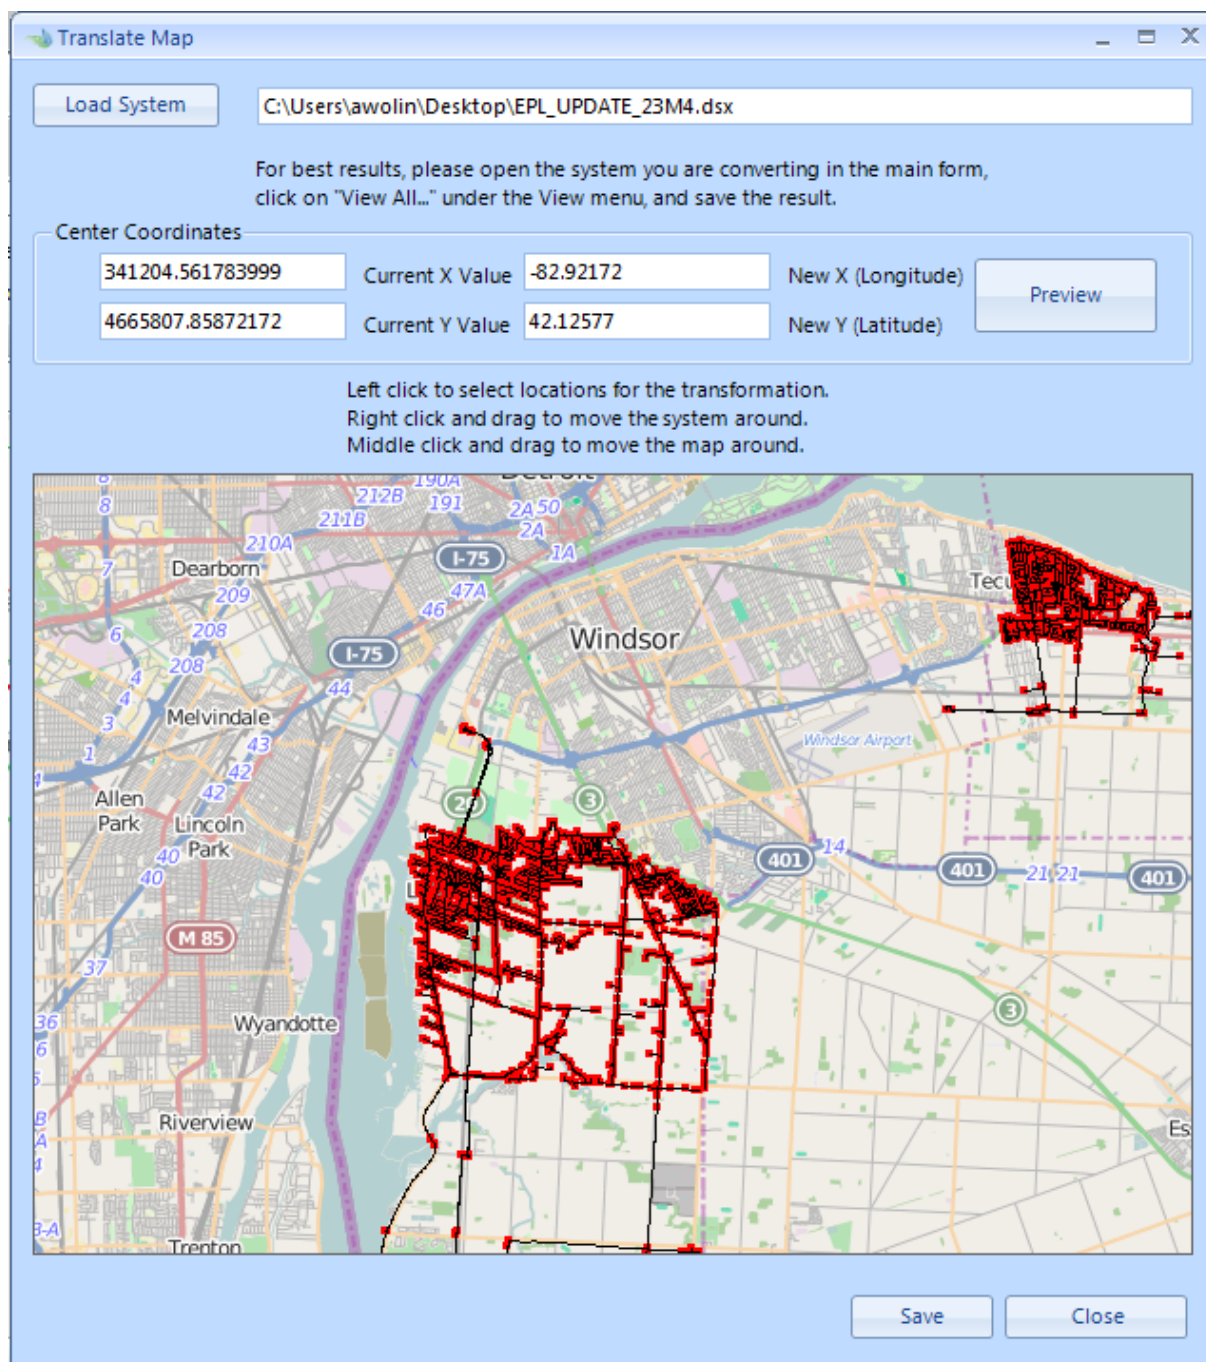

Controls

Load System

This will open a browse window which will allow you to choose a XY model to translate.

Center Coordinates

The center coordinates for the XY system will be automatically populated. Enter the corresponding center latitude and longitude coordinates.

Preview

This will do a preliminary translation. The model and a map will appear in the preview window.

Left Click on Map

Left clicking will allow you to click and drag the model layer and move it from one point to another.

Right Click on Map

Right clicking will allow you to click and drag the map layer and move it from one point to another.

Middle Click on Map

Middle clicking will allow you to click and drag the model and map layer and move it from one point to another.

Save

Click Save to perform the final translation and save it to a new file.

4.4.3.7 Custom Trace Dialogue


Description

This dialogue lets you specify options when doing a custom trace on the DESS map. It is accessed from the [Editing tab](#). You must select one or more [nodes](#) or [lines](#) before choosing a trace.

If you select more than one node they must be related so that one of the nodes is downstream of all others or upstream of all others. You will then be able to trace the nodes and lines between the selected nodes. For example you could trace downstream from one of the selected nodes until you came to the other selected nodes at which point the trace would stop.

[Connectivity](#) through closed loops can be ambiguous.

Appearance

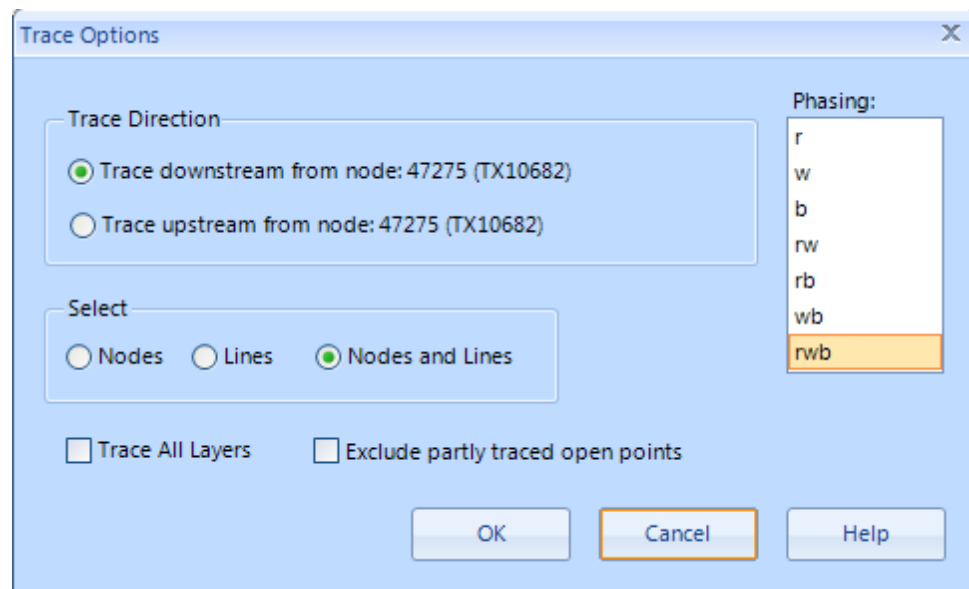

Controls

Trace Direction

Select whether to trace upstream or downstream (depends on nodes selected).

Select

Choose whether to select just nodes, just lines, or to select both [nodes](#) and [lines](#) (default).

Trace All Layers

Check to trace through different voltage layers. By default the trace stops at any [power transformers](#) and doesn't continue onto other electrical layers.

Phasing


Select which phasing to trace. For example if you chose 'a', only the first phase would be traced. Any single-phase lines with 'b' or 'c' phasing would not be selected.

4.4.3.8 Custom Query Dialogue

Description

This dialogue is used to select nodes or lines on the map according to the characteristics of the nodes, lines or [elements](#) on nodes. This is a very powerful tool for selection and lets you identify specific types of system data that you may be interested in. It is accessed from the Query menu on the [Editing tab](#).

Appearance

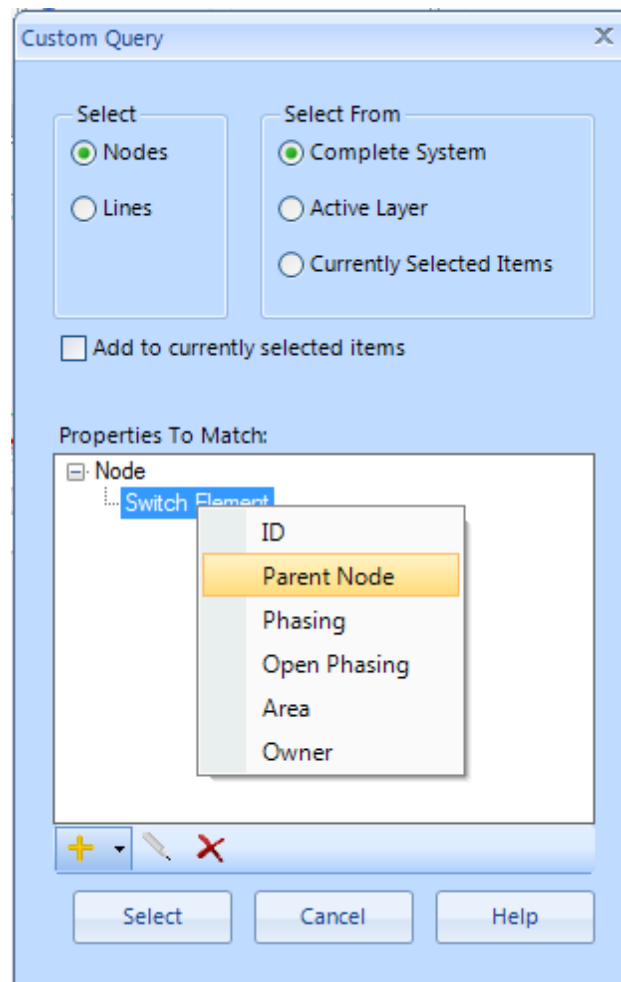

Controls

Select

Choose whether you want to select [nodes](#) or [lines](#).


Select From

You can select items from either the entire system, the currently [active layer](#) (as shown on the toolbar), or items which are already selected on the map. The last option lets you combine selections. For example, you could use a downstream trace to select a feeder and then use this tool to select all nodes containing a particular type of transformer on that feeder.


Properties To Match

This tree view is the heart of the custom selection ability. Starting with a node object (or line), you add conditions which you want to specify. You do this by right-clicking on the tree item. This will bring up a menu listing properties of the specified object, and in the case of nodes will show types of elements which you want to exist on a node. Click on a menu item to add that condition by setting the property in the [Edit Property dialogue](#). The following examples give some ideas of what you can do with this dialogue.


Select all single-phase lines longer than 100m in length:

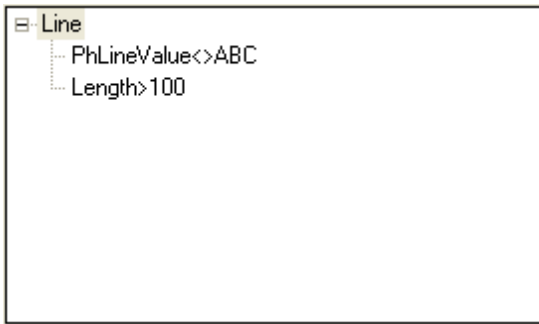

Select all 50kVA underground transformers:

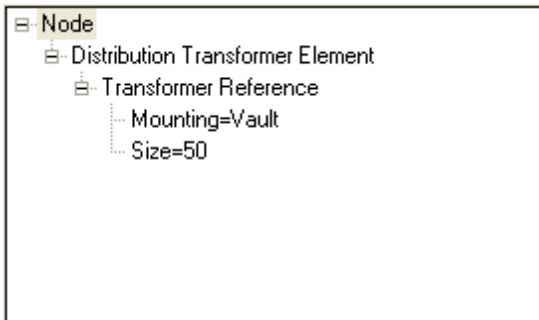

Select nodes that have a residential loads with a 3-phase transformer:

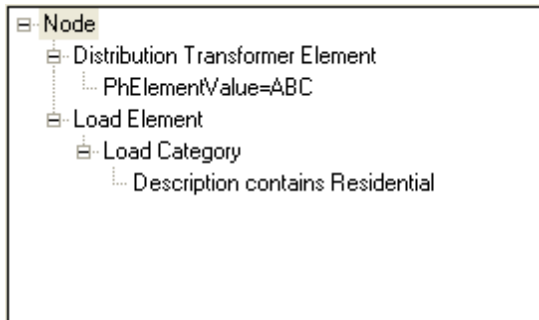

Add Delete Edit

The add button brings up the pop-up menu as shown (same as right-clicking on an item in the tree). The Edit and Delete buttons let you edit or delete an existing selected item. Properties for the item are shown in the [Edit Property dialogue](#).

Select


Close the dialogue and perform the specified selection. Once you have selected the nodes or lines you can view a list of selected items on the [Select docking](#) window.

4.4.3.8.1 Edit Property Dialogue

Description

This dialogue lets you specify a condition relating to the properties for a DESS object such as a [node](#), [line](#), [element](#) or [reference data item](#). It is accessed by adding or editing a property on the [Custom Query dialogue](#).

Appearance

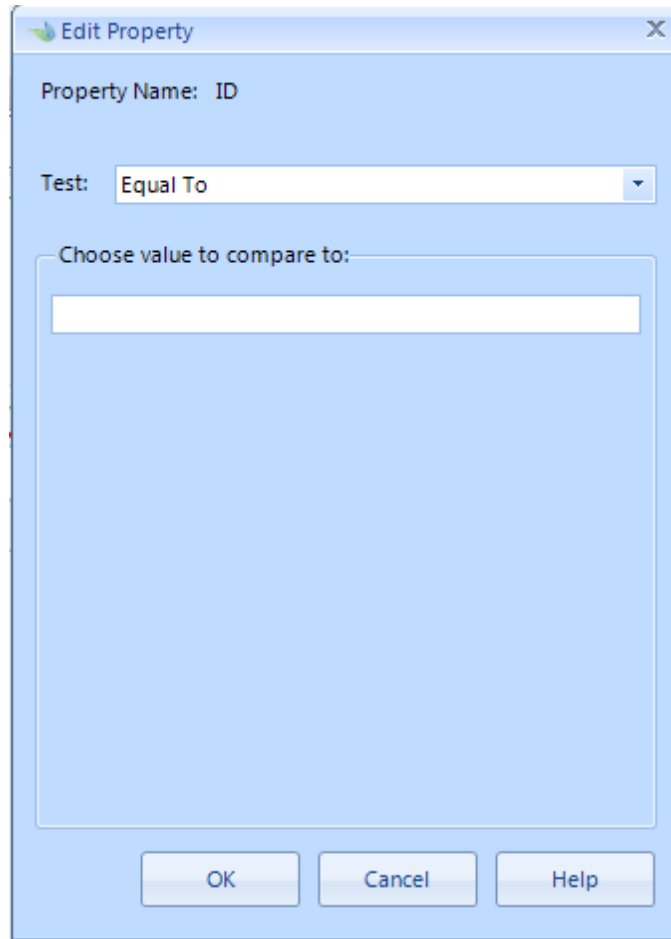

Controls

Property Name

The name of the property you are setting a condition for.

Text Property Controls

For text items the test condition can be one of:

- Contains Text (Case Sensitive) - property value must contain exact text value
- Contains Text (Case Insensitive) - property must contain value but capitalization is ignored
- Does Not Contain Text (Case Insensitive) - property must not contain specified text (capitalization ignored)

List Property Controls

Some properties have a fixed range of values (such as phasing or conductor material type). For these items the property condition can be either:

- Equal To - You can select one or more items from the list. The value must equal one of these.
- Not Equal To - You can select one or more items from the list. The value must not equal one of these.

Boolean Property Controls

For boolean type properties, you can select whether the value for the object should be True or False.

Numeric Property Controls

If the object property is numeric, you can set a condition which compares the property value to the specified value in a number of ways:

- Equal To - Object property value must exactly equal the specified value.
- Not Equal To - Property value not equal specified value.
- Greater Than - Property value must be greater than the specified value.
- Less Than - Property value must be less than the specified value.
- Greater Than or Equal To - Property value must be greater than or equal to specified value.
- Less Than or Equal To - Property value must be less than or equal to specified value.

4.4.3.9 Query Property Dialogue

Description


This dialogue lets you query or change a group of objects for a particular property. Typical uses include:

- query a group of [lines](#) to find the total conductor length
- modify the load unit for a group of [LoadSet](#) objects


**Warning:**

Be careful when using this to change values. Not only can you not undo the changes which are made, but those changes can be very bad for your system. It is suggested that you have a backup before changing a large amount of values.

This dialogue is accessed from the Query > Query Property command on the [Editing tab](#). Typical output for a query is shown below. Please note that if you are modifying a set of property values, the operation cannot be Undone.

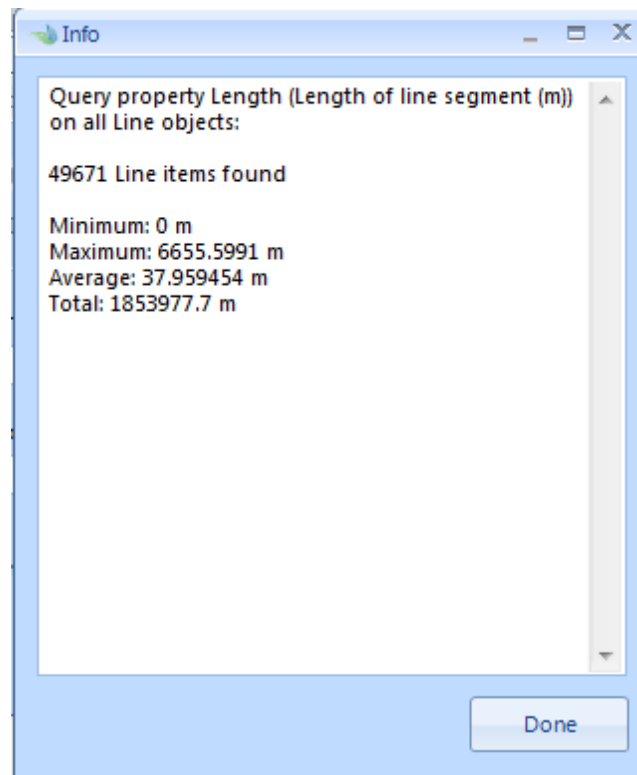

Appearance

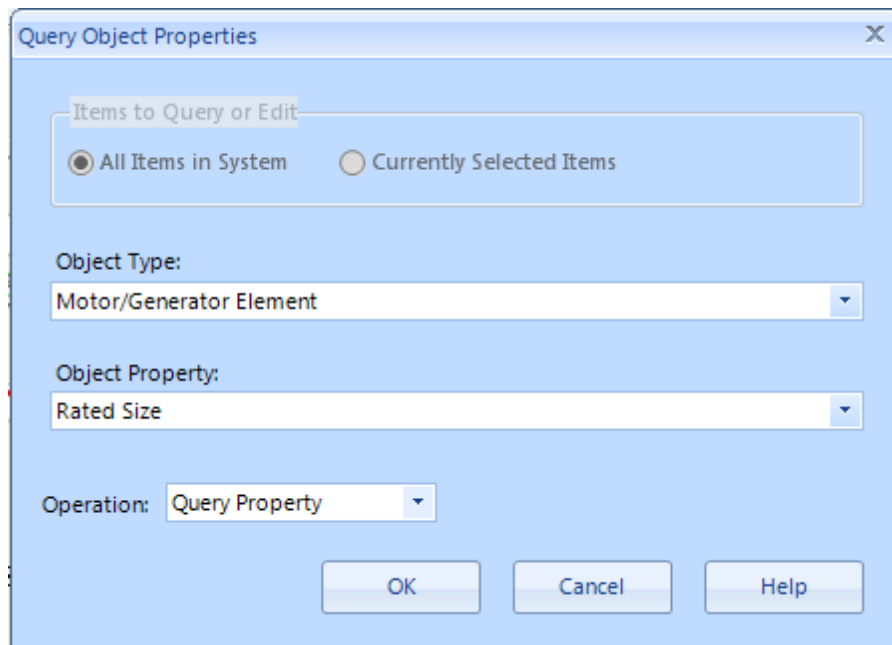

Controls

Items to Query or Edit

Select whether to query/edit all items or just items associated with currently selected nodes and/or lines.

Object Type

The type of object to query or edit. Choose the type of object you want to query a property of. If you choose a type of reference data (like ['Conductor'](#) or ['Transformer Reference'](#), the objects included in the query will be those associated with the nodes or lines selected in Items to Query.

Object Property

The property to edit or query. Only simple properties (text, numbers, lists) can be edited. You cannot edit properties which are objects.

Operation

What operation to perform. The options are as follows:

Query - query existing values. For numerical values this will provide the max, min, average and sum. For other types of property, it will give you a list of values used and the number of times each is used.

Set New Value - Edit the property value by settings a new value.

Multiply Current Value - Multiply the existing value by a specified value. E.g multiply line lengths by 1.1 to increase line lengths by 10%. This option only applies to numerical properties.

Add to Current Value - Add a fixed value to the existing property values. E.g. add .01 to all transformer impedances. This option only applies to numerical properties.

Value


Where this property is being modified, this input holds either the new value, the multiple or the addition value. This input does not appear for queries.

4.4.3.10 Show Loops Dialogue

Description

This dialogue shows you all of the loops currently in your system. Using this dialogue you can see exactly what loops exist and what nodes and lines the loops are composed of.

Appearance

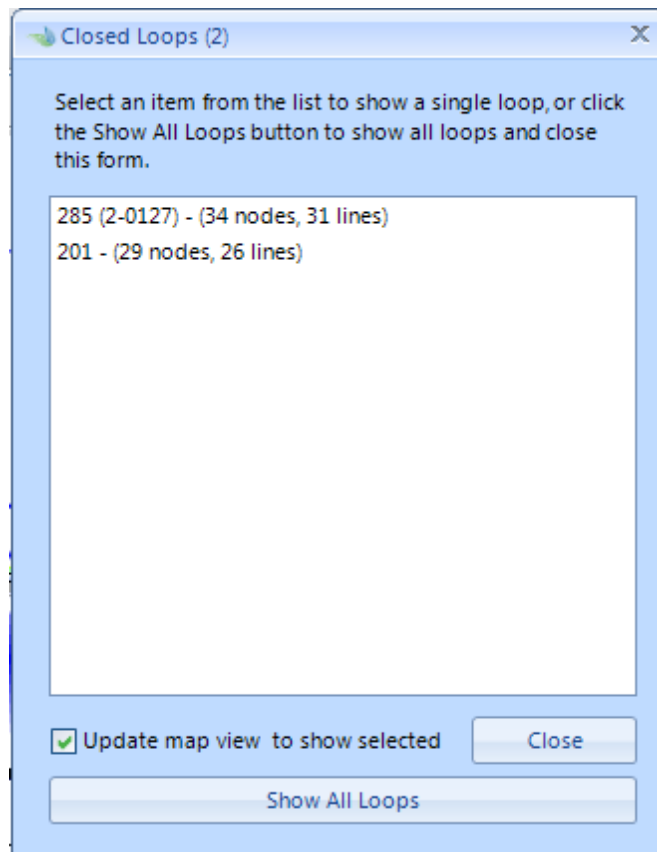

Controls

Update Map View

This command toggles whether or not the map view will change to show you the optimum view of the selected loop. If this is toggled on, when you click on any loop the map view will adjust so that the loop is centered. All the lines and nodes which comprise the loop will be selected.

Show Loops

This command closes the window and selects all of the nodes and lines of all the current loops in the system. This also resizes your map view so that you can see all of the loops in the system at once.

**Hint:**

Note that the list constantly refreshes itself, and you can change nodes and lines on the map view while this dialogue is open.


4.4.3.11 Import GIS Dialogue

Description

This tool will allow you to import data from an ESRI database into the model. This can be very useful for building new models from existing GIS connectivity.

You can use this tool by opening the **Import ESRI GIS** command from Modules in the [Editing](#) tab.

Appearance

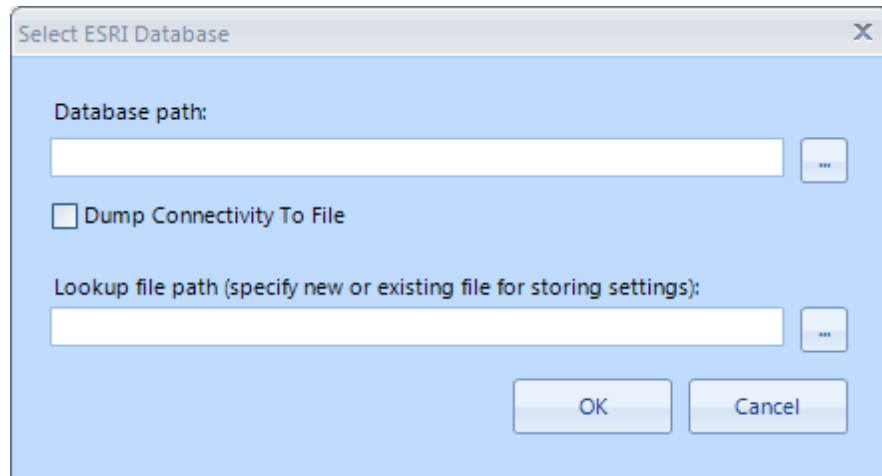

Controls

Database path

This will open a browse window which will allow you to choose a database to import.

Dump Connectivity to File

The will create an export file of the connectivity from the database.

Lookup File Path

This will open a browse window which will allow you to choose a lookup file. The lookup file will determine how data in the database is interpreted. For help, please contact [Essex Energy](#).

OK

OK will begin the import. Note that this may take some time depending on the size of the database.


4.4.3.12 Switching Order Dialogue

Description

This tool will allow you to view the impacts and changes from changing switch positions. This can be very useful for contingency planning, creating forms, and switching during an outage. The first switch can either be a currently selected switch or chosen from a list.

You can use this tool by opening the **Switching Order** command from Modules in the [Editing](#) tab.

Appearance

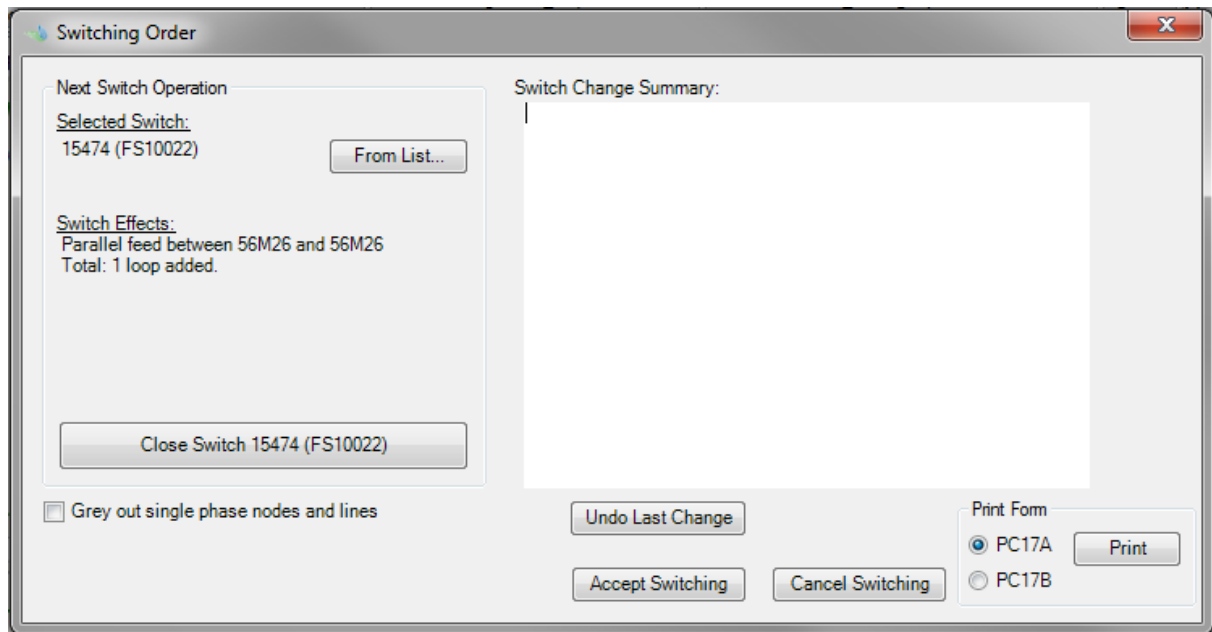

Controls

[From List](#)

This will open new dialogue which will allow you to filter and search for a switch.

Close/Open Switch

This button will close or open the currently selected switch. It will be logged in the Switch Change Summary box, with all of its impacts.

Grey Out Single Phase

This will grey out single phase impacts.

Undo Last Change

This will remove the last switching operation from the Switch Change Summary.

Accept Switching

This will implement the switching changes in the current model.

Print Form

You can choose either a PC17A or PC17B form which will be automatically filled in with all of the information from the switching changes and print it for reference.

4.4.3.12.1 Switching Order From List Dialogue

Description

This dialogue lets you filter and select a specific switch for operation. It is accessed by clicking **From List** on the [Switching Order Dialogue](#).

Appearance

Choose Switch From List

☒ Show switches related to last operation

☒ Closed Switches ☐ Open Switches

Voltage: All Voltages

Feeder: All Feeders

Switch Type: All Types

☐ Only show 3-phase switches

Filter:

Choose Switch

Name	Description	ID
CAL-1	NC	15303
CALM5-M3	NO	15505
DET-1	NC	15285
FS50120	NC	50214
ILS-1	NC	15874
MOR-2	NC	15690
OJ-2	NC	15515
REN-M3	NC	15286
SW50335	NC	15389
SW50345	NC	16149

Done

Controls

Show Switches Related to Last Operation

The switches in the list will be filtered to ones which are upstream or downstream from the last operated switch which can either restore disconnected nodes or break a created loop.

Closed or Open Switches

Dictates whether switches in the list should be normally open or normally closed.

Voltage

Allows you to select the voltage layer a switch must be on to be filtered in the list.

Feeder

Selects switches only on the specified feeder. Note that the [Set Feeder Names](#) command must be run before this filter will work.

Switch Type

Allows you to filter by type of switch, if set up in the model.

Only Show 3-Phase Switches

Clicking this check-box will eliminate all single phase switches from the list.

Filter

Allows you to enter part or all of a switch name to shrink the returned list of switches.

Switch Selection

After finding a switch to operate, click on its name and then click **Done**. The switch will be opened in the [Switching Order Dialogue](#) as the next switch to operate.

4.4.4 Analysis Dialogs

The following dialogs are associated with various [analysis](#), loads and references in DESS which are on the [Analysis Tab](#):

Analysis Dialogues

- [Arc Flash dialogue](#)
- [Capacitor Optimization dialogue](#)
- [Load Flow dialogue](#)
- [Load Loss dialogue](#)
- [General Short Circuit dialogue](#)
- [Motor Starting dialogue](#)
- [Open Point Optimization dialogue](#)
- [Phase Balancing dialogue](#)
- [Protection Coordination dialogue](#)
- [SCADA Load Flow dialogue](#)
-
- [Specific Short Circuit dialogue](#)

Reports Dialogues

- [Meter Data dialogue](#)

Views Dialogues

- [Node Style dialogue](#)
- [Line Style dialogue](#)
- [Label Style dialogue](#)

Loads Dialogues:

- [Import Loads dialogue](#)
-
- [Create Loads dialogue](#)
- [Load Scaling dialogue](#)
- [SCADA Measurement Data dialogue](#)
-

Data Dialogues:

- [Simplify Data dialogue](#)
- [Reset Line Properties dialogue](#)
- [Copy Substation Info dialogue](#)
- [Copy Conductor Info dialogue](#)
- [Create Node Data dialogue](#)

Reference Dialogues:

- [Change References dialogue](#)
- [Create References dialogue](#)
- [Import References dialogue](#)
- [Organize References dialogue](#)

Results

- [Save Result dialogue](#)

4.4.4.1 Arc Flash Dialogue**Description**

This tool calculates the arc flash hazard for a specific node or nodes in the system.

You can use this tool by selecting the group of connected nodes and lines you want to update or simply opening the [Arc Flash](#) command from More in the [Analysis](#) tab.

Appearance

Calculate Arc Flash Energy - IEEE 1584

Basic Fault Information

Enter basic data for voltage, fault levels and clearing times below or click the button to retrieve this information for nodes in the current system.

Get Data From Current System...

Location Description:

Voltage (phase-phase): V

☒ Fault Location is Grounded

	3 Phase Fault Current (A)	Protection Clearing Time (s)
Maximum Fault Conditions:	<input type="text"/>	<input type="text"/>
Minimum Fault Conditions:	<input type="text"/>	<input type="text"/>

Minimum fault should be 15% less than calculated value

Working Distance: mm ☒ Ignore Node Data Warnings

Calculation Method

☒ Empirical (More Accurate - Valid for 208V to 15kV)

☐ Theoretical (More Conservative - Use for above 15kV)

Empirical Arc Flash Parameters

Equipment Type:

Conductor Gap: mm (IEEE 1584 range: 10 to 40mm)

Arc Location: ☒ Open Air Arc ☐ Arc in a Box

Calculate **Cancel**

Controls

Get Data from Current System

This allows you to choose which node(s) you would like to perform analysis on. It launches the Get Protection Data dialogue.

All text boxes and information will be automatically entered from the system if a node is chosen through the Get Protection Data dialogue. You may change any values, or enter everything manually if you choose.

Empirical/Theoretical

Choosing either empirical or theoretical will decide which equations and parameters are used. For more information see IEEE 1584.

Calculate

Click calculate to perform the analysis.


4.4.4.1.1 Get Protection Data Dialogue

Description

This tool calculates the data for an arc flash hazard calculation for a specific node or nodes in the system.

You can use this tool by selecting Get Data in the [Arc Flash Dialogue](#).

Appearance

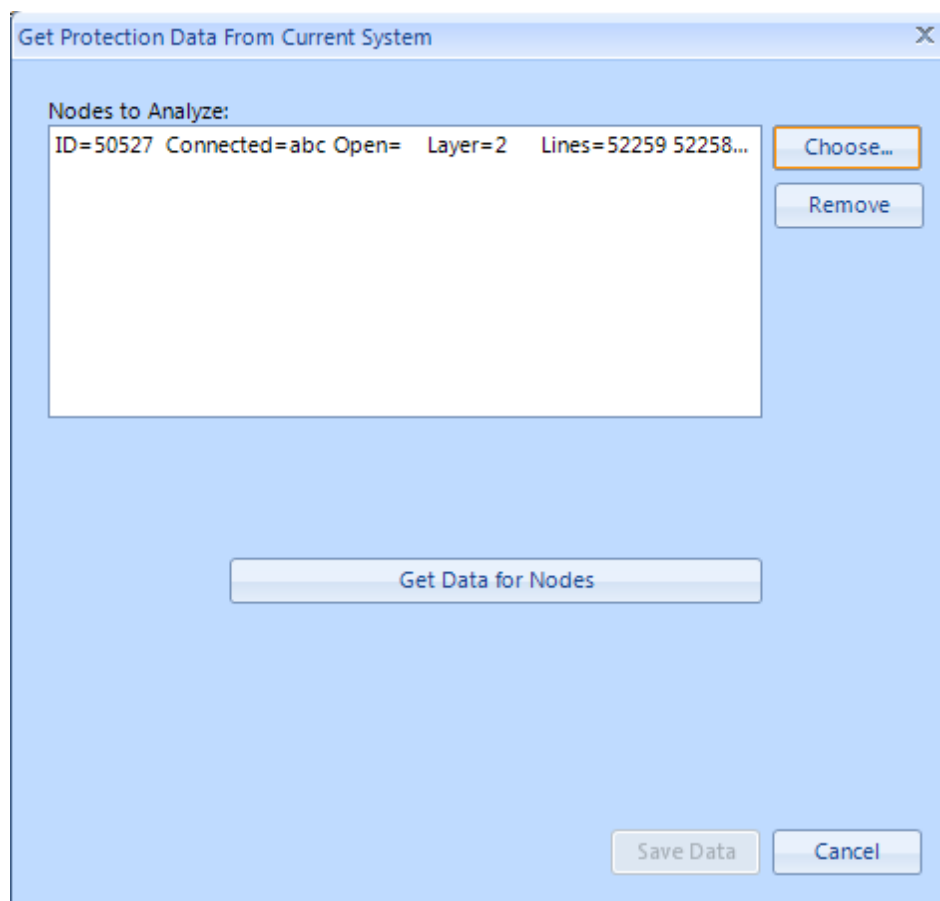

Controls

Choose

Choose loads the Find Asset window. It will allow you to search and find whichever node you wish to analyze.

Remove

Removes selected nodes from the analysis list.

Get Data for Nodes

This will run a short circuit analysis and gather protection data for all listed nodes.

Save Data

Save data will return all data for all nodes to the Arc Flash dialogue.

4.4.4.2 Capacitor Optimization Dialogue

Description

This tool calculates the optimal size and placement for capacitor banks in the system.

You can use this tool by opening the [Capacitor Optimization](#) command from More in the [Analysis](#) tab.

Appearance

Capacitor Optimization Parameters

Choose parameters for the capacitor placement optimization.

Bank size per phase: 300 kVAR

Maximum number of banks to place: 5

Analysis Period

☒ Full Year (Optimize for energy savings)

☐ Allow Switched Capacitors

☐ Specific Time (Optimize for power savings)

Bank Location

☒ Full System

☐ Selected Nodes

< Back Next > Cancel

Controls

Bank Size

This allows you to control how large the capacitor banks can be.

Maximum Number of Banks

This command will tell the program the maximum number of capacitor banks it can place throughout the system.

Analysis Period

This will choose whether the capacitor banks should be placed for optimal performance year-round or for a specific time frame.

Bank Location

Allows you to perform the capacitor analysis on either a selection or the full model.


4.4.4.3 Load Flow Dialogue

Description

This tool calculates the current and voltages in the system using the current configuration and loads.

You can use this tool by opening the [Load Flow](#) command in the [Analysis](#) tab.

Appearance

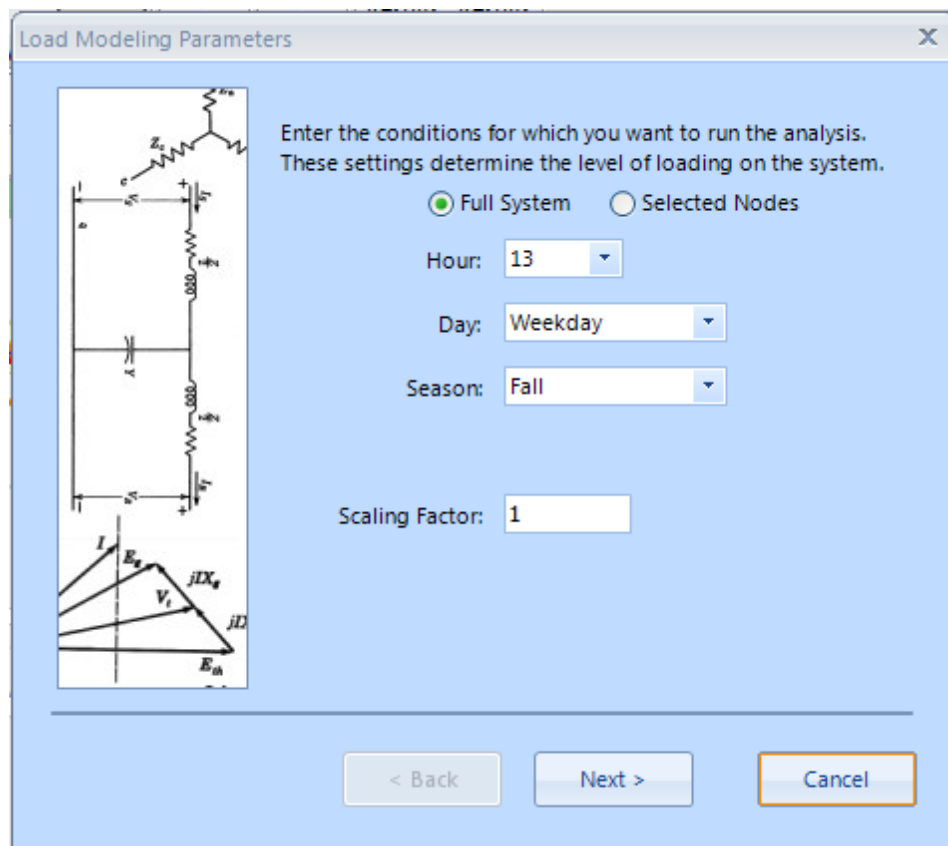

Controls

Full System/Selected Nodes

Allows you to perform the analysis on either a selection or the full model.

Hour

Determines the hour which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Day

Determines the [week type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Season

Determines the [season type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Scaling Factor

Determines the scaling factor applied to all [loads](#) in the system.

Next

Next will bring you to the Run Analysis window, where you may proceed with the analysis or choose back to update a parameter.

4.4.4.4 Load Loss Dialogue

Description

You can use this tool by opening the [Load Loss](#) command from More in the [Analysis](#) tab.

Appearance

Load Modeling Parameters

Enter the conditions for which you want to run the analysis. These settings determine the level of loading on the system.

☒ Full System
 ☐ Selected Nodes

Hour: 13

Day: Weekday

Season: Fall

Scaling Factor: 1

< Back Next > Cancel

Controls

Full System/Selected Nodes

Allows you to perform the analysis on either a selection or the full model.

Hour

Determines the hour which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Day

Determines the [week type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Season


Determines the [season type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Scaling Factor

Determines the scaling factor applied to all [loads](#) in the system.

Next

Next will bring you to the Analysis Start Node window, where you may proceed with the analysis or choose back to update a parameter.

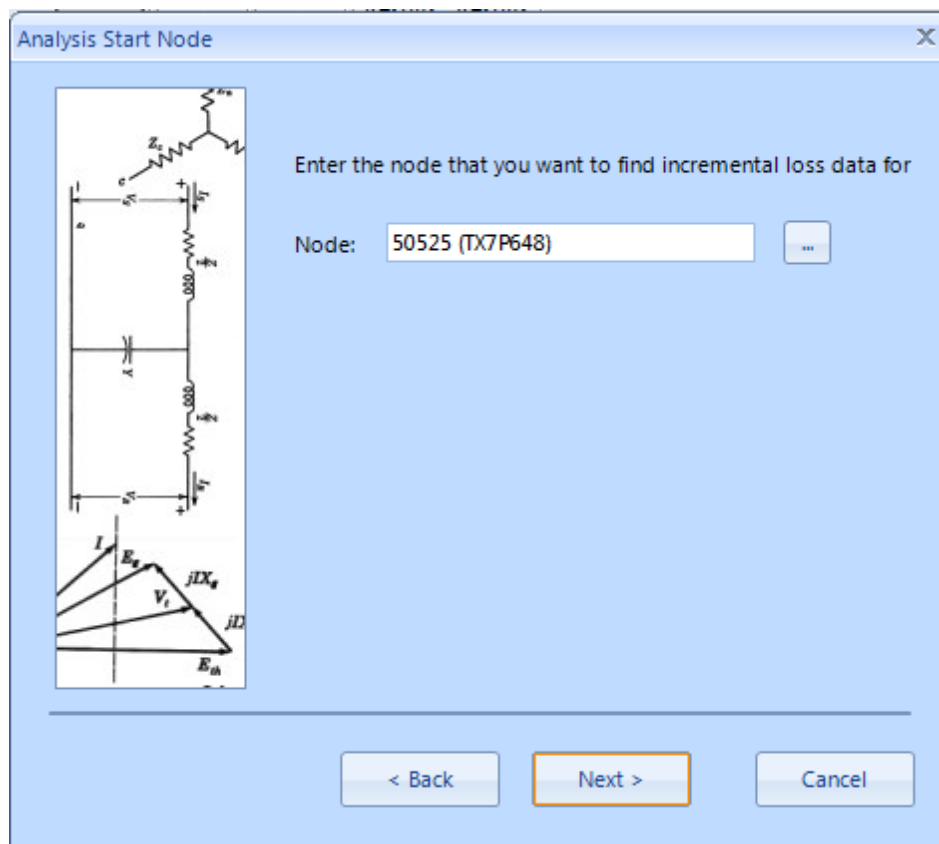

Node

This chooses which node will be analyzed. Clicking the "..." button will launch the Find Asset window to ease finding a specific asset for analysis. You must choose a node where a [load](#) could be added.

Next

Next will bring you to the Run Analysis window, where you may proceed with the analysis or choose back

to update a parameter.


4.4.4.5 General Short Circuit Dialogue

Description

This tool calculates the fault currents and voltages in the system using the current configuration and loads.

You can use this tool by opening the [General Short Circuit](#) command in the [Analysis](#) tab.

Appearance

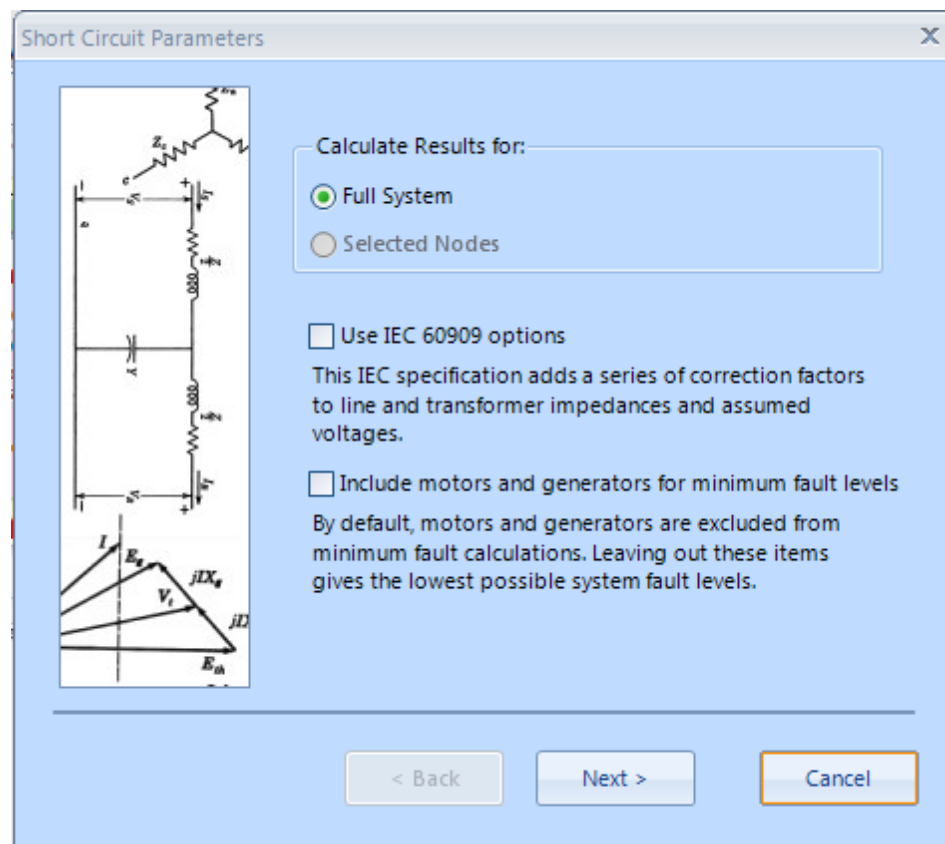

Controls

Full System/Selected Nodes

Allows you to perform the analysis on either a selection or the full model.

Use IEC 60909 Options

Determines if the IEC correction factors will be used in the analysis.


Include motors and generators

Determines if [motors and generators](#) will be used in the minimum fault level analysis.

Next

Next will bring you to the Voltage Factors window, where you may proceed with the analysis or choose

back to update a parameter.

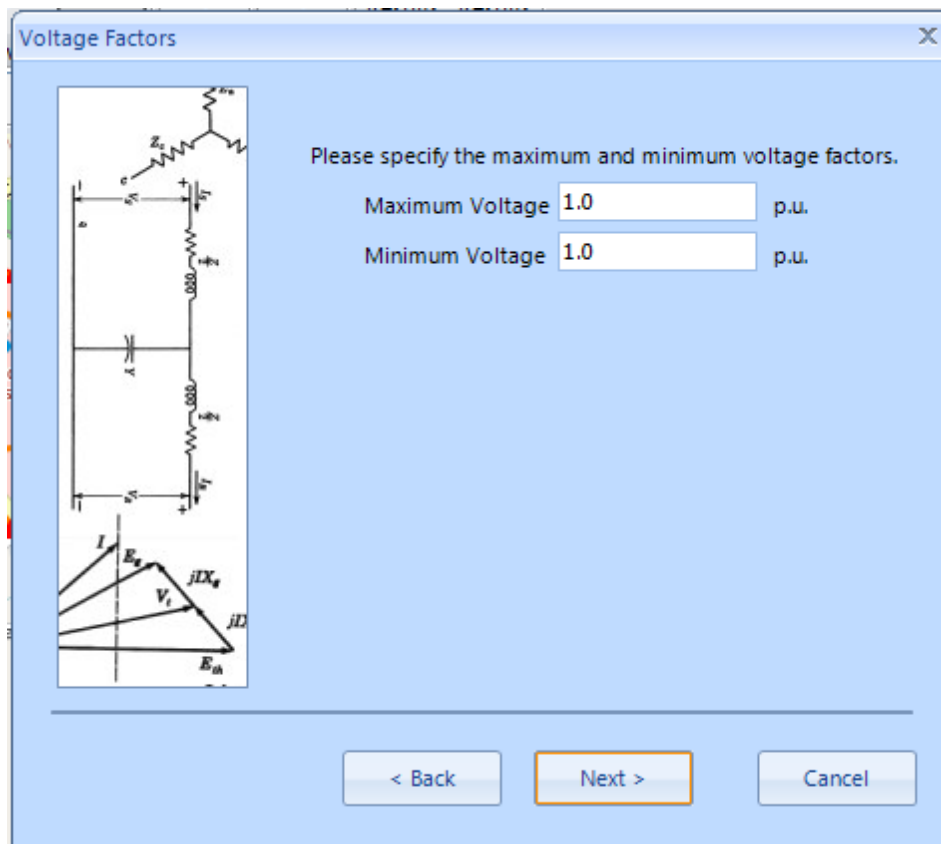

Maximum and Minimum Voltage

Determines the maximum and minimum voltage for the analysis.

Next

Next will bring you to the Run Analysis window, where you may proceed with the analysis or choose back to update a parameter.

4.4.4.6 Motor Starting Dialogue

Description

You can use this tool by opening the [Motor Starting](#) command from More in the [Analysis](#) tab.

Appearance

Load Modeling Parameters

Enter the conditions for which you want to run the analysis. These settings determine the level of loading on the system.

☒ Full System
 ☐ Selected Nodes

Hour: 13

Day: Weekday

Season: Fall

Scaling Factor: 1

< Back Next > Cancel

Controls

Full System/Selected Nodes

Allows you to perform the analysis on either a selection or the full model.

Hour

Determines the hour which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Day

Determines the [week type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Season


Determines the [season type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Scaling Factor

Determines the scaling factor applied to all [loads](#) in the system.

Next

Next will bring you to the Motor Starting Parameters window, where you may proceed with the analysis or choose back to update a parameter.

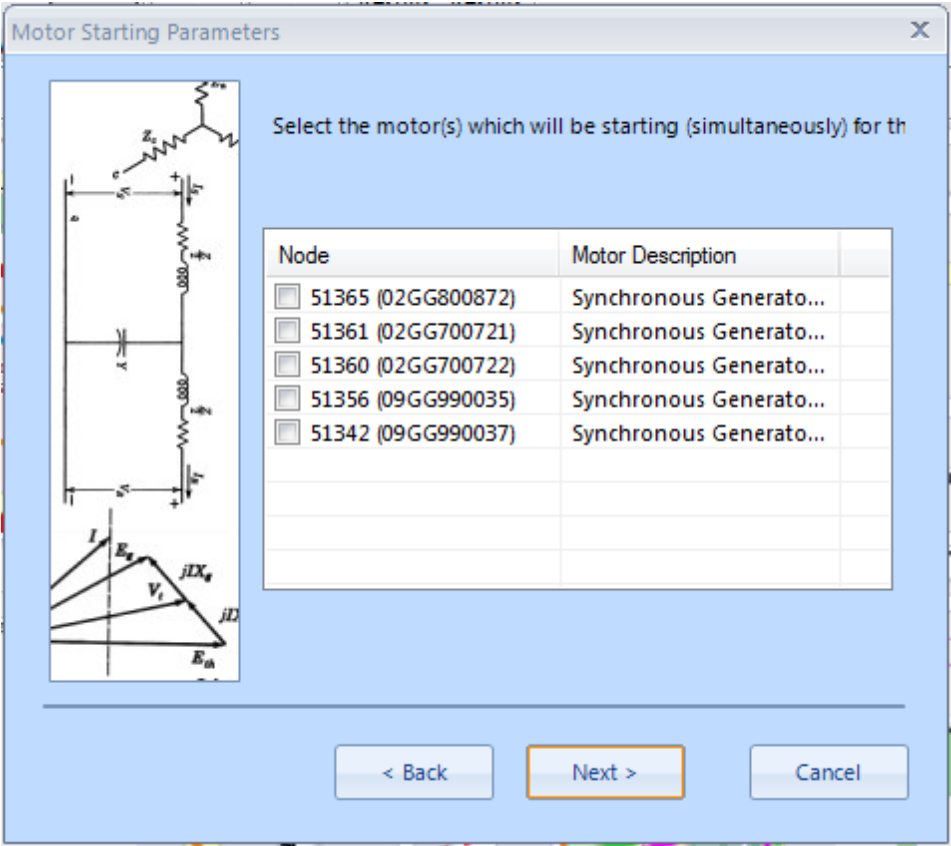

Select

Clicking on a check-box chooses which motors will be analyzed.

Next

Next will bring you to the Run Analysis window, where you may proceed with the analysis or choose back to update a parameter.

4.4.4.7 Open Point Optimization Dialogue

Description

You can use this tool by opening the [Open Point Optimization](#) command from More in the [Analysis](#) tab.

Appearance

Load Modeling Parameters

Enter the conditions for which you want to run the analysis. These settings determine the level of loading on the system.

☒ Full System
 ☐ Selected Nodes

Hour: 13

Day: Weekday

Season: Fall

Scaling Factor: 1

< Back Next > Cancel

Controls

Full System/Selected Nodes

Allows you to perform the analysis on either a selection or the full model.

Hour

Determines the hour which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Day

Determines the [week type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Season


Determines the [season type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Scaling Factor

Determines the scaling factor applied to all [loads](#) in the system.

Next

Next will bring you to the Motor Starting Parameters window, where you may proceed with the analysis or choose back to update a parameter.

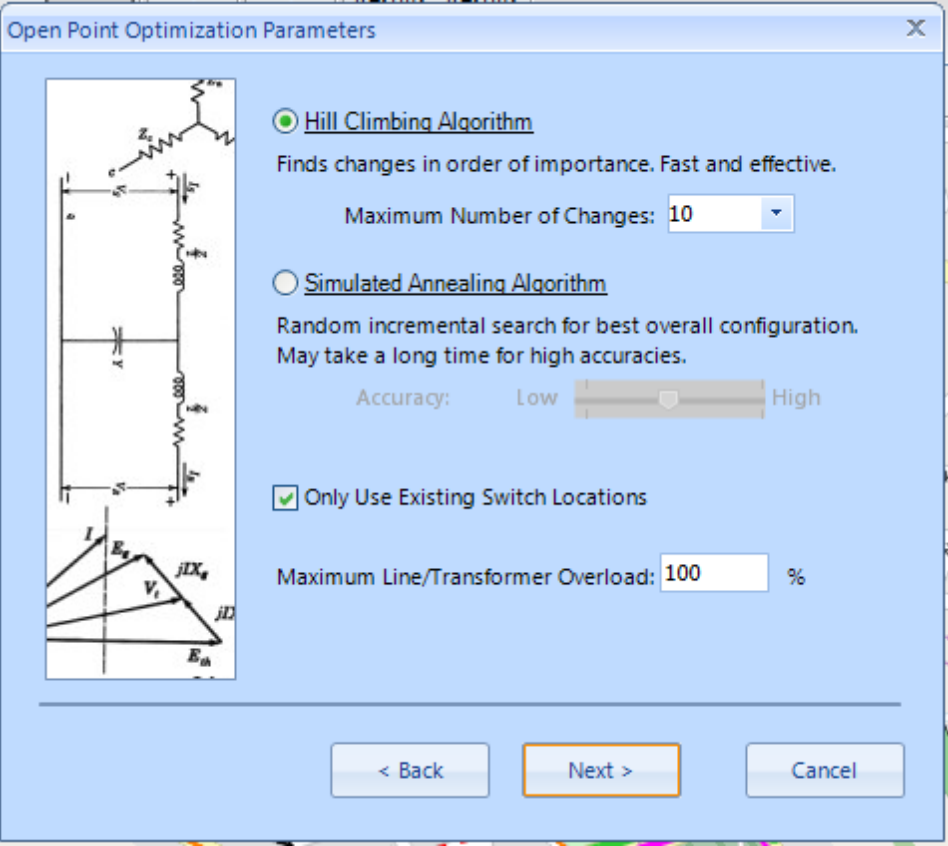

The dialog box is titled "Open Point Optimization Parameters". It contains two main sections. The top section is for selecting an algorithm: "Hill Climbing Algorithm" (selected with a radio button) and "Simulated Annealing Algorithm" (unselected). The "Hill Climbing Algorithm" section includes a description "Finds changes in order of importance. Fast and effective." and a "Maximum Number of Changes" dropdown set to "10". The "Simulated Annealing Algorithm" section includes a description "Random incremental search for best overall configuration. May take a long time for high accuracies." and an "Accuracy" slider set between "Low" and "High". Below these is a checked checkbox for "Only Use Existing Switch Locations". At the bottom, there is a "Maximum Line/Transformer Overload" dropdown set to "100 %". On the left side of the dialog, there are two diagrams: a circuit diagram showing a line with a switch and a transformer, and a phasor diagram showing vectors for current I , voltage V , and complex power S .

Open Point Optimization Parameters

☒ Hill Climbing Algorithm
Finds changes in order of importance. Fast and effective.
Maximum Number of Changes: 10

☐ Simulated Annealing Algorithm
Random incremental search for best overall configuration. May take a long time for high accuracies.
Accuracy: Low High

☒ Only Use Existing Switch Locations

Maximum Line/Transformer Overload: 100 %

< Back Next > Cancel

Hill Climbing/Simulated Annealing Algorithm

Clicking on a radio button will determine which kind of algorithm will be used to solve for the optimal open point locations.

Only Use Existing Switch Locations


Checking off this box will prevent the algorithm from suggesting new switch locations.

Maximum Overload

This will determine the maximum loading the algorithm will place on a line or transformer.

Next

Next will bring you to the Fixed Switches window, where you may proceed with the analysis or choose back to update a parameter.

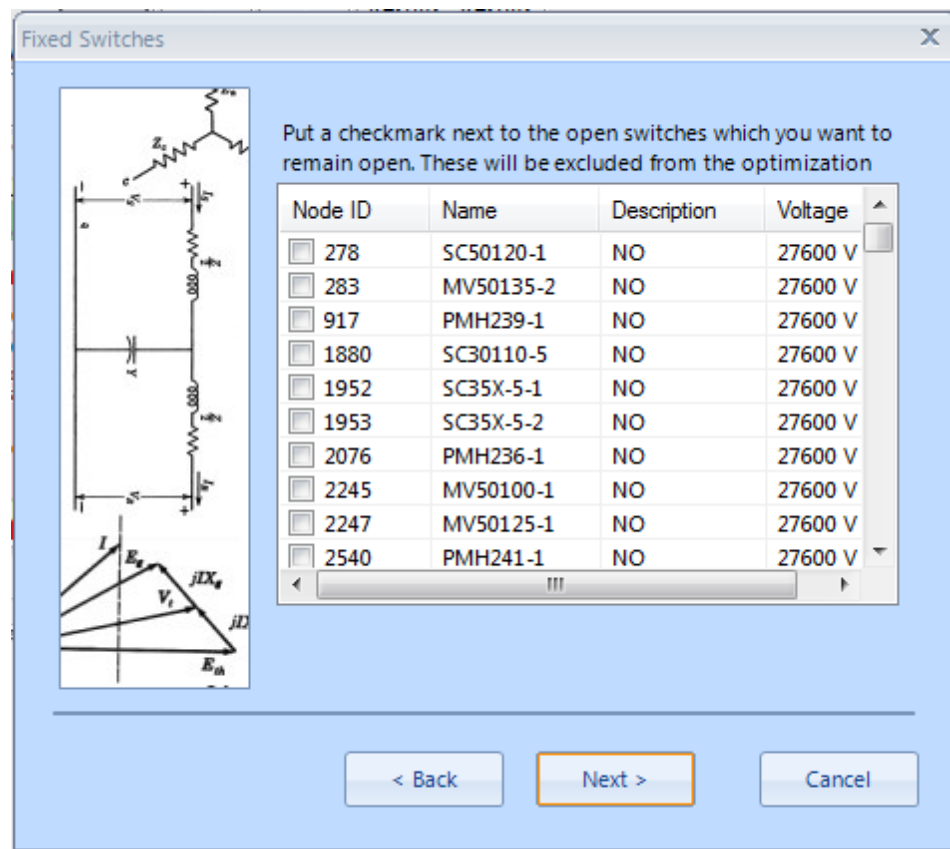

Select

Clicking on a check-box chooses which switches cannot be changed during the algorithm.

Next

Next will bring you to the Run Analysis window, where you may proceed with the analysis or choose back to update a parameter.

4.4.4.8 Phase Balancing Dialogue

Description

You can use this tool by opening the [Phase Balancing](#) command from More in the [Analysis](#) tab.

Appearance

Load Modeling Parameters

Enter the conditions for which you want to run the analysis. These settings determine the level of loading on the system.

☒ Full System ☐ Selected Nodes

Hour: 13

Day: Weekday

Season: Fall

Scaling Factor: 1

< Back Next > Cancel

Controls

Full System/Selected Nodes

Allows you to perform the analysis on either a selection or the full model.

Hour

Determines the hour which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Day

Determines the [week type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Season


Determines the [season type](#) reference which the analysis will be performed at. This is important for the [load elements](#), as most won't have a constant loading profile.

Scaling Factor

Determines the scaling factor applied to all [loads](#) in the system.

Next

Next will bring you to the Phase Balancing Parameters window, where you may proceed with the analysis or choose back to update a parameter.

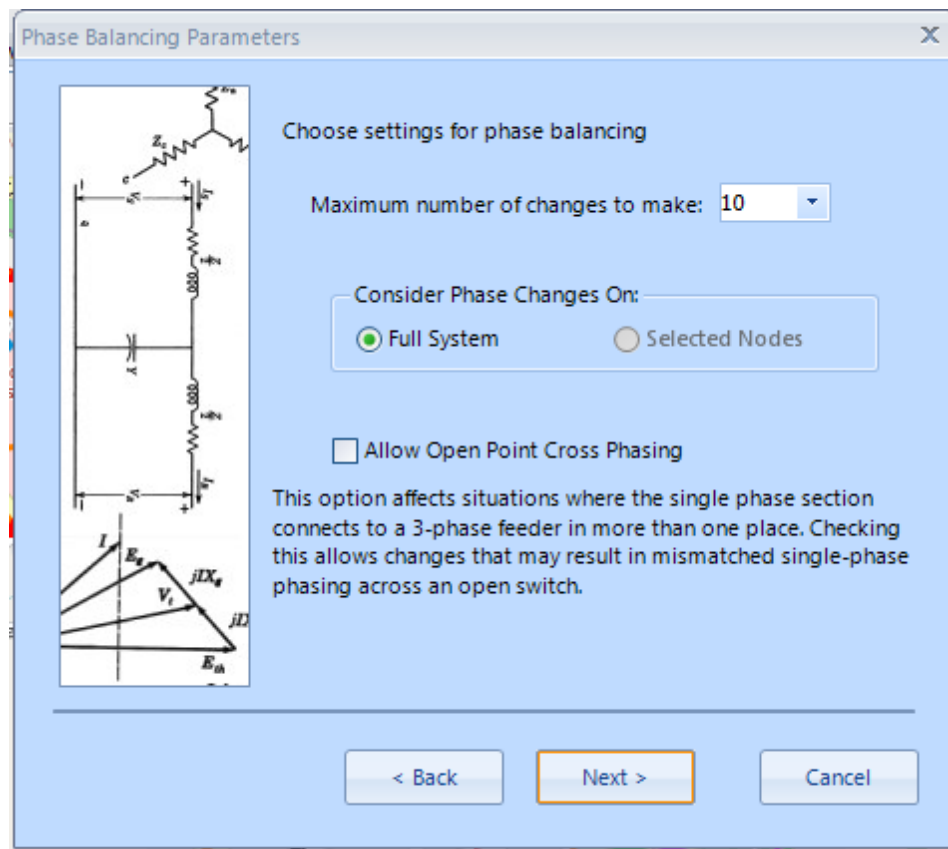

Maximum Number of Changes

This limits the number of changes the algorithm is allowed to make to the model.

Full System/Selected Nodes

Allows you to perform the analysis on either a selection or the full model.

Allow Open Point Cross Phasing

Allows the algorithm to have two different phases on each side of an open switch.

Next


Next will bring you to the Run Analysis window, where you may proceed with the analysis or choose back to update a parameter.

4.4.4.9 Protection Coordination Dialogue

Description

This dialogue is used to view the protection coordination for a particular node in the system. All devices on or upstream of the selected node are shown. This dialogue is accessed from the [Analysis > Protection Coordination](#) command.

Appearance

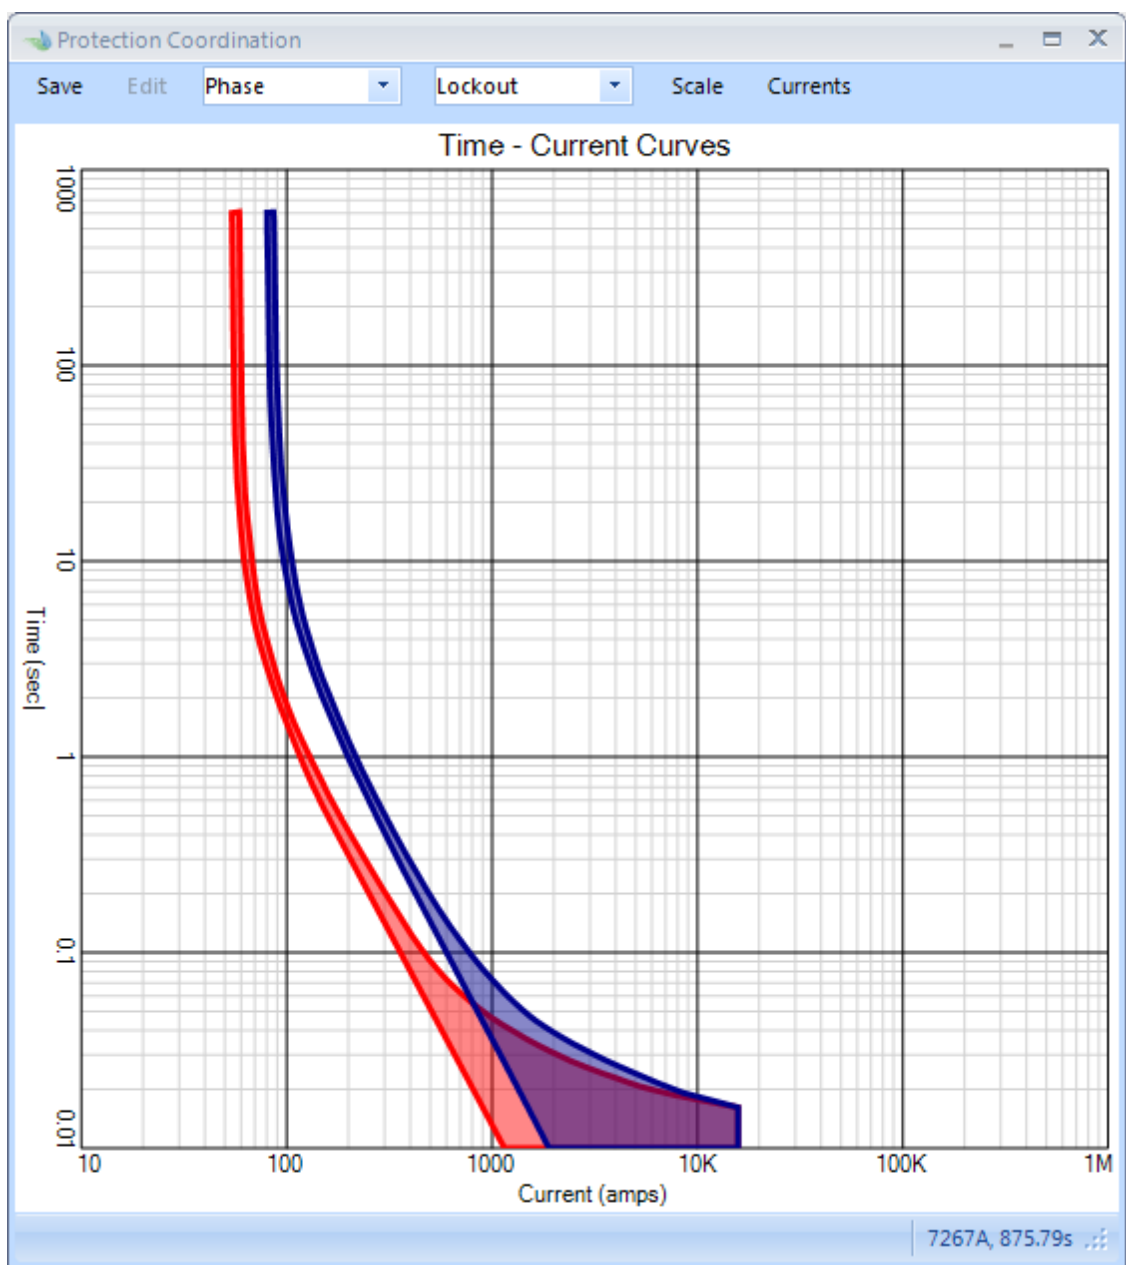

Mouse Usage

Move Mouse

As you move the mouse, the coordinates of the mouse location on the graph will be shown on the status bar. If you have selected a device curve (see Click), the coordinates of the edge of the selected curve will be shown.

Click

Click on a curve to select it (and see the coordinates of the curve edge).

Double-Click

Double-click on a curve to edit the properties of the [device](#) associated with that curve.

Menu Commands

Save Image

This lets you save the current graph to a graphics file. Formats include PNG, JPG, BMP, TIFF, and GIF.

Edit

Opens the edit properties of the device associated with that curve.

Drop-downs

The dropdowns choose which reclosure curves to show on the graph.

Scale

Opens a dialogue which allows you to control the time and current axis scales.

Currents

Allows you to add a current range colour box to visually define the protection coordination current limits.

4.4.4.10 SCADA Load Flow Dialogue

Description

You can use this tool by opening the [SCADA Load Flow](#) command from More in the [Analysis](#) tab.

Appearance


4.4.4.11 Specific Short Circuit Dialogue

Description

This tool calculates the fault currents and voltages in the system using the current configuration and loads.

You can use this tool by opening the [Specific Short Circuit](#) command from More in the [Analysis](#) tab.

Appearance

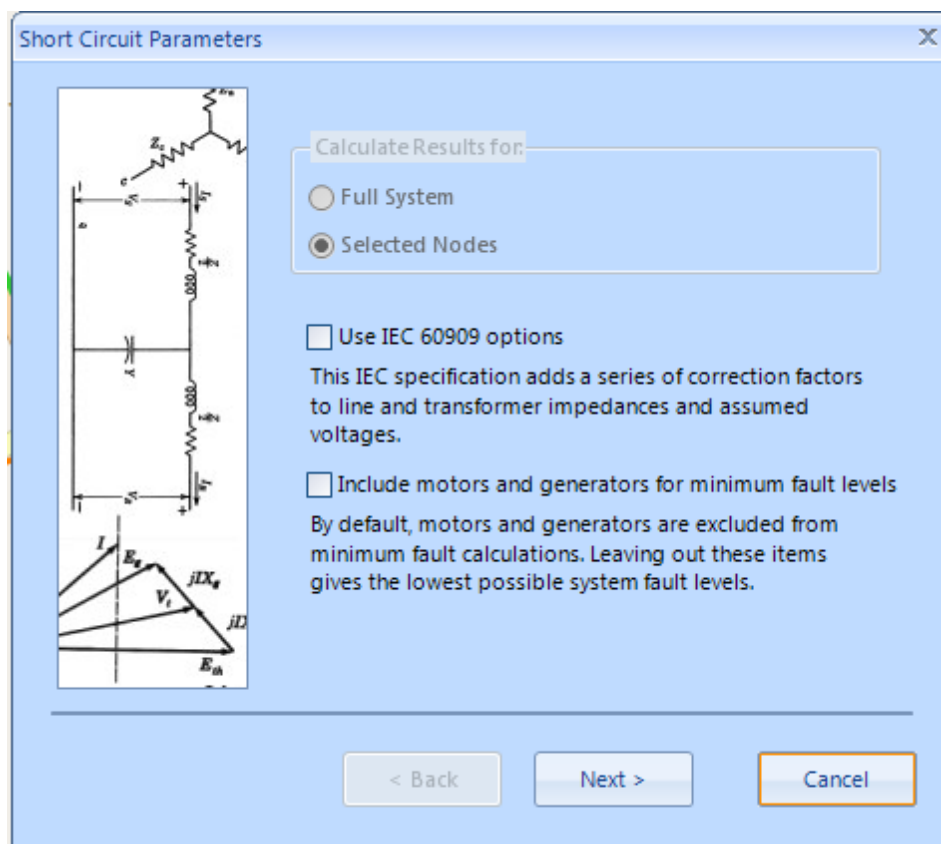

Controls

Full System/Selected Nodes

In specific short circuit, you must perform the analysis on a selected node. The node can either be selected before the analysis starts, or selected later.

Use IEC 60909 Options

Determines if the IEC correction factors will be used in the analysis.


Include motors and generators

Determines if [motors and generators](#) will be used in the minimum fault level analysis.

Next

Next will bring you to the Single Fault Analysis window, where you may proceed with the analysis or choose back to update a parameter.

Single Fault Analysis Parameters

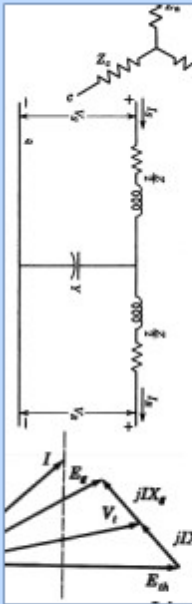

Choose the node where the fault will be located and the type

Node: ...

Type of fault:

Fault phasing:

Resistance: Ohms
Bolted fault (worst case)
has 0 resistance

< Back Next > Cancel

Node

Determines the node selected for the analysis. If a node was selected before the analysis began, its details will be automatically filled in. If a different node should be selected, click the "..." button to bring up the Find Asset window.

Type of Fault

Determines what type of fault is being analyzed, options will depend on whether the node selected is single or three phase.

Fault Phasing

Determines the phase of the fault. If the node selected is a single phase, it will automatically be defaulted to that phase.

Resistance

Determines the resistance of the fault, with 0 being a bolted fault.

Next

Next will bring you to the Run Analysis window, where you may proceed with the analysis or choose back to update a parameter.


4.4.4.12 Meter Data Dialogue

Description

This tool gives all relevant data about [meters](#) in the system.

You can use this tool by opening the **Meter Data Report** command in the [Analysis](#) tab.

Appearance

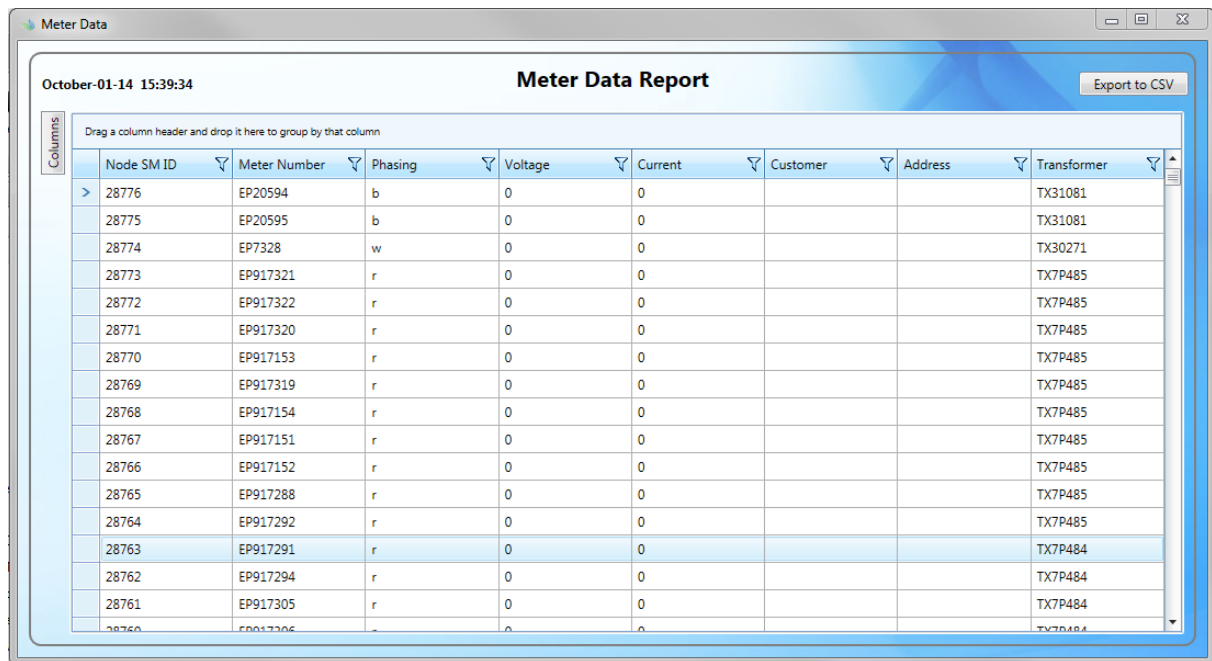

The screenshot shows a window titled "Meter Data" with a sub-header "Meter Data Report". The window includes a timestamp "October-01-14 15:39:34" and an "Export to CSV" button. A "Columns" sidebar on the left allows for column selection. The main table displays the following data:

Node SM ID	Meter Number	Phasing	Voltage	Current	Customer	Address	Transformer
28776	EP20594	b	0	0			TX31081
28775	EP20595	b	0	0			TX31081
28774	EP7328	w	0	0			TX30271
28773	EP917321	r	0	0			TX7P485
28772	EP917322	r	0	0			TX7P485
28771	EP917320	r	0	0			TX7P485
28770	EP917153	r	0	0			TX7P485
28769	EP917319	r	0	0			TX7P485
28768	EP917154	r	0	0			TX7P485
28767	EP917151	r	0	0			TX7P485
28766	EP917152	r	0	0			TX7P485
28765	EP917288	r	0	0			TX7P485
28764	EP917292	r	0	0			TX7P485
28763	EP917291	r	0	0			TX7P484
28762	EP917294	r	0	0			TX7P484
28761	EP917305	r	0	0			TX7P484
28760	EP917306	r	0	0			TX7P484

Controls

Columns

This allows you to control which columns are shown in the report. Choose by selecting or deselecting the check-box.

Filter

Clicking the funnel icon in the column headers will bring up a drop-down which will allow you to filter any column by an criteria.

Export to CSV


This will export the current report contents to a CSV file.

4.4.4.13 Node Style Dialogue

Description

This dialogue lets you specify the appearance of nodes in the default theme (the appearance when no results or other custom themes are being displayed). Using the dialogue, you can set a series of rules defining a particular type of node and the associated appearance. It is accessed from the Settings menu in the [Analysis](#) tab.

Appearance

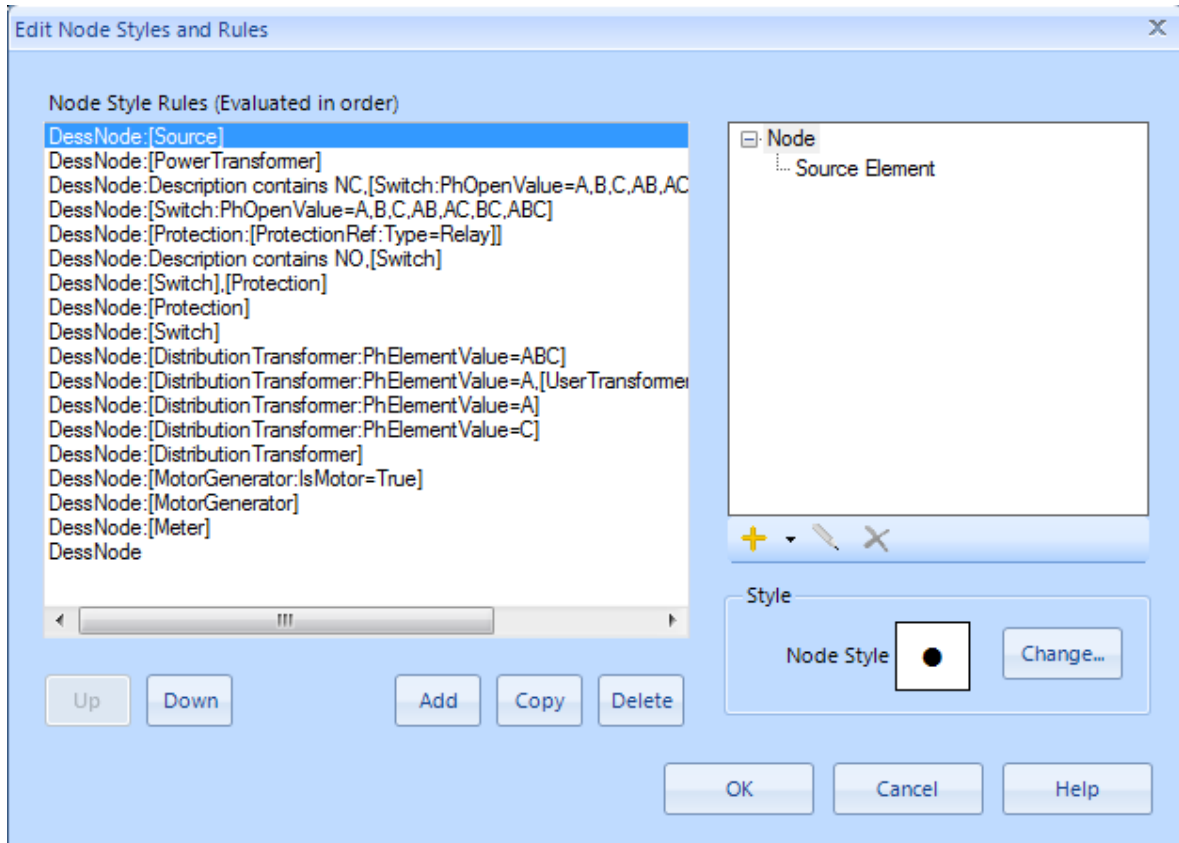

Controls

Node Style Rules

The currently defined set of node rules. The details of a rule is shown at right in the Properties Tree.

Up Down

Use the Up and Down buttons to change the order of the rules. When a theme is evaluated for a specific node, the first matching rule will be selected and all others will be ignored. For this reason, more specific rules (e.g. 50kVA Distribution Transformer) should be higher up in the list than more general rules (e.g. Distribution Transformer).

Add Delete

Use the Add button to add new empty rules, and the Delete button to remove unwanted rules.

Properties Tree


This tree view is the heart of the custom rule ability. Starting with a node object, you add conditions which you want to specify. You do this by right-clicking on the tree item. This will bring up a menu listing properties of the specified object, and in the case of nodes will show types of elements which you want to exist on a node. Click on a menu item to add that condition by setting the property in the [Edit Property dialogue](#)

Add Delete Edit

The add button brings up the pop-up menu as shown (same as right-clicking on an item in the tree). The Edit and Delete buttons let you edit or delete an existing selected item. Properties for the item are shown in the [Edit Property dialogue](#).

Style

The **Change...** button brings up the following Point Style dialogue where you can set the actual appearance of a specific rule.

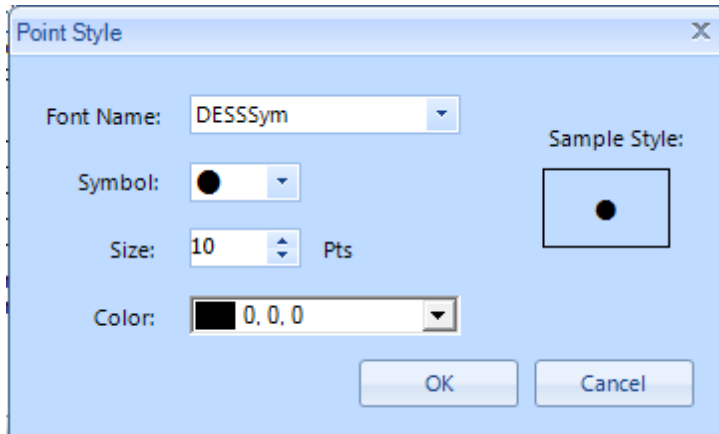

Font Name

The name of the font containing the symbol you want to use. DESS comes with a font called DESSym that contains a number of common distribution system symbols. You can also use standard symbol fonts such as Symbols and Wingdings, or any other font installed on your machine. All of the default symbols shown are in the font provided; DESSym.

Symbol

Pick the specific symbol you want from the set provided by the font.

Size

The size of the font in points.

Color

The color of the font. You can only use single-color symbols in DESS.

Sample Style


This box shows the currently selected style as it will appear on the map in DESS.

4.4.4.14 Line Style Dialogue

Description

This dialogue lets you specify the appearance of lines in the default theme (the appearance when no results or other custom themes are being displayed). Using the dialogue, you can set a series of rules defining the characteristics of a particular type of line and the associated appearance. It is accessed from the Themes menu.

Appearance

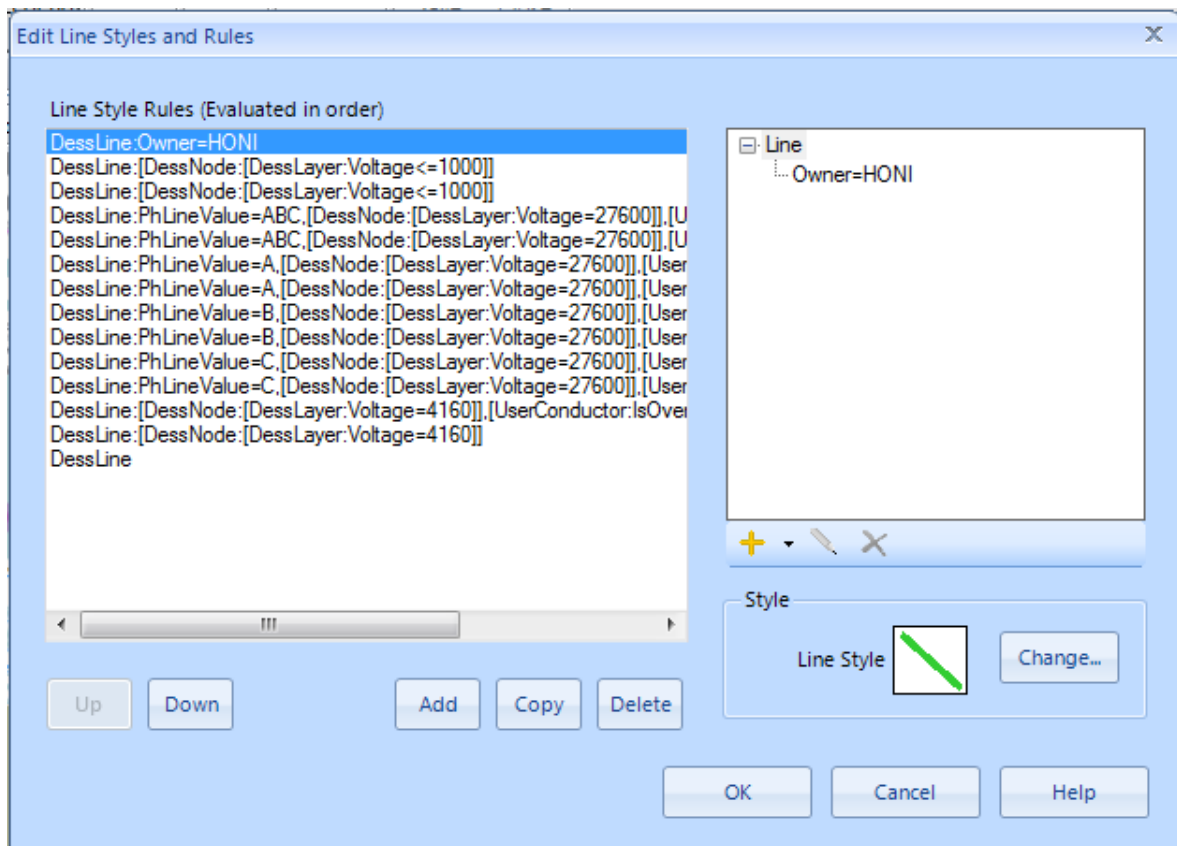

Controls

Line Style Rules

The currently defined set of line rules. The details of the rule characteristics is shown at right in the Properties Tree.

Up Down

Use the **Up** and **Down** buttons to change the order of the rules. When a theme is evaluated for a specific line, the first matching rule will be selected and all others will be ignored. For this reason, more specific rules (e.g. 27kV Single Phase Underground Line) should be higher up in the list than more general rules (e.g. Single Phase Line).

Add Delete

Use the **Add** button to add new empty rules, and the **Delete** button to remove unwanted rules.

Properties Tree

This tree view is the heart of the custom rule ability. Starting with a line object, you add conditions which you want to specify. You do this by right-clicking on the tree item. This will bring up a menu listing properties of the specified object. Click on a menu item to add that condition by setting the property in the [Edit Property dialogue](#)


Add Delete Edit

The **Add** button brings up the pop-up menu as shown (same as right-clicking on an item in the tree). The **Edit** and **Delete** buttons let you edit or delete an existing selected item. Properties for the item

are shown in the [Edit Property dialogue](#).

Style

The **Change...** button brings up the following Line Style dialogue where you can set the actual appearance of a line for a specific rule.

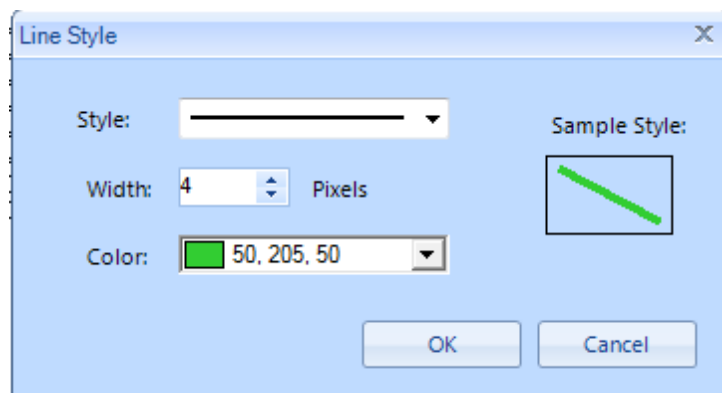

Style

The style of the line (e.g. solid, dashed, dotted, etc).

Width

The width of the line in pixels.

Color

The color of the line. Lines can only have a single color.

Sample Style


The line style as it will appear on the DESS map.

4.4.4.15 Label Style Dialogue

Description

This dialogue lets you specify the appearance of labels in the default theme (the appearance when no results or other custom themes are being displayed). Using the dialogue, you can set a series of rules defining the characteristics of a particular type of label and its associated appearance. It is accessed from the Themes menu.

Appearance

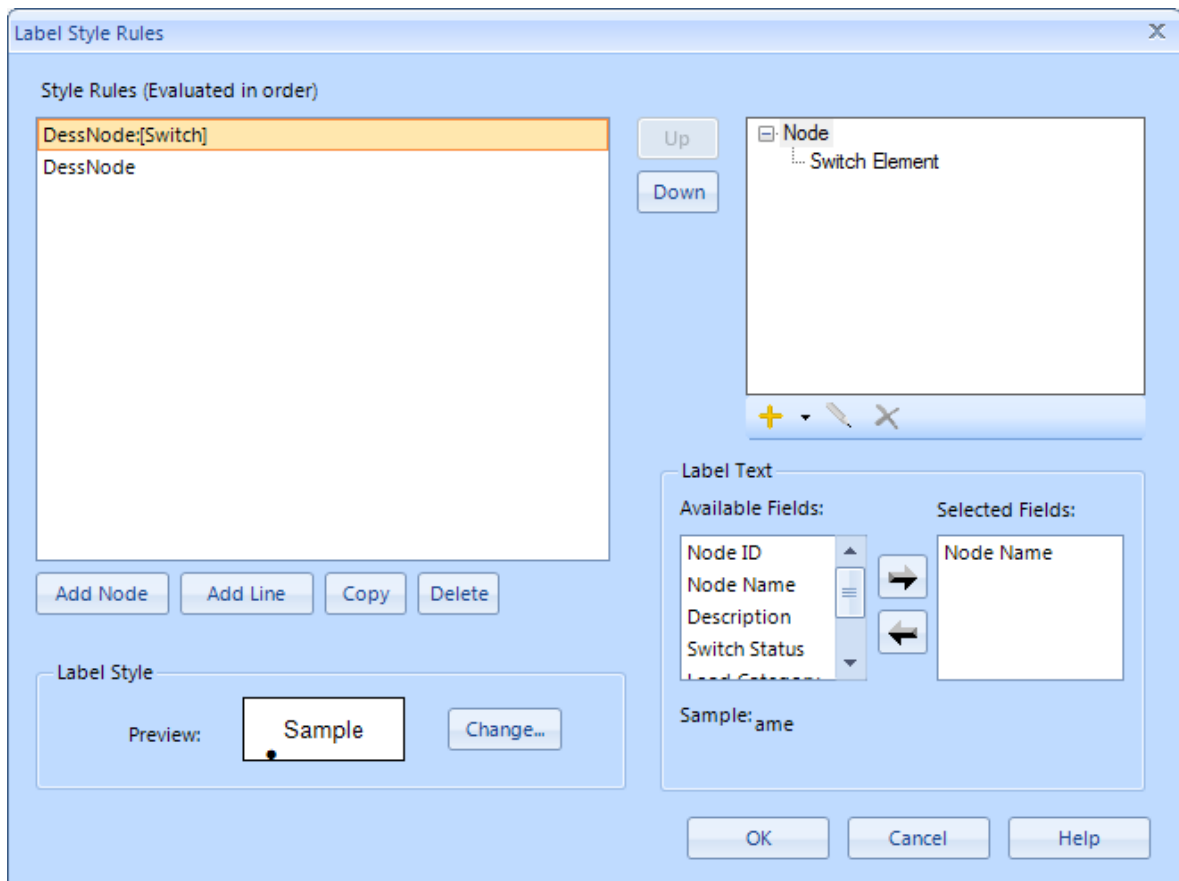

Controls

Label Style Rules

The currently defined set of label rules. The details of the rule characteristics is shown at right in the Properties Tree.

Up & Down

Use the **Up** and **Down** buttons to change the order of the rules. When a theme is evaluated for a specific line, the first matching rule will be selected and all others will be ignored. For this reason, more specific rules (e.g. 27kV Single Phase Underground Line) should be higher up in the list than more general rules (e.g. DESS node).

Add & Delete

Use the **Add** button to add new empty rules, and the Delete button to remove unwanted rules.

Properties Tree

This tree view is the heart of the custom rule ability. Starting with a line object, you add conditions which you want to specify. You do this by right-clicking on the tree item. This will bring up a menu listing properties of the specified object. Click on a menu item to add that condition by setting the property in the [Edit Property dialogue](#)

Add & Delete & Edit

The **Add** button brings up the pop-up menu as shown (same as right-clicking on an item in the tree). The **Edit** and **Delete** buttons let you edit or delete an existing selected item. Properties for the item are shown in the [Edit Property dialogue](#).

Label Text

This contains the rules for the appearance of a particular label.

Left List Box

This box contains the list of all possible labels to add to a particular style. There is no restriction to how many of these you can add. Note that 'New Line' is not an actual label, but is used for formatting.

Right List Box

This box contains all of the labels that are currently added to the currently selected style.

Sample

This shows an example of how all of the labels will appear on the map view. This uses the titles of each label as opposed to sample text however.

Left and Right Arrows

These arrows direct the addition and removal of labels. left arrow removes the label selected on the right, while the right arrow adds the label selected on the left.

4.4.4.16 Import Load Dialogue

Description

This dialogue is used to define how to import [load element](#) data from an external database or tabular data file by defining the meaning of each column in the import data you can determine how the data will be imported. This dialogue is accessed from [Analysis > Loads > Import Load](#). Loads can be imported from the following types of data: MS Access database, MS Excel spreadsheet, comma separated value (CSV) text file, and DBase IV database file.

Appearance

Import Load

Define the meaning of the fields in the load import table. In the table below click on the row for each field and then using the controls to the right define the type of data it contains and the details for that data.

You must define one field as a link field and at least one field as load data. Other types of data are optional.

Load Data Fields

Field	Data Type	Details
BankID	None	
RdgSeq	None	
RdgDate	None	
KwDemand	None	
KvaDemand	None	
PkDemand	None	

Existing Loads

☒ Delete all loads in system
☐ Delete existing load data on nodes where new data is imported
☐ Keep all existing system load data

Default Unmetered Value:
 Metered

Default Load Unit:
 kWh

Default Load Category:
 1: Commercial

OK Cancel Help

Controls

Load Data Fields

This list is the heart of the load import configuration process.

The **Field** column shows all fields in the database or file being imported.

The **Data Type** column shows what type of data the field contains. Initially all fields will be set to None

the **Details** column shows details of the match for the particular field.

Data Type

When a row of the Load Data Fields is selected, use this control to specify the contents of the import field. The possible choices are:

None - the field does not contain any data relevant to load import

Link - the field is used to link a row of the load import data to a specific [node](#) in DESS. You can link by node ID, name or description. Linking the external data to a matching node Name is the most common way to match data. You must define exactly one field as a Link field.

Load - the field contains actual [load](#) data. For a load field you must define the period which the load represents. For example you may have four fields which each represent a [season](#) or there may be a single field containing load data representing the entire year. You must define one or more Load fields.

Unit - the field contains values which define different load units for different rows of data. For example, if you have data which defines some loads as kWh and others as kVA peak, then you can specify which field defines the unit, and specify how the different values match up with the load units in DESS. You can define zero or one fields of this type. If you do not define a Unit field, all imported loads will use the **Default Load Unit**. If you do define a Unit field, the **Default Load Unit** will not be used and will be grayed out.

Category - the field contains values which define different [load categories](#) for different rows of data. For example, the import data may contain a field which contains information for customer types or industry codes. These can be mapped to load categories defined in DESS. You can define zero or one fields of this type. If you do not define a Category field, all imported loads will use the **Default Load Category**. If you do define a Category field, the **Default Load Category** will not be used and will be grayed out.

Existing Loads

This section defines how existing system loads are treated. You can do one of the following:

Delete all loads in system - All loads throughout the system will be removed prior to importing new loads, even if no new loads will be created during import.

Delete existing load data on nodes where new data is imported - A list of nodes where load data will be imported is created, and all loads on these nodes is deleted prior to import. Other nodes are not affected.

Keep all existing system load data - No [load elements](#) are deleted prior to import. New loads will be added to nodes in addition to any existing load elements.

Default Load Unit

This defines the unit of loads to be imported. If you have defined one of the import fields as a Unit field then this value is not used.

Default Load Category

This defines the category of loads to be imported. If you have defined one of the import fields as a Category field then this value is not used.

OK

When you click OK the load data will be imported. In some cases there may be mismatches between the import data and system loads. After the import you will be prompted to display a report for the import, which will show in detail the following conditions:

- Loads in the import data for which no matching system node could be found.
- Loads that could not be added to a node because the load would conflict with other [elements](#) (such as switches or generators, etc) on the node.

- Nodes that contain [distribution transformers](#) or had loads prior to the import for which no new load was imported.

4.4.4.17 Create Loads Dialogue

Description

This tool is used to create [loads](#) on [nodes](#) where there are already [distribution transformer](#) elements. The new loads will be based on the size and phasing of the distribution transformer. You have the option of deleting any existing loads and you can choose which [seasons](#) to create the new loads for. This dialogue is accessed from [Analysis > Loads > Create Loads](#) menu.

After creating loads using this tool you may need to do further scaling of load values. You can use the [Load Scaling](#) tool to do this.

This tool can be successfully used in conjunction with the [Import Load dialogue](#) for situations where imported data has omissions. First use the Import Load dialogue to import kWh data where known. If there are still transformers that have no load assigned, use this tool to create default loads for these situations. It's helpful to use a new [load category](#) (e.g. 'Unknown Category') for these cases so they can be scaled independently using the Load Scaling dialogue.

Appearance

Create New Transformer Loads

Nodes Currently Selected: 1

Nodes with distribution transformers: 1

Nodes with transformers but no loads: 0

Existing Loads: 1 loads on 1 nodes ☐ Delete these existing loads

Create new loads on:

☒ All Selected Transformers

☐ Selected Transformers Without Loads

New load elements will be created with the following characteristics, base

New Load Parameters

Load Category: 1: Commercial

Initial Load: 80 % of transformer size

Create load sets for seasons:

- ☐ 1: Year
- ☐ 2: Spring
- ☐ 3: Summer
- ☐ 4: Fall
- ☐ 5: Winter

OK Cancel Help

Controls

Statistics

The top section describes how many nodes are currently selected in DESS, and of these, how many nodes contain distribution transformer elements, and of the transformers, how many do not have any associated loads. Loads will only be created on nodes that already have transformers.

Delete existing loads

If there are already existing load elements on the nodes you have selected containing transformers, then you have the option of deleting these loads. If you choose not to delete the loads, new load elements will be added in addition to the existing loads.

Create new loads on

You can choose to create new loads on all selected transformers, or only those that do not already have loads on the same node.

Load Category

Choose the category for the new loads. All new loads will use this category

Initial Load %

Choose the size of the new load relative to the nominal transformer size. All new loads will be created with this value for peak kVA. Note that you can use the Load Scaling tool subsequently to modify the initial value.

Seasons


Check the seasons for which you want load sets to be created in the load element data. Typically the new load should cover a complete year. In the example above you would choose either Year by itself, or check the four seasonal items and leave Year unchecked.

4.4.4.18 Load Scaling Dialogue

Description

This tool lets you change the magnitude of the [load](#) on a group of selected nodes. To use it, first select all nodes you want to scale (using any of the selection tools), then choose [Analysis](#) > [Loads](#) > [Load Scaling](#). A dialogue will be displayed which will guide you through the steps of determining which loads to scale and how to scale them.

Appearance

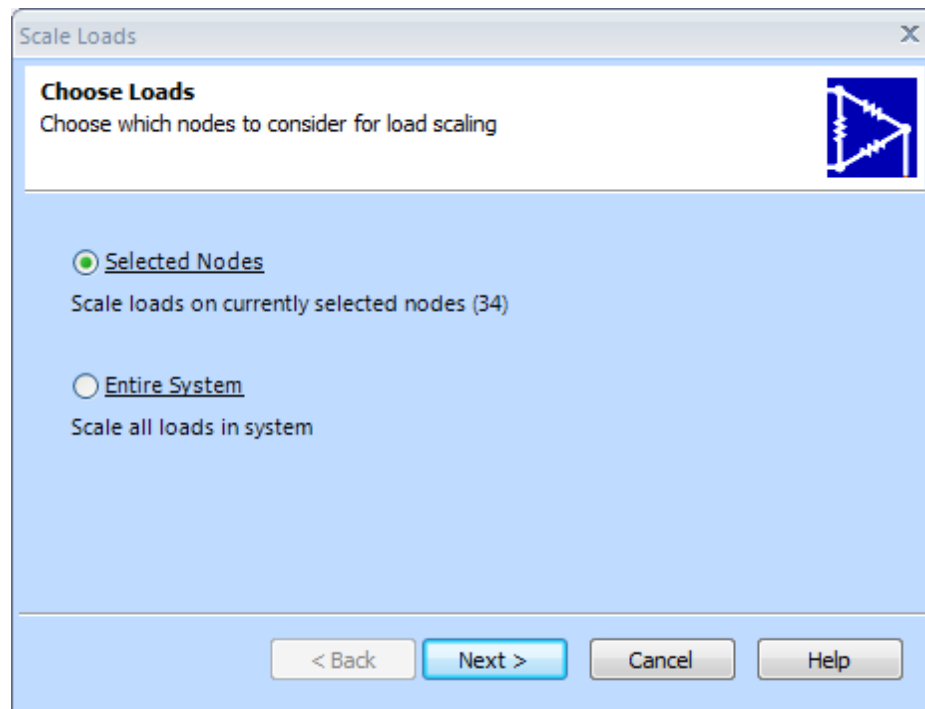


Choose Loads Step

Selected Nodes

Choose this option to scale [loads](#) on only those [nodes](#) that are currently selected. The number of selected nodes is shown in the description. If no nodes are currently selected this option is disabled and you can only scale loads for the entire [system](#).

Entire System

Choose this option to scale loads on the entire system.

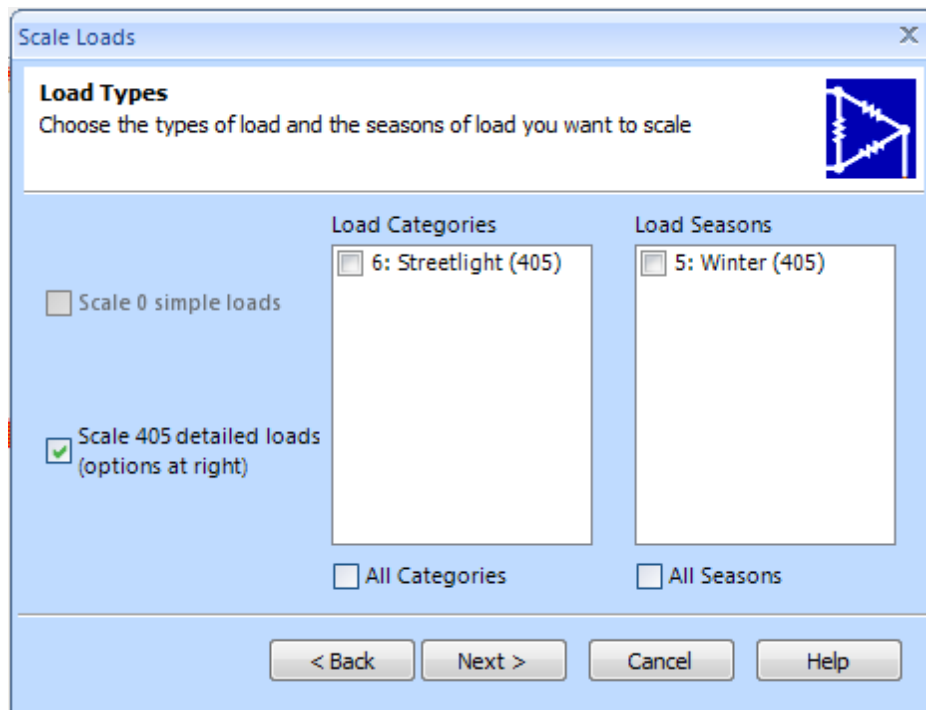

The image shows a software dialog box titled "Scale Loads". It has a standard Windows-style title bar with a close button (X) in the top right corner. The main area is light blue and contains the following elements:

- Load Types**: A section header with a small icon of a circuit board to its right. Below it is the instruction "Choose the types of load and the seasons of load you want to scale".
- Scale Options**: Two checkboxes on the left. The first is "Scale 0 simple loads" (unchecked). The second is "Scale 405 detailed loads (options at right)" (checked with a green checkmark).
- Load Categories**: A list box containing one item: "6: Streetlight (405)". Below the list box is an unchecked checkbox labeled "All Categories".
- Load Seasons**: A list box containing one item: "5: Winter (405)". Below the list box is an unchecked checkbox labeled "All Seasons".
- Navigation Buttons**: At the bottom, there are four buttons: "< Back", "Next >", "Cancel", and "Help".

Load Types Step

Scale Simple Loads

Check this option to scale any simple loads in the collection of nodes specified in the previous step. The number of simple loads available to be scaled is shown.

Scale Detailed Loads

Check this option to scale any detailed loads in the collection of nodes specified in the previous step. The number of detailed loads available to be scaled is shown.


Load Categories / All Categories

Choose which [load categories](#) you want to apply scaling to among the specified detailed loads. Only those categories which are in use among the specified loads are shown in the list. To scale all loads regardless of category, check the **All Categories** box below the list.

Load Seasons / All Seasons

Each [load set](#) in a detailed load element specifies a season for which that load applies. Choose which

[load seasons](#) you want to apply scaling to among the specified detailed loads. Only those seasons which are in use among the specified loads are shown in the list. To scale all loads regardless of season, check the **All Seasons** box below the list.

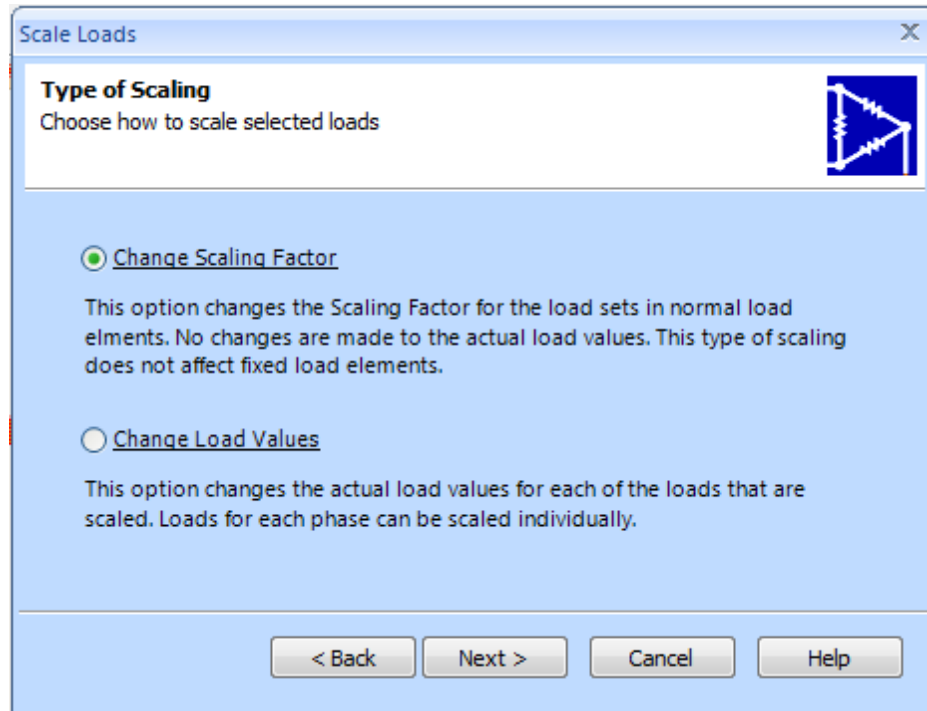


Type of Scaling Step

Change Scaling Factor

Each load set in a detailed load element has a field for load scaling. This is a factor which can be used to modify a load without actually changing the data for the load magnitude. This can be useful for applying temporary load scaling. (for example, temporarily setting the scaling factor of a set of loads to 0 effectively removes those loads from the system).

Change Load Values

This option lets you change the actual load magnitudes which are defined for a load. Once these are changed it may not be easy or practical to reset them to their original values so this option should be used with care.

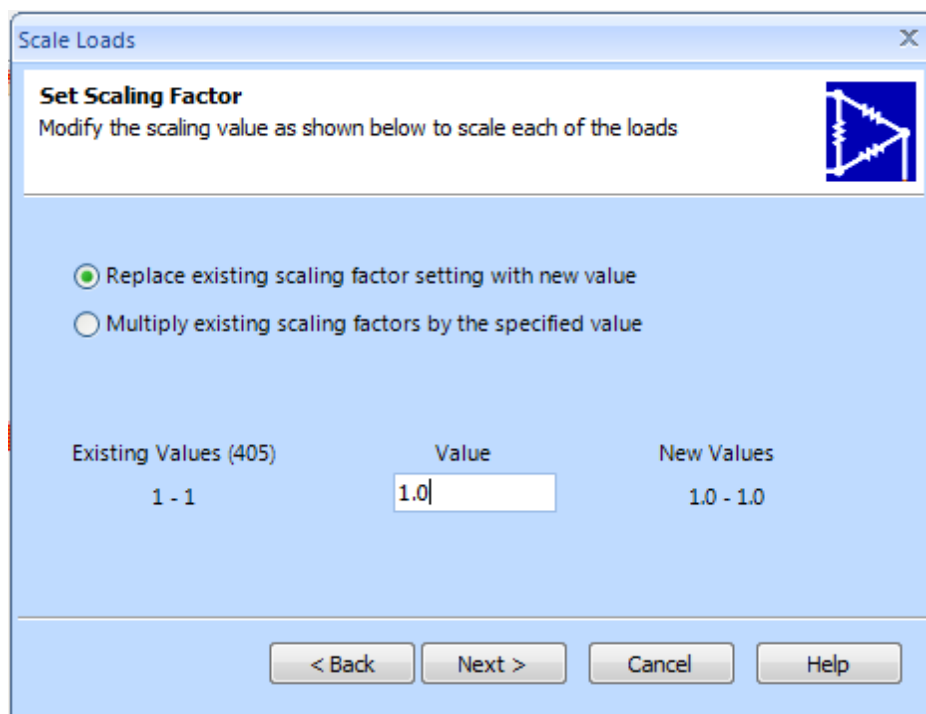

The image shows a software dialog box titled "Scale Loads". It has a close button (X) in the top right corner. Below the title bar, there is a section titled "Set Scaling Factor" with a sub-instruction: "Modify the scaling value as shown below to scale each of the loads". To the right of this text is a small icon of a circuit component. Below this section are two radio buttons: "Replace existing scaling factor setting with new value" (which is selected) and "Multiply existing scaling factors by the specified value". At the bottom of the dialog is a table with three columns: "Existing Values (405)", "Value", and "New Values". The first row of the table shows "1 - 1" under Existing Values, "1.0" in a text input field under Value, and "1.0 - 1.0" under New Values. At the very bottom of the dialog are four buttons: "< Back", "Next >", "Cancel", and "Help".

Existing Values (405)	Value	New Values
1 - 1	1.0	1.0 - 1.0

Set Scaling Factor Step

This step is only shown if **Change Scaling Factor** is chosen in the previous step.

Replace existing scaling factor


This lets you set the new factor. All affected loads will be set to the specified value regardless of their current value.

Multiply existing scaling factor

This option takes the existing values for scaling factors and modifies them by multiplying by the specified value. The **Existing Values** and **New Values** show the effects on the load scaling factors of the loads to be scaled.

Value

This value is either the new value of the load scaling factor or the amount by which to multiply the load scaling factor, depending on which option is chosen.

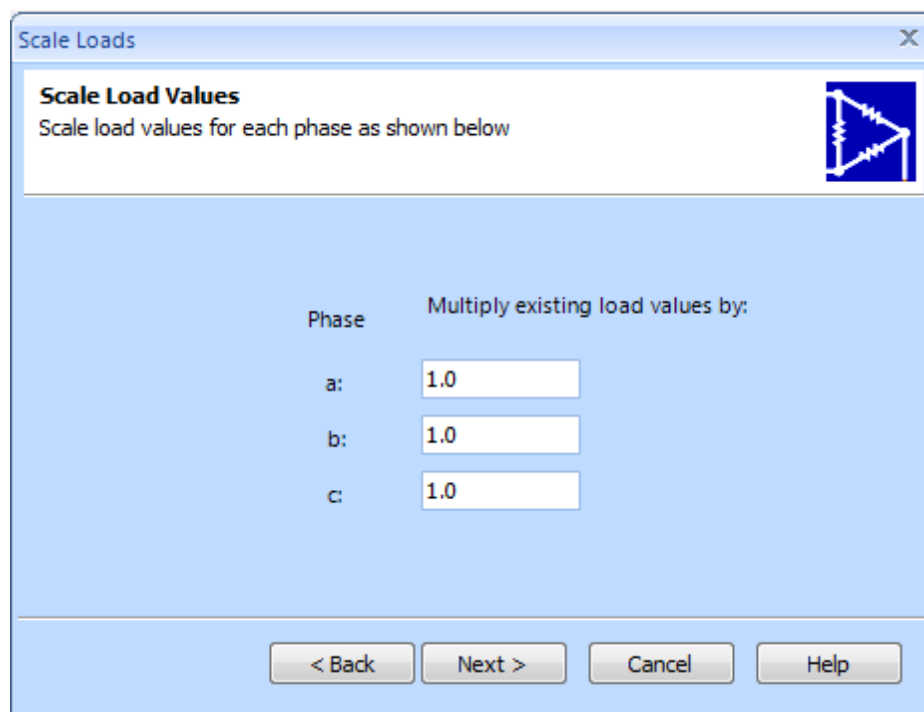

The image shows a software dialog box titled "Scale Loads". It has a close button (X) in the top right corner. Below the title bar, there is a section titled "Scale Load Values" with a subtitle "Scale load values for each phase as shown below". To the right of this text is a small icon of a three-phase electrical load. The main area of the dialog is light blue and contains a table with two columns: "Phase" and "Multiply existing load values by:". There are three rows for phases a, b, and c, each with a text input field containing the value "1.0". At the bottom of the dialog, there are four buttons: "< Back", "Next >", "Cancel", and "Help".


Phase	Multiply existing load values by:
a:	1.0
b:	1.0
c:	1.0

Scale Load Values Step

This step is only shown if Change Load Values is selected in the Type of Scaling step, or for simple loads which do not contain a scaling factor.

Multiply existing load values by

Use these three fields to specify how much to scale each phase of the existing loads by.

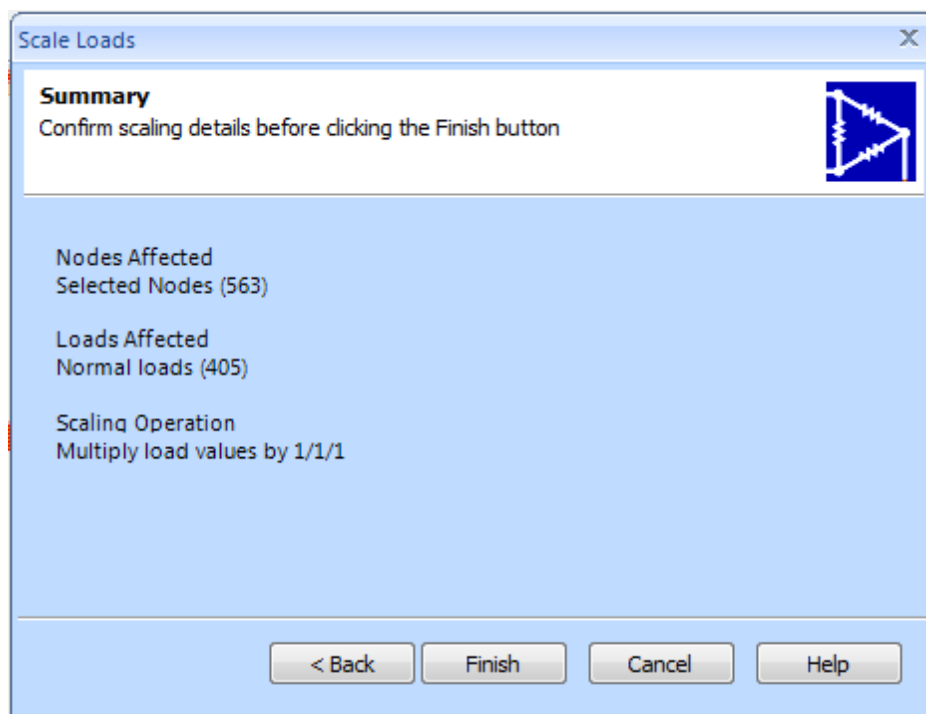

Summary Step

The summary step shows the choices selected in each of the previous steps and the number of loads which will be affected. Please confirm that you are scaling the desired loads by the desired amount as you cannot Undo this operation.

4.4.4.19 Edit SCADA Measurement

Description

This dialogue is used to enter and edit measurement data which is used for the [SCADA load flow analysis](#). This consists of an XML file which contains a set of coincident SCADA measurement values.

You can create and manage multiple XML files which represent measurements taken under different situations. For example, you could create different sets of data for measurements taken at different times, or different sets for different system configurations.

Appearance

© 2019 Essex Energy

Measurement Node:

47299 (TX10056) Selected Nodes... Find Node...

Units:

Amps

Amps

R 5

W 4

B 6

OK Cancel

Measurement Data Controls

Data File

Use this box to enter the path to the file containing the set of measurements you want to store. You will be prompted for this file when you run a SCADA load flow. Use the "... " button to search for a file. By default this file will be the last file where SCADA information was edited or for which a SCADA load flow was run.

Load Data

After selecting a file name, click this button to load the values into the Measurement Data list.

Measurement Data

This list shows all the measurement items currently defined.

Add, Edit, Delete

Use these buttons to add, edit or delete items from the Measurement Data list. Adding or editing items will bring up the Measurement Item dialogue as shown.

Clear All

Clear all defined data

Save Data

Use this button to save data before exiting the dialogue.

Done

Close the dialogue. If you have not yet saved any changes, you will be warned before leaving the dialogue.

Measurement Item Controls

Measurement Node

Choose the node ID for the system location where the measurement has been taken.

Selected Nodes

This button brings up a list of currently selected nodes. You can select a set of nodes (e.g. the breakers at a substation) before editing your data. This list makes it faster to choose the nodes you want.

Find Node

This brings up the standard [Find Node](#) dialogue, so you can search for nodes by ID, name, list or from a map.

Units

Choose the measurement units. You can choose from Amps, kW and kVA, kVA, or kW and power factor.

A, B, C

Enter the actual measurement values at the selected location.


4.4.4.20 Change References Dialogue

Description

This tool lets you make group changes to all the [reference data](#) items associated with selected nodes and/or lines. You can use it to do a number of common tasks like [reconductoring](#) a set of lines, or changing the load [categories](#) for a group of selected nodes.

This tool is used by selecting a group of [nodes](#) and/or [lines](#) using any of the selection tools and then choosing [Analysis > References > Change References](#)

Appearance

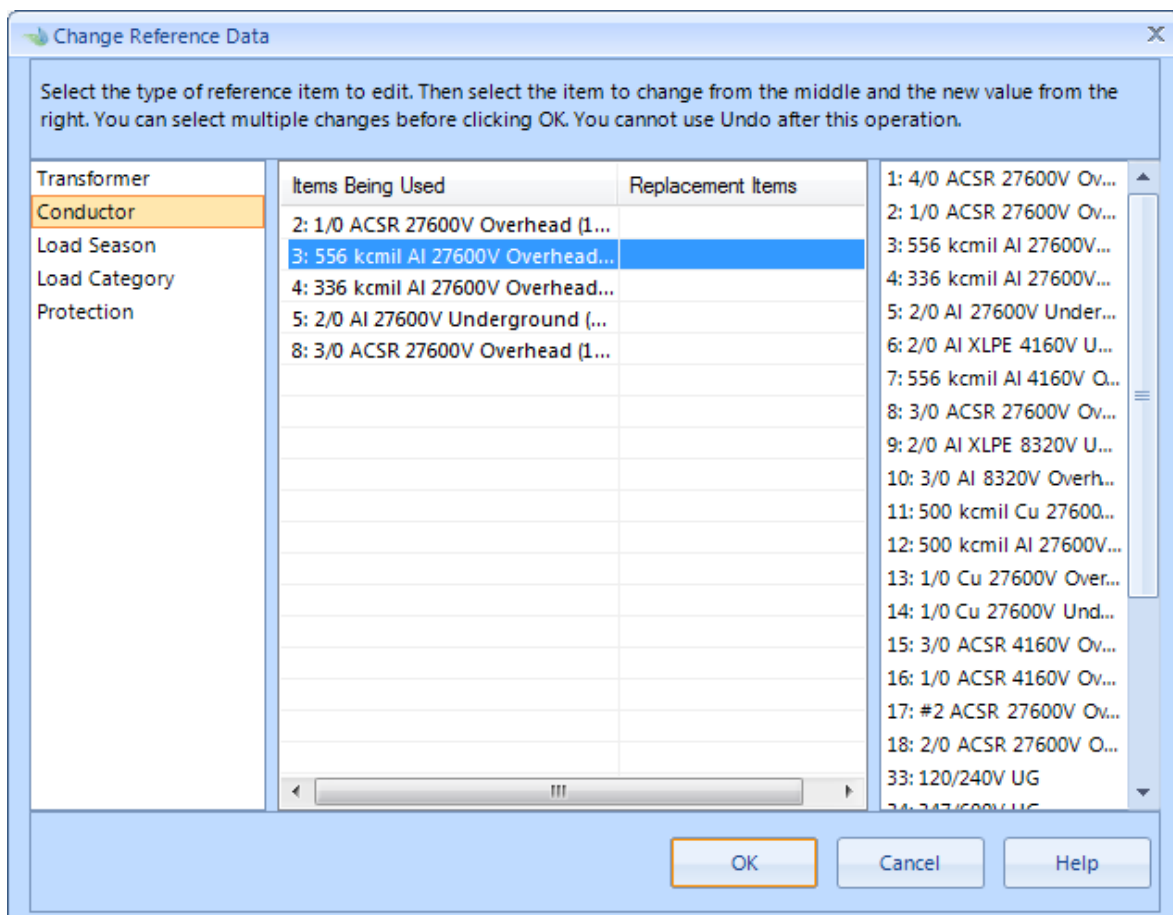

Controls

Reference List

This list shows all possible types of reference data that you can change through this tool. Clicking on a different type of data updates the other lists as described below.

Items Being Used, Replacement Items List

This list shows all [reference data](#) items of the selected type which were found in the currently selected nodes and lines. If you select an item in this list and then choose an item from available items, the Replacement Items part of the list is updated to show the change. You can select replacements for any number of reference data items and for any type of reference data.

Available Items List

This list shows all reference data defined in the current DESS [system](#) of the specified type.

OK

When you click OK, the currently selected nodes and/or lines will be updated to reflect the replacement choices you made in the center list. Due to the nature of these changes you cannot reverse this change using the **Undo** command.

4.4.4.21 Create References Dialogue

Description

This tool lets you make [reference data](#) items for overhead [lines](#) and [transformers](#).

This tool is used by selecting a group of [nodes](#) and/or [lines](#) using any of the selection tools and then choosing [Analysis](#) > [References](#) > [Change References](#)

Appearance

The 'Create References' dialog box is shown with the 'Overhead Lines' tab selected. It contains the following controls:

- groupBox1:** Radio buttons for 'Single Phase', 'Two Phase', and 'Three Phase' (selected).
- groupBox2:** Radio buttons for 'Flat' (selected), 'Vertical', and 'Triangular'. A checkbox for 'Neutral Cable' is checked.
- Cable Spacing:** Input field with value '1' and unit 'm'.
- Height Above Ground:** Input field with value '6' and unit 'm'.
- Phasing Conductor:** Dropdown menu showing '336.4 kcmil 26/7 ACSR'.
- Neutral Conductor:** Dropdown menu showing '4/0 6/1 ACSR'.
- 3 Phase Voltage:** Input field with value '27600' and unit 'V'.
- Buttons:** 'Add To List' and 'Remove From List'.
- Table:** A table with columns: Arrangement, Spacing, Height, Neutral, Phase, and PhaseConductor. The first row is highlighted in blue.

Arrangement	Spacing	Height	Neutral	Phase	PhaseConductor
Flat	1	6	True	3	336.4 kcmil 26/7 ACSR

Controls - Overhead Lines

Phase List

This list shows all possible phase combinations. Select the appropriate number of phases for the bundle.

Orientation

This list shows all position combinations for the cables. Selecting the Neutral Cable box will determine if there is a neutral line in the bundle.

Cable Spacing

This is the distance between each cable. In triangular orientation it is the distance between adjacent vertices.

Height Above Ground

This determines the height from the ground to the lowest cable in the bundle.

Phasing Conductor

This list shows all reference data defined for cables. It will determine the conductor for the phase cables.

Neutral Conductor

This list shows all reference data defined for cables. It will determine the conductor for the neutral cable, which can be different for reduced neutral returns.

3 Phase Voltage

Determines the three phase voltage of the reference list.

Add to List

This will add the current configuration to the list of references to be created.

Remove from List

This will remove the currently selected item from the list of references to be created.

OK

When you click OK, the list of references will be created.

Controls - Transformers

This list shows all possible combinations. Select the appropriate combination for the transformer.

This list shows all mounting types defined in the model.

This defines the low side three phase voltage for the transformer.

This defines the high side three phase voltage for the transformer.

This is the size of the transformer in kVA.

© 2019 Essex Energy

This will add the current configuration to the list of references to be created.

Remove Item

This will remove the currently selected item from the list of references to be created.


OK

When you click OK, the list of references will be created.

4.4.4.22 Import References Dialogue**Description**

This tool lets you import [reference data items](#) (such as [transformers](#), [conductors](#), etc.) and [node](#) and [line styles](#) from another [system](#) so you don't have to recreate this data in the current system. This tool is available from [Analysis](#) > References > Import References menu. Use this dialogue by 1) selecting the file you want to import from (either a standard file or a user-selected file) and then 2) choosing the items you want to import.

Appearance

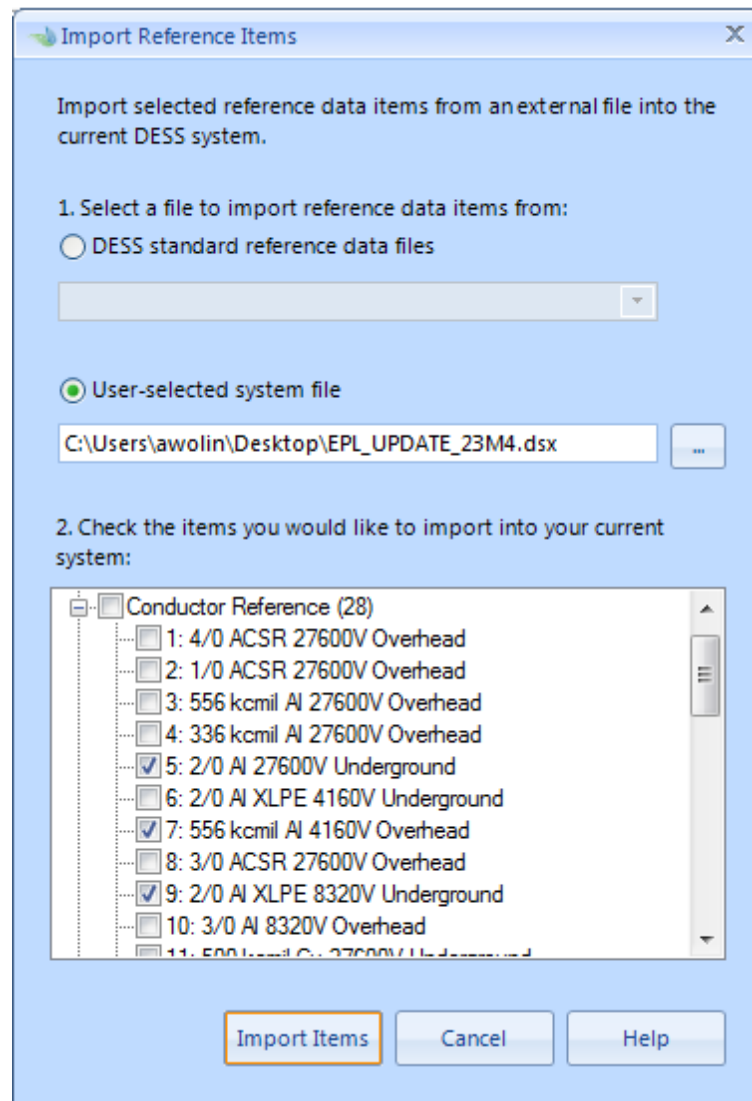

Controls

DESS standard reference data files Radio Button

Select this radio button if you want to select data from the standard data files provided when you install DESS. Typically these contain standard protection data.

Standard Files Drop Down List

If you have selected to import from the **standard reference data files** then you can choose the file you want from this list.

User-selected system file Radio Button

Select this button if you want to import items from other DESS systems which can be located anywhere on your computer. Following this selection click the **Path Button** to choose the file.

Path Button

Click on this button to bring up an Open File dialogue where you can select the file to import reference

data items from.

Reference Data Item Tree View

Once you have selected a file, this tree shows a list of all reference data items contained in the file. Click on items to place check marks next to the items you want to import into the current system. Clicking on one of the root items (for a particular type of reference) will check all items of that type.

Import Items Button

Click this button to accept the selections and import the check data. Due to the nature of the changes this operation cannot be reversed using **Undo**. Note that if you import an item which is identical to an item already in your current system (same name) then you will be asked whether to skip it or whether to create a duplicate with the same name, but with a new ID.

4.4.4.23 Organize References Dialogue

Description

This dialogue is used for organizing reference order. It is accessed from the [Analysis](#) tab, under References > Organize References.

Appearance

Set Reference Item Order

Reference Type: Conductor

Use the Sort button and arrow buttons to reorder the items in the list, and then click Renumber to save and renumber the items in the order shown.

Sort...

ID	Description	Material	Nomina...	Cross S...	Overhe...
1	4/0 ACSR 27600V Overhead	ACSR	27600	107.2	True
2	1/0 ACSR 27600V Overhead	ACSR	27600	53.5	True
3	556 kcmil AI 27600V Overh...	Alumin...	27600	282	True
4	336 kcmil AI 27600V Overh...	Alumin...	27600	170.4	True
5	2/0 AI 27600V Underground	Alumin...	27600	67.4	False
6	2/0 AI XLPE 4160V Undergr...	Alumin...	4160	67.4	False
7	556 kcmil AI 4160V Overhead	Alumin...	4160	282	True
8	3/0 ACSR 27600V Overhead	ACSR	27600	85	True
9	2/0 AI XLPE 8320V Undergr...	Alumin...	8320	67.4	False
10	3/0 AI 8320V Overhead	Alumin...	8320	85	True
11	500 kcmil Cu 27600V Under...	Copper	27600	258.3	False
12	500 kcmil AI 27600V Under...	Alumin...	27600	258.3	False
13	1/0 Cu 27600V Overhead	Copper	27600	53.5	True
14	1/0 Cu 27600V Underground	Copper	27600	53.4	False
15	3/0 ACSR 4160V Overhead	ACSR	4160	85	True
16	1/0 ACSR 4160V Overhead	ACSR	4160	53.5	True
17	#2 ACSR 27600V Overhead	ACSR	27600	33.6	True
18	2/0 ACSR 27600V Overhead	ACSR	27600	67.4	True
19	120/240V UG	Unkno...	416	0	False
20	347/600V UG	Unkno...	600	0	False

Renumber Cancel


Controls

Reference Type

The type of reference which will be organized.

Sort

Sort gives you the option of having the program order the references for you. You can choose what criteria to organize by, and then whether it should be ascending or descending. Sort fields are evaluated in order, from first to fourth.

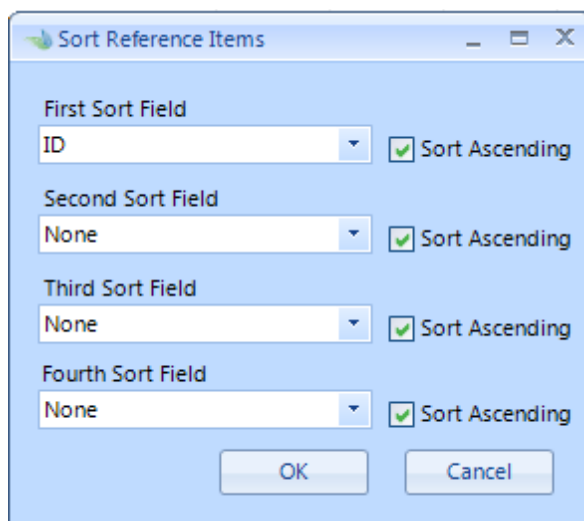

Manually Changing the Order

To manually choose which order references should be in, select the reference you wish to move and then use the up/down buttons to the right of the window.

Renumber

After changing the order of the references, they will keep their original reference IDs. To re-number the references to reflect the new sort order click Renumber.


4.4.4.24 Simplify Data Dialogue

Description

This tool will remove excess points and lines from the model.

This tool is used by choosing [Analysis](#) > Data > Simplify Data

Appearance

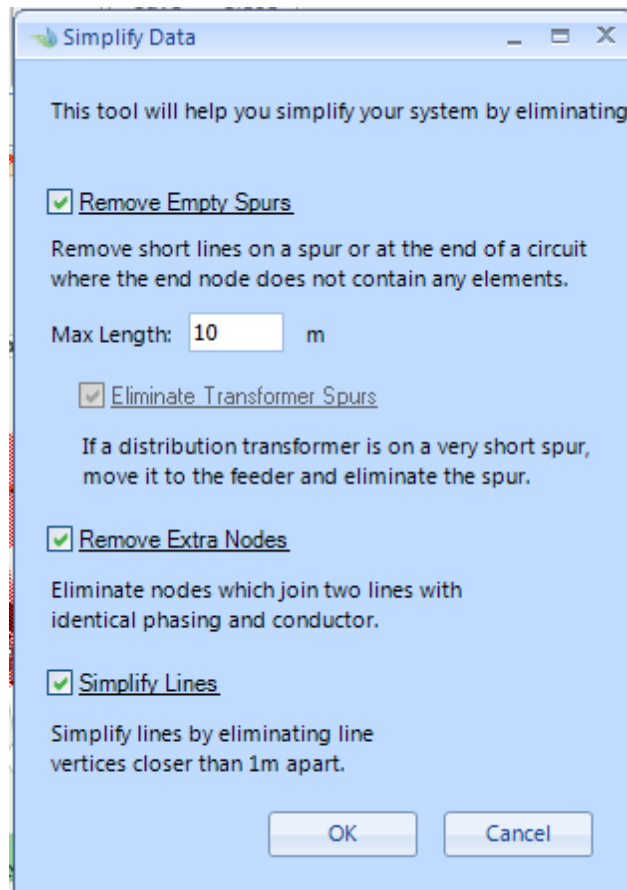

Controls

Remove Empty Spurs

This will allow you to choose whether empty lines shorter than the defined length should be deleted from the system.

Eliminate Transformer Spurs

This will allow you to choose whether a transformer may be moved to the next closest line if it is the only element on a spur that would otherwise be eliminated.

Remove Extra Nodes

This will allow you to choose whether nodes which join two lines with identical phasing and conductors can be eliminated. Note that if there is a bend or curve in the line at the eliminated node, the shape of the line will be preserved.

Simplify Lines

This will allow you to choose whether line vertices should be removed from the system if the vertices are closer than 1m.

OK

When you click OK, the selected actions will be carried out. Note that this cannot be undone using the UNDO command.


4.4.4.25 Set Line Properties Dialogue

Description

This tool will allow you to update defined conductor types to match adjacent lines.

This tool is used by choosing [Analysis](#) > Data > Reset Line Properties.

Appearance

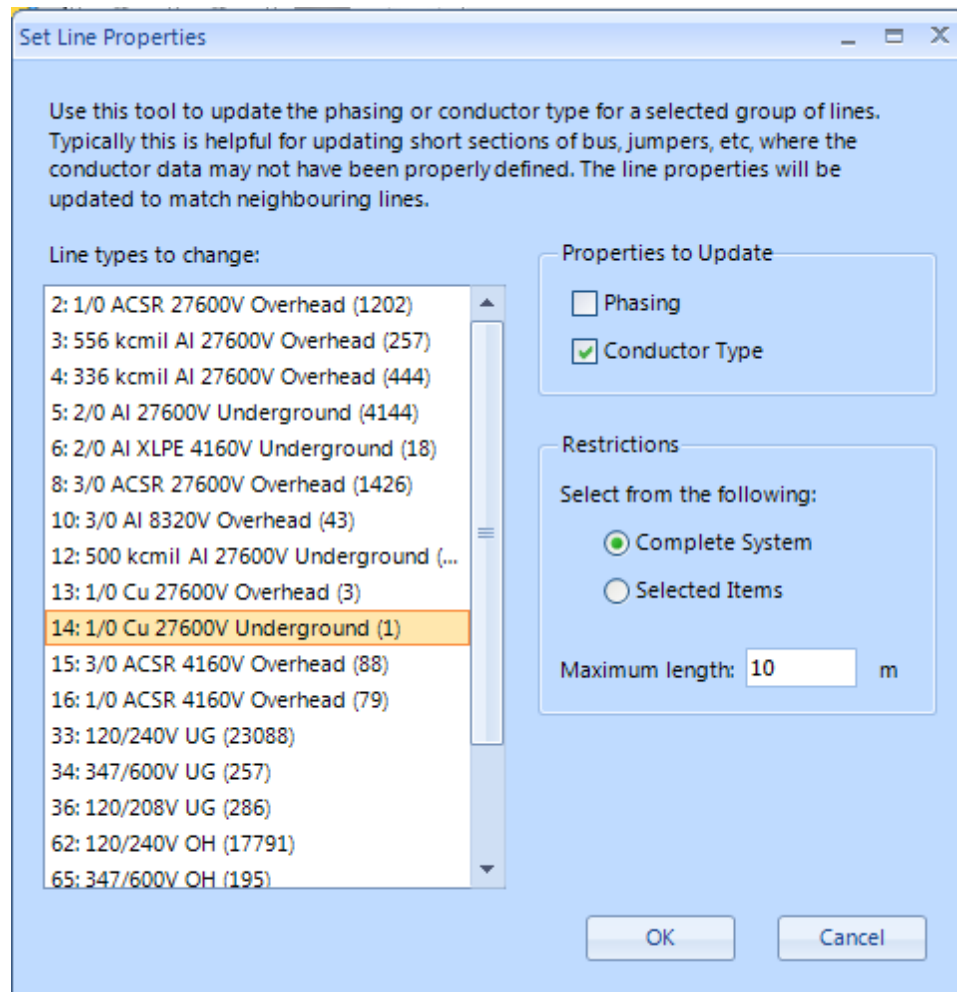

Controls

Line Types to Change

This list will show all line types in the system or from the selected line items. Choosing a line type will determine which type of line will change.

Properties to Update

This will allow you to choose whether the conductor type, phasing, or both should be changed in the .

Restrictions

This will allow you to choose the extent of the updates, whether on the complete system or on a selection. It will also allow you to determine the maximum length of conductor to be updated.


OK

When you click OK, the lines which meet the criteria will be updated to match adjacent lines. Note that this cannot be undone using the UNDO command.

4.4.4.26 Copy Source and Power Transformer Info Dialogue**Description**

This tool will allow you to copy source and power transformer data from another model.

This tool is used by choosing [Analysis](#) > Data > [Copy Substation Info](#).

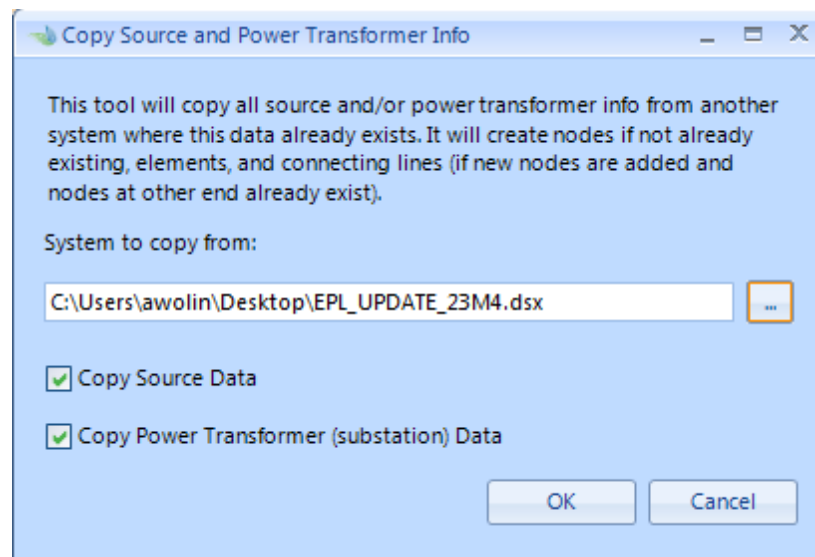Appearance**Controls****Data File**

Use this box to enter the path to the file containing the source and power transformer data you want to copy. Use the "..." button to search for a file.

Copy

This will allow you to choose whether sources, power transformers, or both will be copied from the selected file into the current model.

OK


When you click OK, the data selected will be copied and matched into the current model. Note that this cannot be undone using the UNDO command.

4.4.4.27 Copy Conductor Data from Similar System Info Dialogue**Description**

This tool will allow you to copy conductor data from another model for currently selected lines.

This tool is used by choosing [Analysis](#) > Data > [Copy Conductor Info](#).

Appearance

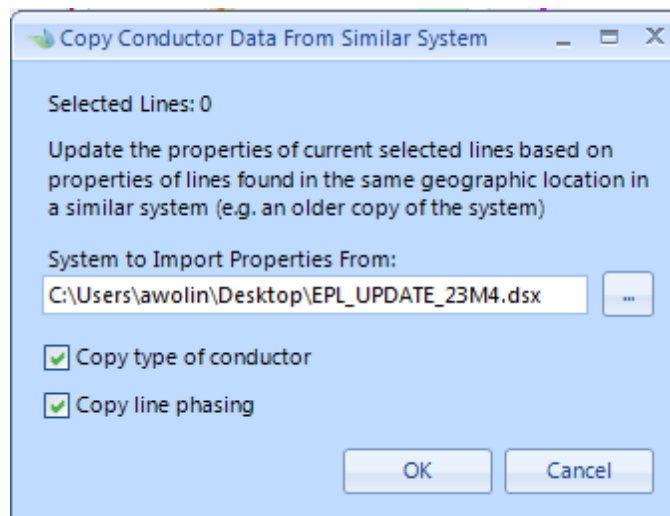

Controls

Data File

Use this box to enter the path to the file containing the conductor data you want to copy. Use the "..." button to search for a file.

Copy

This will allow you to choose whether type of conductor, phasing, or both will be copied from the selected file to the currently selected lines in the open model.

OK

When you click OK, the data selected will be copied and matched into the current model. Note that this cannot be undone using the UNDO command.


4.4.4.28 Create Node Data Dialogue

Description

This tool will allow you to create node data in the current model using an external database. The external database must be in Access, Excel, CSV, or DBase IV format.

This tool is used by choosing [Analysis](#) > Data > Create Node Data.

Appearance

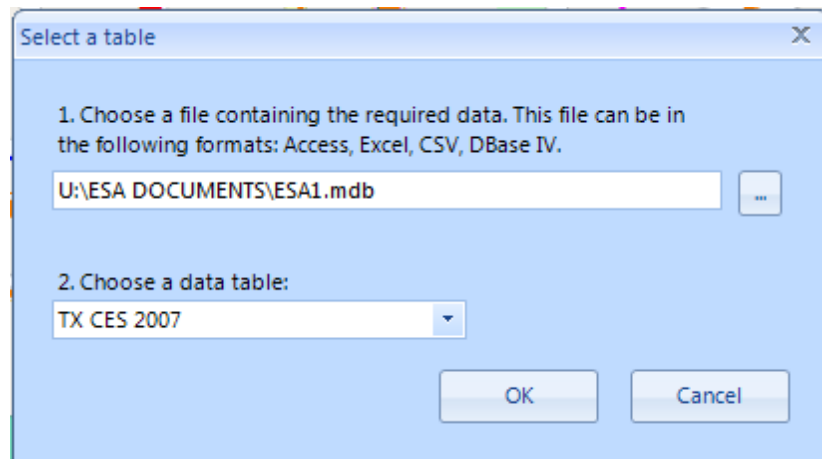

Controls

Data File

Use this box to enter the path to the file containing the node data you want to copy. Use the "..." button to search for a file.

Choose Table

This will allow you to choose which data table you would like to create node data from.

OK


When you click OK, the data table selected will be copied and matched into the current model. Note that this cannot be undone using the UNDO command.

4.4.4.29 Save Result Dialogue

Description

This dialogue helps you specify the specific data and format for outputting the results of an analysis. It is accessed from [Analysis](#) > [Save Result](#).

Appearance

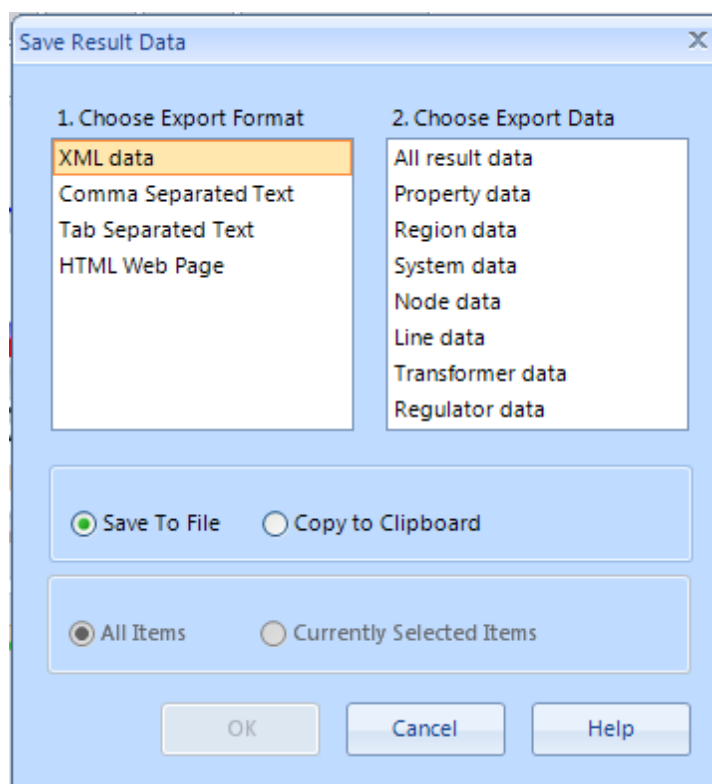

Controls

Choose Export Format

You can choose to export the results data in a number of formats:

XML data - XML is a structured text format which is often used for interchange between different types of software or web applications.

Comma Separated Text (CSV) - this is a text format where fields are separated by commas. This format can be imported into most databases and some spreadsheets.

Tab Separated Text - this is a text format where fields are separated by TAB values. This format is good for importing into spreadsheets such as MS Excel, either by file or by pasting from the Clipboard.

HTML Web Page - this format outputs the data as an HTML table which can be viewed using a standard web browser.

Here are some common situations and suggested methods for saving:

Open in a database - save the result data to a CSV file and then import into the database

Open in a spreadsheet - copy the data to the clipboard as Tab Separated Text and paste into spreadsheet

View - save as an HTML file and drag and drop onto your web browser

Choose Export Data

You must choose which data to export. Every type of [analysis](#) will produce different sets of data. See the details for the individual analyses for more details.

Save to File

Save the exported data to a file. You will be prompted for the file name when you click the OK button.

Copy to Clipboard

The data will be copied to the Windows Clipboard. You can then Paste the data into another application. Different applications require information to be copied to the clipboard in different formats so you may have to experiment with the different formats to find which works for your specific needs.

All / Currently Selected

If the data you are saving includes is for node or line data you can choose to save a subset of the result data defined by the currently selected [nodes](#) or [lines](#). This lets you only export data for a specific area (e.g. a feeder or subdivision). These options are disabled for other types of data (not nodes or lines)

4.4.5 Other Dialogues

Details for entering data and setting properties for a number of general dialogs in DESS is available as follows:

Globe Dialogues

- [Options dialogue](#)

File Dialogues

- [System Properties dialogue](#)
- [Set View dialogue](#)
- [Save Map dialogue](#)

Docking Window Dialogues

- [Electrical Layer dialogue](#)
- [Background Layer dialogue](#)
- [Node Visibility dialogue](#)

Miscellaneous Dialogues


- [Node dialogue](#)
- [Line dialogue](#)

4.4.5.1 Options Dialogue

Description

This dialogue lets the user set options for using DESS. These options are not specific to a particular system or set of data. This dialogue is accessed from the [Globe > Options](#) menu.

Appearance

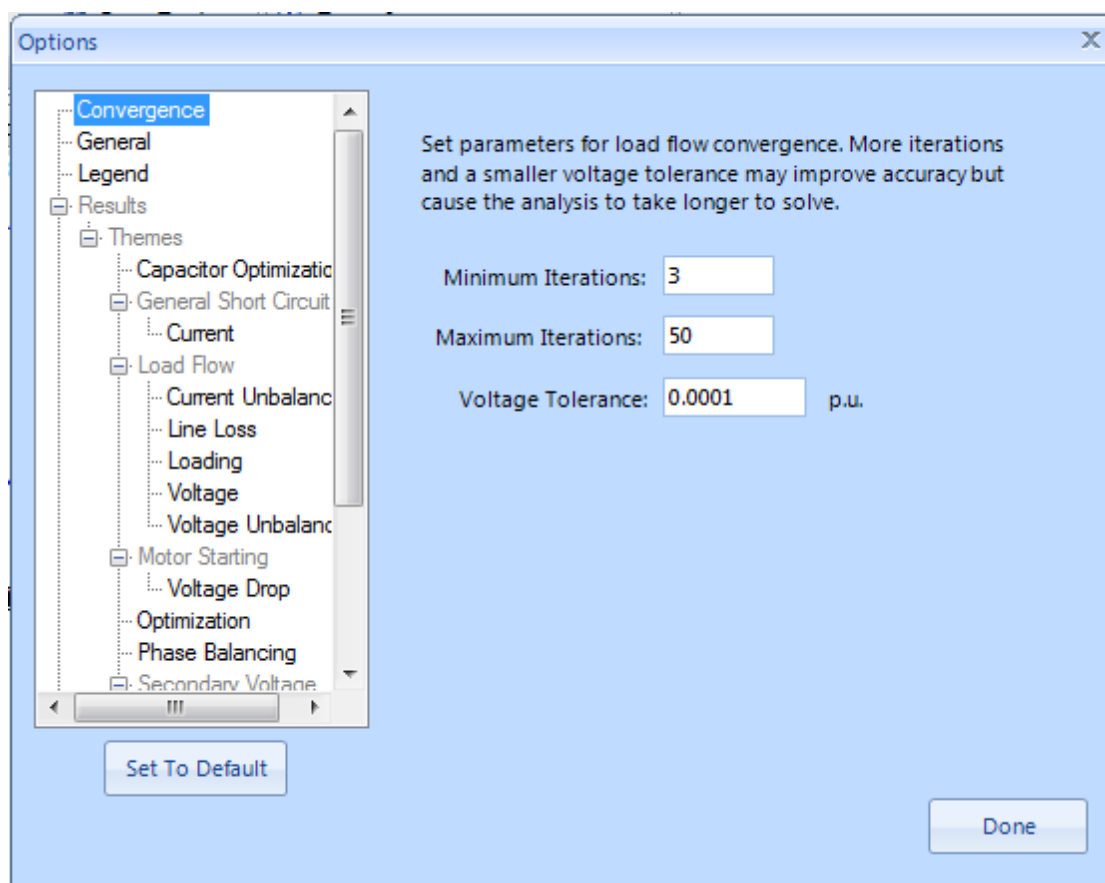

Controls

Option Page Tree

The tree view shows all the different option pages for DESS arranged according to function. Click on a page to show the specific options you can set on the right side of the dialogue. Headings that don't have associated settings are shown in gray.

Set To Default

Set the options shown on the current options page back to their default values.

Options


The right side of the dialogue shows a specific set of options. The specific controls will vary according to the type of options being set.


4.4.5.2 System Properties Dialogue

Description

This dialogue is used for editing basic system properties and viewing statistics for the system. Use the [File > System Properties](#) command to access it.

Appearance

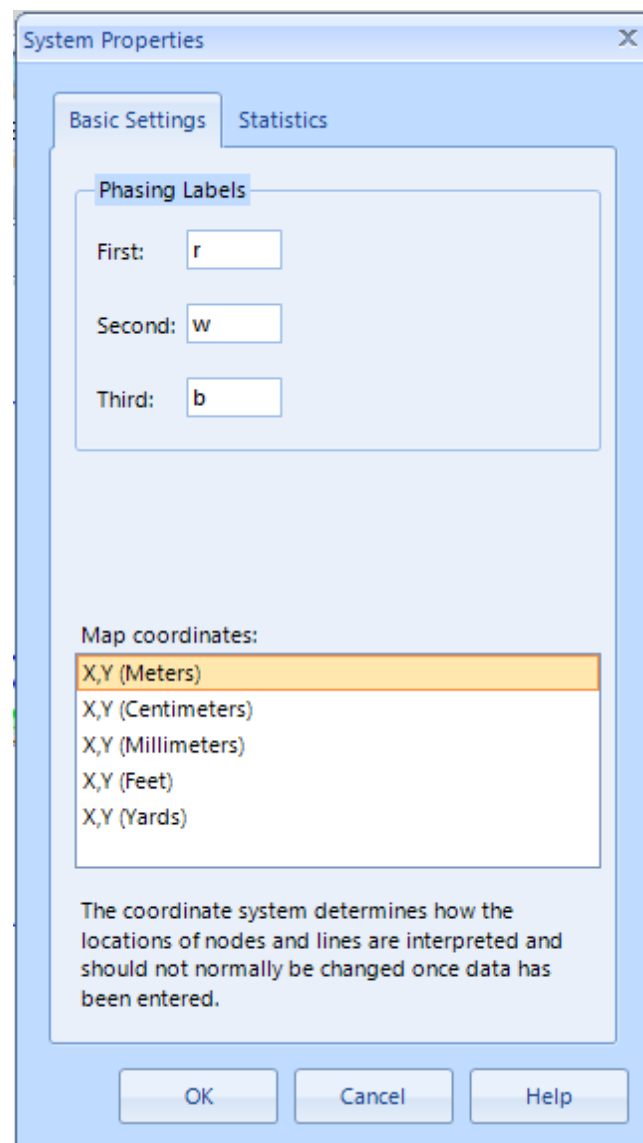

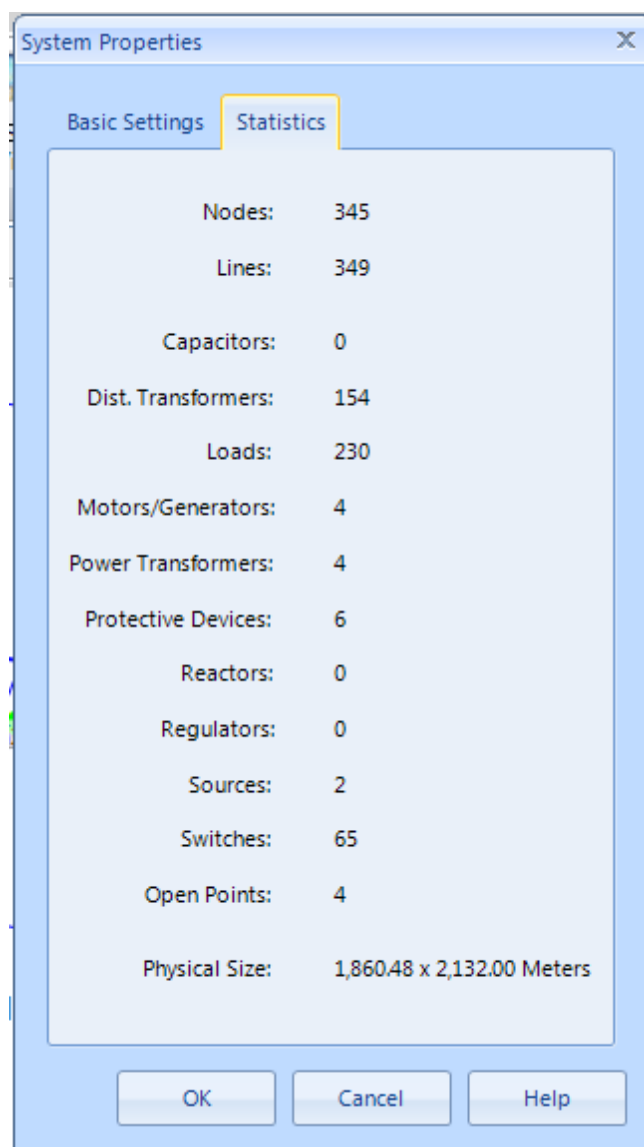

Controls

Phasing Labels

The phasing labels determine how the 3 different phases in a 3-phase system are displayed throughout DESS. For example, many utilities call the phases rwb (for red, white, blue), or ryb (for red, yellow, blue).

Map coordinates

The map coordinate determines how to interpret map coordinates used in DESS electrical layers and in background maps. Most coordinate systems use either latitude, longitude or a normalized X,Y grid using either Meters, Feet or Yards as units. For example, if your maps use UTM NAD 27 (Universal Transverse Mercator, North American Datum 1927), then you are using a normalized X,Y grid measured in meters.

The map coordinate is not used to set the display unit for distances in DESS. It is only used to interpret

the data.

Statistics


The statistics pane of the System Properties show the number of items of each type in the electrical system. It includes all electrical layers. The Physical Size displays the maximum extent of the electrical layers (not the background layers).

4.4.5.3 Set View Dialogue

Description

This dialogue lets you reset the map view to a specific center point and zoom. You can also use the other navigation tools, such as [Zoom In](#), [Zoom Out](#), [Drag and scrolling with the mouse wheel](#) to do this. This dialogue is accessed from [File > View > Set View](#).

Appearance

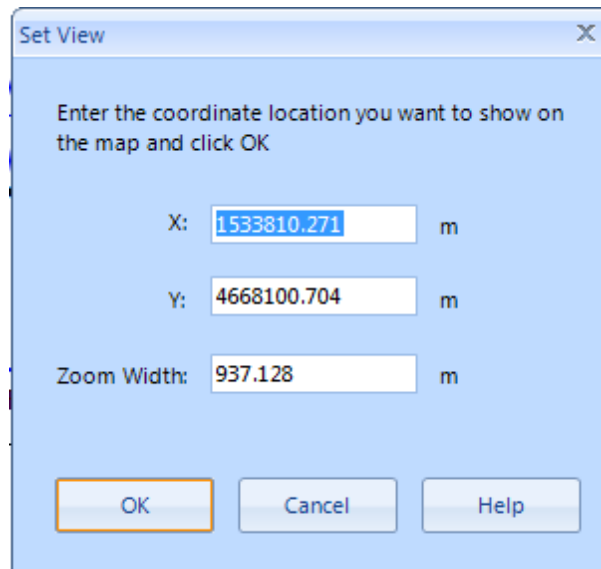The image shows a 'Set View' dialog box with a light blue background and a title bar with a close button (X). The dialog contains the instruction 'Enter the coordinate location you want to show on the map and click OK'. There are three input fields: 'X:' with the value '1533810.271', 'Y:' with the value '4668100.704', and 'Zoom Width:' with the value '937.128'. Each field has a unit 'm' to its right. At the bottom, there are three buttons: 'OK', 'Cancel', and 'Help'. The 'OK' button is highlighted with an orange border.

Controls

X

The x position (horizontal position or longitude) of the location you want to center the map on.

Y

The y position (vertical position or latitude) of the location you want to center the map on.

Zoom Width


The width of the map section you want to display in the map window. This will be in units of map width as set in the [System Properties](#) dialogue.

4.4.5.4 Save Map Dialogue

Description

This dialogue is used to save a picture of the map to a graphics file. You can control which part of the map is output, along with the size and format of the output file. It is accessed from the [File > Export > Save Map to File](#) command. The map can be saved in JPG, GIF, PNG, BMP and TIFF formats.

Appearance

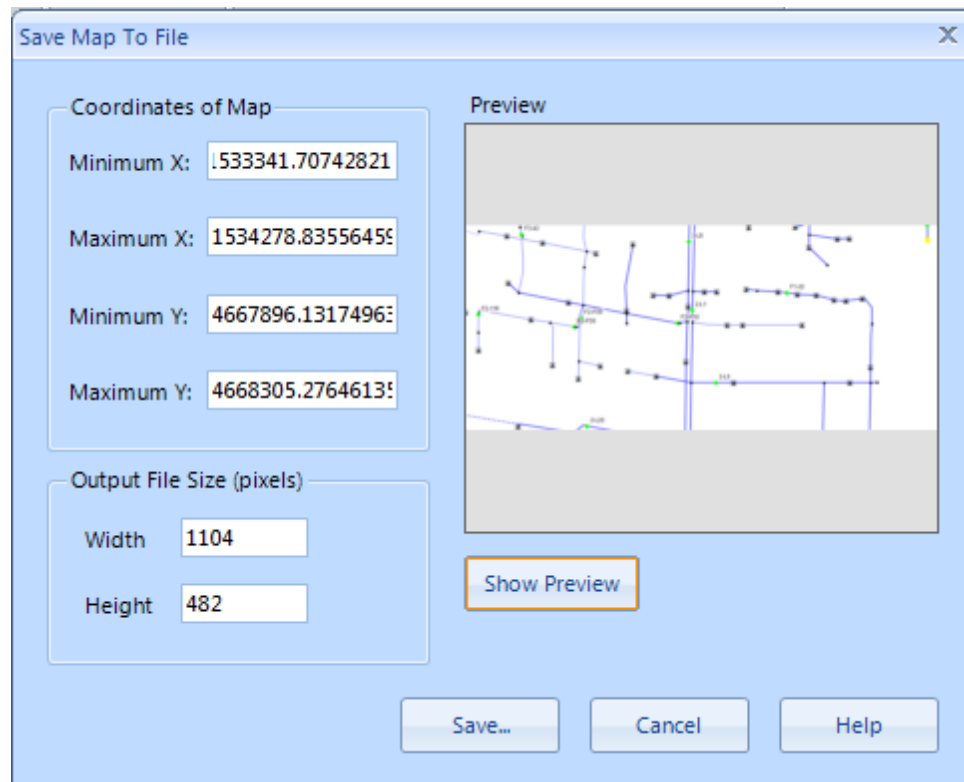

Controls

Coordinates of Map

By default the four coordinates display the current map view. However, you can modify these if you want to output a specific part of the map (e.g. if you want to create a series of map 'tiles').

Output File Size

You can determine the size of the output file. Note that the aspect ratio of the output is determined by the selected coordinates, so changing the width of the output will automatically change the height, and vice versa.

Note that symbols and line sizes are shown in constant pixel sizes. This means that the relative size of symbols will be smaller on large output sizes, and symbols will be relatively larger (and more crowded) on small output sizes.

Show Preview

This fills the preview window so you can confirm the shape and location of the output.

Save...

Click this button to choose the type and name of the output graphics file. Options include PNG, JPG, GIF, TIFF and BMP file formats. PNG is a good choice for screen output because it produces a small

size of file but is not lossy.

4.4.5.5 Electrical Layer Properties Dialogue

Description

This dialogue is used for editing [electrical layer](#) properties. To access this dialogue open the [layer docking window](#) and double-click on the layer you want to modify, or right click on the layer you want and click **Edit Layer Properties**.

Appearance

The screenshot shows the 'Electrical Layer Data' dialog box. It has a title bar with the text 'Electrical Layer Data' and a close button (X). The dialog contains the following fields and controls:

- ID:** A text field containing the value '3'.
- Layer Type:** A dropdown menu currently set to 'Three Wire System'.
- Nominal Voltage:** A text field containing '13800' followed by a unit 'V'.
- Meter Layer:** A checkbox that is currently unchecked.
- Appearance Section:** A group box containing:
 - Visibility:** A dropdown menu set to 'On'.
 - Minimum Zoom:** A text field with '0' and a unit 'm'.
 - Maximum Zoom:** A text field with '1E+09' and a unit 'm'.
 - Selectable:** A checked checkbox.
 - Show Labels:** A checked checkbox.
 - Transparency:** A slider control.
- Buttons:** At the bottom right, there are three buttons: 'OK', 'Cancel', and 'Help'.

Controls

ID

The ID of the layer. Automatically assigned.

Layer Type

The configuration of the network for this layer. Options are:

- Three Wire System - Represents a true 3-wire configuration with no neutral conductor and no grounding except at substations. Loads are typically applied phase-phase on this type of network.
- Four Wire System - Represents an electrical configuration with 3 phase conductors plus a neutral conductor, or a configuration with 3 phase conductors plus multi-point grounding.

Nominal Voltage

The nominal or name-plate voltage level of this layer. The actual supply voltage is set by the [source element](#).

Visibility

There are three settings for the visibility:

- On - layer is always visible
- Off - layer is never visible

- Zoom - layer is visible when the map zoom is within the desired range. This is sometimes called a de-clutter feature.

Choose Off or Zoom to prevent the display of layers you are not currently interested in viewing.

Minimum Zoom

The minimum width of the map display (in meters) at which you want the map to be displayed. Typically set to 0 so that the layer is always displayed when zoomed in closely. Visibility must be set to Zoom to use this setting.

Maximum Zoom

The maximum width of the map display (in meters) at which you want the map to be displayed. Typically set to a fraction of the entire system width so that the layer is not displayed when zoomed out to display everything.

Selectable

Check this box if you want to be able to select items on this layer with the mouse. It is turned on by default for electrical layers.

Transparency


You can choose from a continuous range from solid to invisible. Setting non-critical layers to be partially transparent can help make key information greatly stand out.

4.4.5.6 Background Layer Properties Dialogue

Description

This dialogue is used for editing [background layer](#) properties. To access this dialogue open the [layer docking window](#) and double-click on the layer you want to modify, or right click on the layer you want and click **Edit Layer Properties**.

Appearance

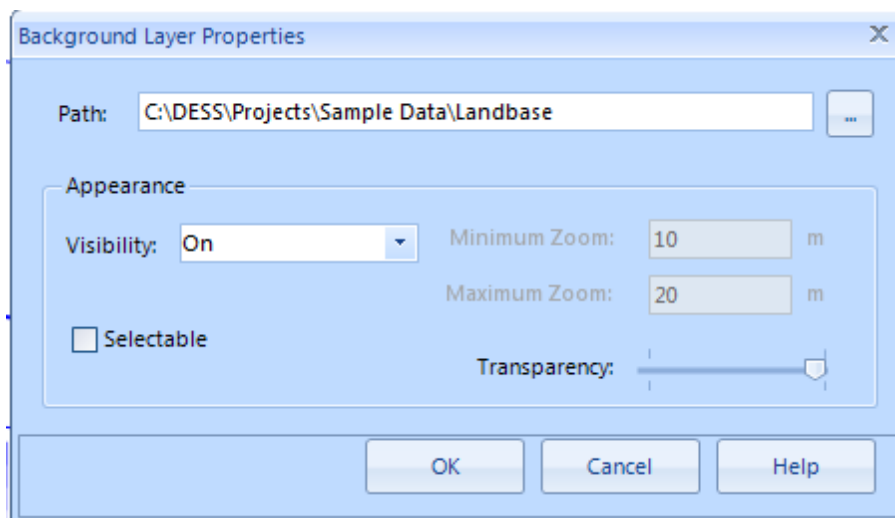

Controls

Path

The path of the background layer map file. Click on the ... button to browse for the map file. You can enter files in .TAB, .DXF, or .SHP format as [background layers](#).

Visibility

There are three settings for the visibility:

- On - layer is always visible
- Off - layer is never visible
- Zoom - layer is visible when the map zoom is within the desired range. This is sometimes called a de-clutter feature.

Choose Off or Zoom to prevent the display of layers you are not currently interested in viewing.

Minimum Zoom

The minimum width of the map display (in meters) at which you want the map to be displayed. Typically set to 0 so that the layer is always displayed when zoomed in closely. Visibility must be set to Zoom to use this setting.

Maximum Zoom

The maximum width of the map display (in meters) at which you want the map to be displayed. Typically set to a fraction of the entire system width so that the layer is not displayed when zoomed out to display everything.

Selectable

Check this box if you want to be able to select items on this layer with the mouse. It is turned off by default on background layers.


Transparency

You can choose from a continuous range from solid to invisible. Setting non-critical layers to be partially transparent can help make other key information stand out.

4.4.5.6.1 Open Street Map Background Layer

This dialogue is used for editing updating [Open Street Map](#) properties. To access this dialogue open the [layer docking window](#) and right click on Background Layers.

Appearance

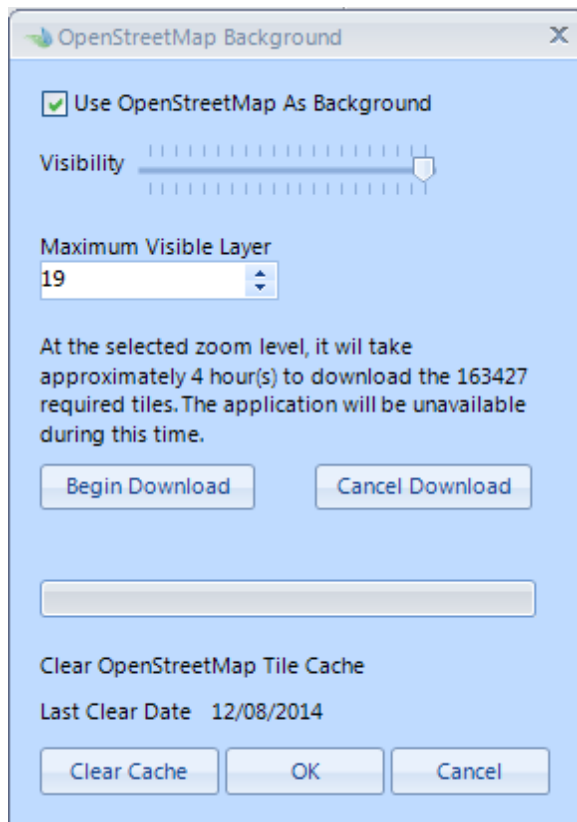

Controls

Use OpenStreetMap as Background

The check-box will enable the open street map background tiles.

Visibility

You can choose from a continuous range from solid to invisible. Setting non-critical layers to be partially transparent can help make other key information stand out.

Maximum Visible Layer

The maximum width of the map display (in meters) at which you want the map to be displayed. Typically set to a fraction of the entire system width so that the layer is not displayed when zoomed out to display everything.

Begin/Cancel Download

Storing the background tiles greatly aids in map loading times. Downloading the tiles will ensure that the map loads quickly as the program doesn't need to wait for a tile to download before showing it on the map.

Clear Cache


While using Open Street Maps, if the tiles have not been downloaded, the program will store tiles it had to fetch from the web service in a cache. It does this to prevent re-downloading the same things as well as speed up loading the map by using local tiles rather than fetching tiles each time.

4.4.5.7 Node Visibility Dialogue

Description

This dialogue lets you specify the visibility of specific nodes in the default theme (the appearance when no results or other custom themes are being displayed). It is accessed from the Node Types menu in the [Layer Docking Window](#).

Appearance

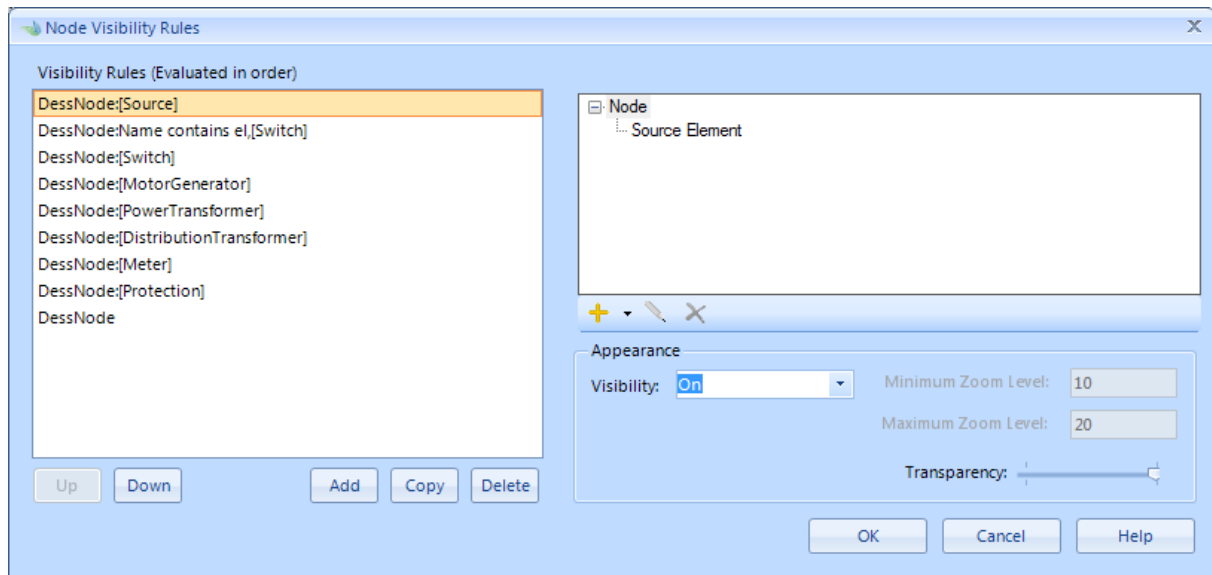

Controls

Node Style Rules

The currently defined set of node rules. The details of a rule is shown at right in the Properties Tree. Note that to change the appearance of the node, you must update the [node style rules](#).

Up Down

Use the Up and Down buttons to change the order of the rules. When a theme is evaluated for a specific node, the first matching rule will be selected and all others will be ignored. In the above situation, if a switch contains "el" in the name, it will be set to a different zoom level than other switches.

Add Delete

Use the Add button to add new empty rules, and the Delete button to remove unwanted rules.

Properties Tree

This tree view is the heart of the custom rule ability. Starting with a node object, you add conditions which you want to specify. You do this by right-clicking on the tree item. This will bring up a menu listing properties of the specified object, and in the case of nodes will show types of elements which you want to exist on a node. Click on a menu item to add that condition by setting the property in the [Edit Property dialogue](#).

Add Delete Edit

The add button brings up the pop-up menu as shown (same as right-clicking on an item in the tree). The Edit and Delete buttons let you edit or delete an existing selected item. Properties for the item are shown

in the [Edit Property dialogue](#).

Visibility

This will determine if the node will be always on, always off, or if it must be within a specific zoom level to be viewed. The visibility setting (on, off or zoom) can be changed by right-clicking on the rule in the docking window.

4.4.5.8 Node Dialogue

Description

This dialogue is used to edit data for nodes and is also used to add, edit and delete [elements](#) on a node. You can access this dialogue by double-clicking on a node on the DESS map.

Appearance

The Node Data dialog box is used to edit node information. It includes fields for ID, Layer, Name, and Description, as well as a table for Attached Elements and a table for Connected Lines.

Node Data

ID: 15824 Layer: 27.6 kV ☐ Include In SLD

Name: FS7H145

Description: NC

Attached Elements:

Type	Description	ID:
Switch Element	Closed	746
Protection Ele...	S&C SMU-20 20K (25, 34.5 kV)	310

Connected Lines:

Other Node	Conductor	Phasing	Length	ID:
TX7P429 (46489)	2/0 Al 27600V Unde...	r	116.2...	5607
10879	1/0 ACSR 27600V O...	r	13.532	2528

Controls

ID

The unique ID of the node. Automatically assigned.

Layer

The [electrical layer](#) this node is attached to. New nodes are automatically created on the [active layer](#).

Name

A primary description of this node. This field is often used to identify the node from the element data it contains (e.g. "TX456" if it contains a distribution transformer with this name, or "S81" if it contained a switch with this designation).

Description

Secondary descriptive information about the node. Common uses for this include a street address, or an external description of data this node was imported from (e.g. GIS point ID).

Attached Elements

This list shows which elements are attached to this node. Double-click on an item to edit it.

Add

Add a new element. Clicking this button brings up a menu showing all elements. Elements which cannot be added to this node (because other conflicting types of [element](#) already exist on the node) are grayed out.

Edit

Edits the element data for the currently selected element.

Delete

Deletes the currently selected element.

Connected Lines


Shows the lines attached to this node. This information can be helpful for diagnosing problems with phasing where the connectivity may not be working as desired.

4.4.5.9 Line Dialogue

Description

This dialogue is used to edit data for a [line](#) branch connected between two [nodes](#). You can access this data by double-clicking on a line on the map or from the [Node dialogue](#).

Appearance

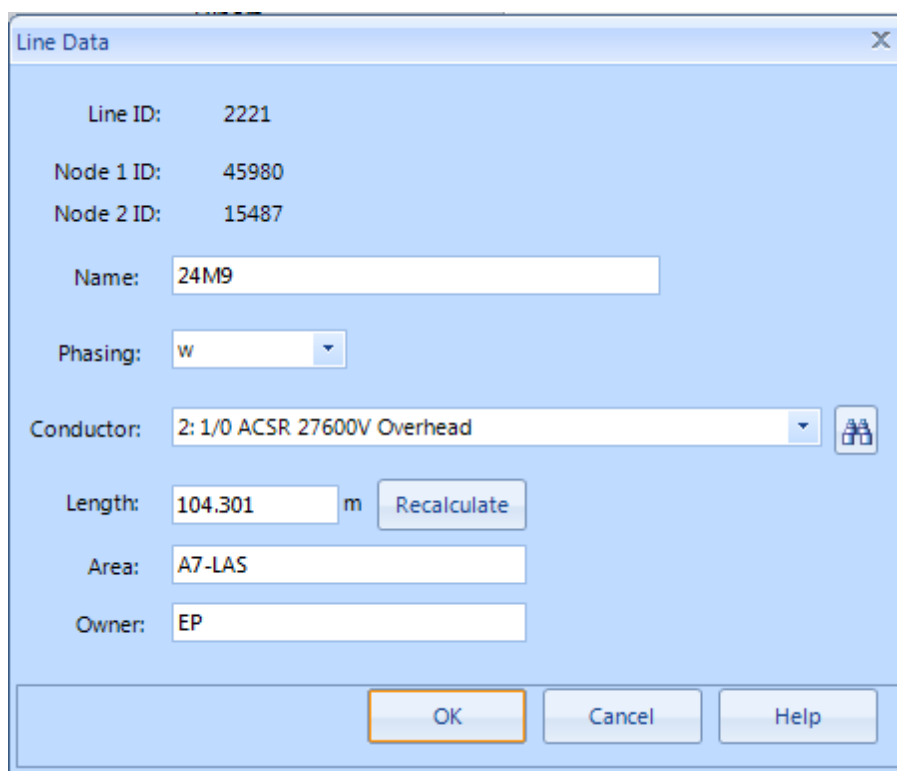A screenshot of a 'Line Data' dialog box. The dialog has a title bar with 'Line Data' and a close button. It contains several fields: 'Line ID' with value 2221, 'Node 1 ID' with value 45980, 'Node 2 ID' with value 15487, 'Name' with text '24M9', 'Phasing' with a dropdown menu showing 'W', 'Conductor' with a dropdown menu showing '2: 1/0 ACSR 27600V Overhead' and a small icon button to its right, 'Length' with a text box containing '104.301' and a unit 'm' next to it, and a 'Recalculate' button. Below these are 'Area' with text 'A7-LAS' and 'Owner' with text 'EP'. At the bottom are three buttons: 'OK', 'Cancel', and 'Help'.

Controls

ID

The unique ID of the line. This is assigned automatically.

Node 1

The node at the start of the line.

Node 2

The node at the end of the line. The order of Node 1 and Node 2 are unimportant for [connectivity](#).

Name

User assigned name of the branch if desired.

Phasing

The phasing of the line.

Conductor

The type of conductor for this section of line. Use the button to bring up the [Find Conductor dialogue](#). This makes it easier to find a specific type.

Length

The length of the line section. By default this is populated with the length as measured on the map. You can override it if you are creating a schematic (non-geographically accurate) map, or if you want to represent the extra length associated with lines that have a vertical component (i.e. up a pole).

Area

The name of the distribution area which the line is a part of.

Owner

The owner of the line, especially useful if the upstream distributor's assets need to be modeled.

Index

- . -

.DXF 36
.SHP 36
.TAB 36

- ' -

' 20

- A -

a synchronous generator 20
a synchronous motor 20
Active Layer 78
Add Power Transformer 110
an induction generator 20
an induction motor 20
Analysis 51
Annual Load Flow 52
Appearance 32, 85, 89
AVR 44

- B -

Background Layer 36, 77
Layer Docking Window 120
Properties Dialog 261

- C -

Capacitor 40
Dialog 125
Optimization 52, 114
Change Phasing
Dialog 178
Change References
Dialog 238
Characteristic Info Dialog 174
Close
Result 108
System 108

Concepts 20
Conductor 48
Data Dialog 151
Connecting Layers 83
Connectivity 30
Contact 18
Create Loads
Dialog 228
Creating a System 14
Creating Elements 75, 83
Creating Layers 14, 77
Cubicles 47
Custom Query 187
Custom Selection 61
Custom Trace
Dialog 186

- D -

Decluttering 38
Defintions 20
Delete 110
Layers 77
Lines 72
Nodes 72
DESS 10
DESS 6
Whats New 17
Why Use 10
DESS 7 9
Dialog 179
Dialogs 123
Digitized Relay Element Data Dialog 163
Disconnected 101
Distribution Transformer 41
Dialog 127
Docking Window 23, 78, 92, 96

- E -

Edit 73, 110
Edit Menu 110
Edit Property Dialog 189
Elbow 47
Electrical Layers 35, 77
Definition 20
Electrical Layers Properties Dialog 260

Electrical Layers 35, 77
 Layers Docking Window 120
 Element Dialogs 125
 Elements 10, 39, 75, 83, 95
 Energy 52
 Equation Based Relay Element Data Dialog 164
 Errors 101
 Essex Energy 18
 Exit 108

- F -

Fault Analysis 57
 File Menu 108
 Find Conductor Dialog 154
 Find Node
 Dialog 180
 Find Transformer Dialog 157
 Finding Nodes 95
 Fuse 43

- G -

Generator 42
 Getting Started 14

- I -

Impedance Conversion 45
 Import Data 108
 Import References
 Dialog 243
 Induction 42
 Introduction 9
 Inverting Selection 61

- J -

Jumper 47

- L -

Label Styles
 Dialog 223
 Labels 85, 89
 Latitude 258

Layer Docking Window 120
 Layer Properties 78
 Layer Visibility 35, 78
 Layer Zoom 78
 Layers 10, 20, 77, 82
 Active 37
 Background 36
 Connecting 83
 Electrical 35
 Visibility 38
 Legend 23, 85
 Licensing 13
 Lines 10, 29, 71, 72, 89
 Dialog 266
 Properties 73
 Quick Reference 20
 Styles 221
 Load 41
 Load Category 49
 Load Category Component Data Dialog 173
 Reference Data Dialog 170
 Load Component 49
 Reference Data Dialog 168
 Load Curve Data Dialog 171
 Load Flow 53
 Annual 52
 Load Import 225
 Load Modeling 50
 Load Scaling
 Dialog 230
 Load Set Dialog 131
 Dialog 128
 Import 225
 Longitude 258
 Loops 101

- M -

Manual 9
 Map 23
 Map View 60
 Maps 36
 Menus 107
 Motor 42
 Motor Generator Dialog 133
 Motor Starting 54
 Move Between Layers 82, 179
 Moving Nodes and Lines 72

- N -

New
 System 108
 Nodes 10, 28, 70, 72, 89, 95
 Node Dialog 265
 Node Styles 219
 Properties 73
 Quick Reference 20

- O -

Open System 108
 Optimization 54
 Capacitor 114
 Capacitors 52
 Options 254
 Overall Selection 61
 Overview 10

- P -

Page Setup 108
 Panning 60
 Planning 10
 Power Transformer 43, 83
 Dialog 135
 Print
 Preview 108
 Protection 43
 Dialog 140
 Reference Data 50
 Reference Data Dialog 158

- Q -

Query Property
 Dialog 191
 Quick Reference 20

- R -

Reactor 44
 Dialog 145
 Recent Files 108

Recloser 43
 Redo 85
 Edit Menu 110
 Whats New in Dess 6 17
 Reducing Losses 10
 Reference Data 47, 96, 98
 Reference Data Dialogs 150
 Reference Data Docking Window 121
 Reference Guide 107
 Region 44
 Registering DESS 13
 Regulator 44
 Dialog 145
 Relay 43
 Relay Setting
 Dialog 143
 Reports 17, 57
 Results 57, 58

- S -

Save Result
 Dialog 252
 Result 108
 System 108
 System As 108
 Season Type 49
 Reference Data Dialog 167
 Select Docking Window 122
 Selectable Layers 78
 Selecting
 Selection Tools 61
 Short Circuit 57
 Show Loops
 Dialog 193
 Source 44
 Dialog 147
 Impedances 45
 Status Bar 23
 Styles 32, 89
 Supply 44
 Switch 47
 Dialog 149
 Switches 95
 Switching 47
 Synchronous 42
 System 10, 14
 System Properties 110

System Properties 110

Basics 26

Data 28

Properties Dialog 255

Start Modeling 27

Stop Modeling 27

Understanding 10

Window Components 23

- Z -

Zoom Layering 38

Zooming 60

- T -

Themes 32, 89

Time Current Curve Point Dialog 161

Toolbar 23

Tools

Dialogs 177

Tooltips 85

Tracing

Downstream 67

Upstream 67

Transformer 20

Distribution 41

Power 43

Reference Data 48

Reference Data Dialog 155

Substation 43

Transparency 38

- U -

Undo 85

Undo in the Menu 110

Whats New in DESS 6 17

User's Guide 26

Using DESS 10

- V -

Vaults

Switching 47

View 258

Voltage Level 35

Voltage Regulator 44

- W -

Week Type 48

Reference Data Dialog 166